# - AUTODOC CLUB

How to change fuel filter on VAUXHALL Agila Mk II (B) (H08) – replacement guide



#### SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

### (i) Important!

This replacement procedure can be used for: VAUXHALL Agila Mk II (B) (H08) 1.3 CDTI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Astra H Caravan (A04) 1.3 CDTI (L35)

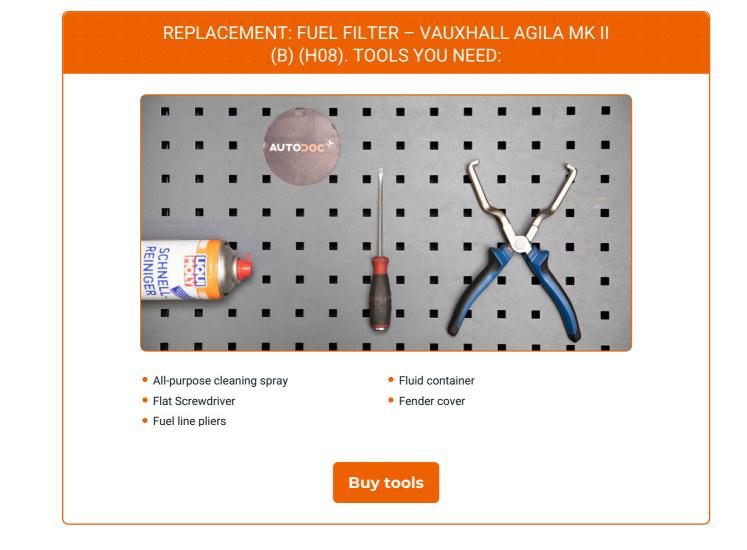

A

O

### + AUTODOC CLUB





- Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.
- Use only new O-rings during installation.
- All work should be done with the engine stopped.

### CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Open the hood.

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3

Detach the fuel pressure sensor connector. Use a flat screwdriver.



4

Prepare a container for fluids.







Disconnect the pipe from the fuel filter. Use fuel line pliers.



# Replacement: fuel filter – VAUXHALL Agila Mk II (B) (H08). AUTODOC recommends:

• Be careful! Fuel may leak from the filter housing and hoses.



Unscrew the fasteners of the fuel filter housing cover.





Remove the fuel filter cover with the old filter cartridge attached.



8

9

Put the fuel filter cover with the old filter cartridge into a container.

Remove the fuel filter.

### + AUTODOC CLUB





Remove the old sealing ring.



11

Clean the fuel filter housing and the cover. Use all-purpose cleaning spray.



Install the new sealing ring.



13

Install a new fuel filter.



## Replacement: fuel filter – VAUXHALL Agila Mk II (B) (H08). AUTODOC experts recommend:

- Make sure that the fuel filter is positioned correctly. Consider the fuel flow direction mark.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Take care to only use quality filters.



14

Install the fuel filter cover with the filter cartridge attached.



15

Tighten the fasteners of the fuel filter housing cover.



16

Attach the pipe to the fuel filter.



17

Attach the fuel pressure sensor connector.



## Replacement: fuel filter – VAUXHALL Agila Mk II (B) (H08). Professionals recommend:

• Before starting off, switch the ignition on and off several times. This should be done to activate the fuel pump to make it pump fuel through the fuel system.





VIEW MORE TUTORIALS



### AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



#### A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **FUEL FILTER: A WIDE SELECTION**

### (i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.