- AUTODOC CLUB

How to change fuel filter on VAUXHALL Astra Mk IV (G) CC (T98) – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle


(i) Important!

This replacement procedure can be used for:

VAUXHALL Astra Mk IV (G) CC (T98) 1.4 16V, VAUXHALL Astra Mk IV (G) CC (T98) 1.6, VAUXHALL Astra Mk IV (G) CC (T98) 1.6 16V, VAUXHALL Astra Mk IV (G) CC (T98) 1.8 16V, VAUXHALL Astra Mk IV (G) CC (T98) 2.0 16V, VAUXHALL Astra Mk IV (G) CC (T98) 2.2 16V, VAUXHALL Astra Mk IV (G) CC (T98) 2.0 SRI Turbo, VAUXHALL Astra Mk IV (G) CC (T98) 1.6 Dualfuel, VAUXHALL Astra Mk IV (G) CC (T98) 2.0, VAUXHALL Astra Mk IV (G) CC (T98) 1.6 Dualfuel, VAUXHALL Astra Mk IV (G) CC (T98) 2.0, VAUXHALL Astra Mk IV (G) CC (T98) 1.6 Dualfuel (F08, F48), VAUXHALL Astra Mk IV (G) CC (T98) 1.8 16V Dualfuel (F08, F48), VAUXHALL Astra Mk IV (G) CC (T98) 1.8 16V Dualfuel (F08, F48)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Astra G CC (T98) 1.2 16V (F08, F48)

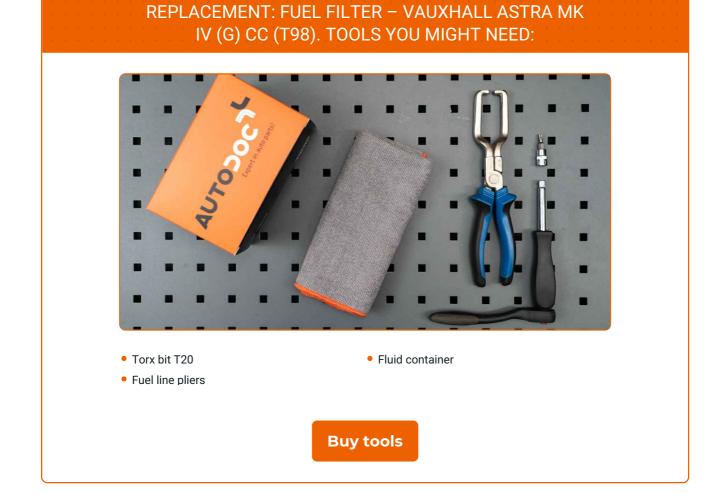

4

Ø



Replacement: fuel filter – VAUXHALL Astra Mk IV (G) CC (T98). Tip from AUTODOC:

• Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.

• All work should be done with the engine stopped.

REPLACEMENT: FUEL FILTER – VAUXHALL ASTRA MK IV (G) CC (T98). TAKE THE FOLLOWING STEPS:



Open the fuel door. Unscrew the fuel filler cap.



Lift the car using a jack or place it over an inspection pit.



Prepare a container for fluids.





Squeeze the clips and detach the fuel supply lines from the fuel filter housing. Use fuel line pliers.





Replacement: fuel filter – VAUXHALL Astra Mk IV (G) CC (T98). AUTODOC recommends:

• Be careful! Fuel may leak from the filter housing and hoses.



Loosen the fuel filter mounting. Use Torx T20.



6

Remove the fuel filter. Put the old filter cartridge in the container.



7

Remove the retainers of the fasteners of the fuel filter tubes.



8

Install the retainers of the fasteners of the fuel filter tubes.







Install a new fuel filter.



10

Tighten the fuel filter fasteners. Use Torx T20.



Replacement: fuel filter - VAUXHALL Astra Mk IV (G) CC (T98). Tip:

- Remember, it is important not to mix up the input and output of the filter. Arrows on the filter indicate the direction of fuel flow.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Take care to only use quality filters.



Connect the fuel lines to the fuel filter and lock the fastening clips.







Lower the car.

13

Tighten the fuel filler cap. Close the fuel door.



• To protect the environment from pollution, be sure to dispose of the used filters at special collection points.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

FUEL FILTER: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.