



How to change spark
plugs on **VAUXHALL**
Astra Mk IV (G) Coupe
(T98) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

VAUXHALL Astra Mk IV (G) Coupe (T98) 1.8 16V, VAUXHALL Astra Mk IV (G) Coupe (T98) 2.0 16V Turbo

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Meriva A (X03) 1.6 16V (E75)

REPLACEMENT: SPARK PLUGS – VAUXHALL ASTRA
MK IV (G) COUPE (T98). TOOLS YOU NEED:



- Electronic spray
- High-temperature anti-seize lubricant
- Torque wrench
- Spark plug socket # 16
- Torx bit T20
- Torx bit T30
- Ratchet wrench
- Flat Screwdriver
- Crow bar
- Microfibre towel
- Fender cover

Buy tools

Replacement: spark plugs – VAUXHALL Astra Mk IV (G) Coupe (T98).
AUTODOC recommends:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – VAUXHALL ASTRA MK IV (G) COUPE (T98). USE THE FOLLOWING PROCEDURE:

1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

 
3 Unscrew the fasteners of the air distribution housing assembly. Use Torx T20.



4 Remove the air distribution housing assembly.



5 Unscrew the engine cover fastener. Use Torx T30. Use a ratchet wrench.



6 Unscrew the oil filler plug.



7 Remove the oil filler cap.

8 Cover the oil filler opening with a microfibre towel to prevent dirt and foreign objects from getting into the system.



9 Remove the engine cover.



AUTODOC recommends:

- Replacement: spark plugs – VAUXHALL Astra Mk IV (G) Coupe (T98). Do not use excessive force when removing the part as this may damage it.

10

Remove the microfibre towel from the oil filler opening.




11

Install the oil filler cap.




12

Clean the ignition coil bolts.

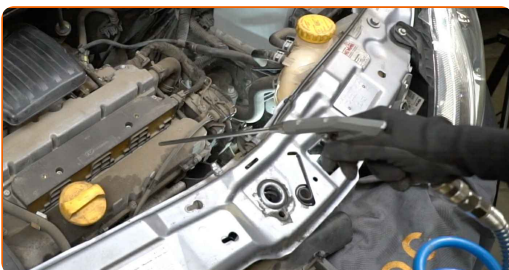


13

Detach the connector from the ignition coil. Use a flat screwdriver.

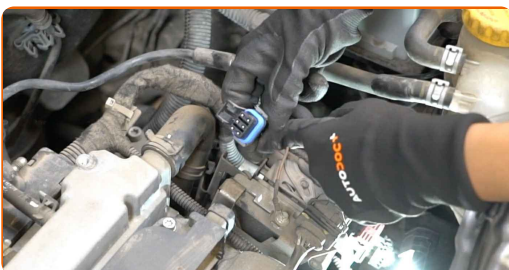

 
14 Unscrew the ignition coil bolts. Use Torx T30. Use a ratchet wrench.




15 Pry up the ignition coil. Use a crowbar.



 
16 Take out the ignition coil from the spark plug well.



 
17 Clean dirt, dust and debris from inside the spark plug wells.



 
18 Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.




19 Take out the spark plugs.

 

 
20 Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.



 21 Install the new spark plugs into their mounting seats.



 22 Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 24 nm torque.




Replacement: spark plugs – VAUXHALL Astra Mk IV (G) Coupe (T98).
Professionals recommend:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

23 Install the ignition coil to the spark plug well. Make sure you hear a click indicating that it is locked in place.



24 Tighten the ignition coil bolts. Use Torx T30. Use a torque wrench. Tighten it to 7 nm torque.

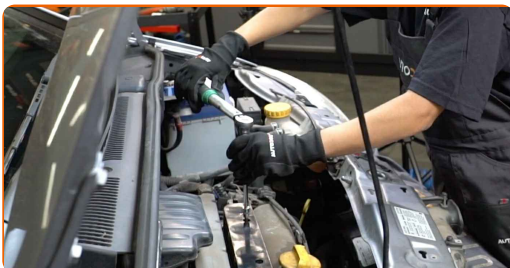

25 Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



26

Plug in the ignition coil connector. Make sure you hear a click indicating that it is locked in place.



27

Remove the oil filler cap.

28

Cover the oil filler opening with a microfibre towel to prevent dirt and foreign objects from getting into the system.

29

 
Install the engine cover and secure it.



**Replacement: spark plugs – VAUXHALL Astra Mk IV (G) Coupe (T98).
AUTODOC experts recommend:**


- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Replacement: spark plugs – VAUXHALL Astra Mk IV (G) Coupe (T98). To avoid damaging the part during installation, do not use excessive force.

30 Screw in the engine cover fasteners. Use Torx T30. Use a ratchet wrench.



31 Remove the microfibre towel from the oil filler opening.

32 Install the oil filler cap.

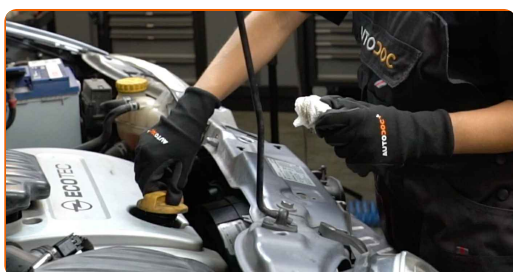

33 Tighten the oil filler cap.

34 Reinstall the air distribution housing assembly.



35 Screw in the fasteners of the air distribution housing assembly. Use Torx T20.



36 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

37 Shut off the engine.

38 Remove the fender protection cover.

39 Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
 **Google Play**

Download on the
 **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SPARK PLUGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.