



How to change front  
brake discs on  
**VAUXHALL Astra Mk V  
(H) Estate (A04)** –  
replacement guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### **Important!**


This replacement procedure can be used for:

VAUXHALL Astra Mk V (H) Estate (A04) 1.4, VAUXHALL Astra Mk V (H) Estate (A04) 1.6, VAUXHALL Astra Mk V (H) Estate (A04) 1.8, VAUXHALL Astra Mk V (H) Estate (A04) 1.3 CDTi, VAUXHALL Astra Mk V (H) Estate (A04) 1.7 CDTi, VAUXHALL Astra Mk V (H) Estate (A04) 1.7 CDTI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Astra H Caravan (A04) 1.3 CDTI (L35)

**REPLACEMENT: BRAKE DISCS – VAUXHALL ASTRA MK V (H) ESTATE (A04). LIST OF THE TOOLS YOU'LL NEED:**

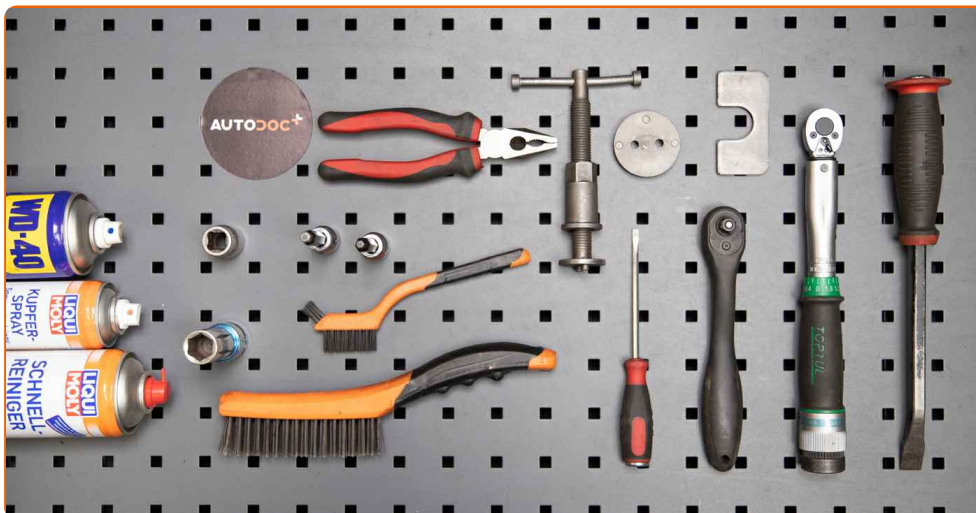

- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 18
- HEX bit No.H5.
- HEX bit No.H7.
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Flat Screwdriver
- Crow bar
- Pliers
- Wheel chock

**Buy tools**


**Replacement: brake discs – VAUXHALL Astra Mk V (H) Estate (A04).  
AUTODOC recommends:**

- Replace the brake disks on the car VAUXHALL Astra Mk V (H) Estate (A04) in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- All work should be done with the engine stopped.


**REPLACEMENT: BRAKE DISCS – VAUXHALL ASTRA MK V (H) ESTATE (A04). USE THE FOLLOWING PROCEDURE:**

**1** Open the bonnet. Unscrew the brake fluid reservoir cap.

**2** Secure the wheels with chocks.

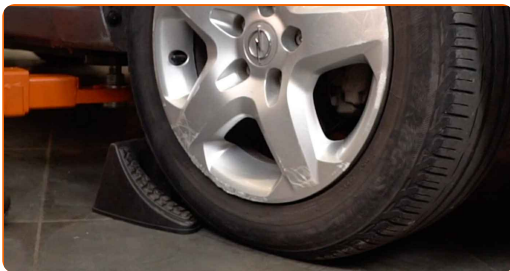

**3** Loosen the wheel mounting bolts. Use wheel impact socket #17.

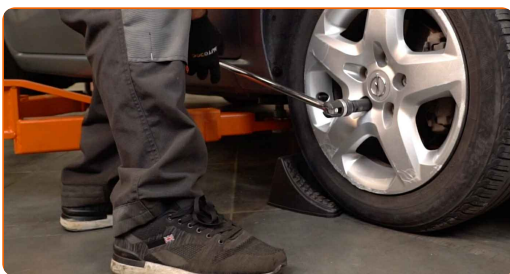

**4** Raise the front of the car and secure on supports.

**5** Unscrew the wheel bolts.



**AUTODOC recommends:**

- Important! Hold the wheel while unscrewing the fastening bolts. VAUXHALL Astra Mk V (H) Estate (A04)

**6** Remove the wheel.



**7** Detach the brake caliper retaining spring. Use a flat screwdriver.



8

Remove the dust boot caps of the brake caliper guide pins. Use a flat screwdriver.



9

Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.

10

Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



11

Spread the brake pads. Use a crowbar.



12

Remove the brake caliper.

 


Replacement: brake discs – VAUXHALL Astra Mk V (H) Estate (A04).  
Professionals recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.


13

Remove the brake pads.



14

Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.

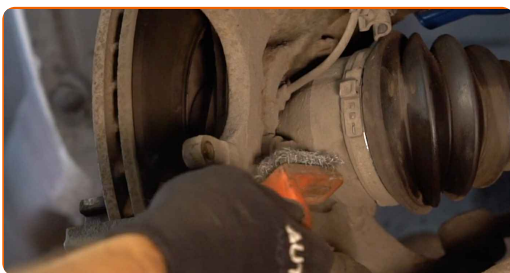




**15** Unscrew the caliper bracket fastening. Use a drive socket #18. Use a ratchet wrench.




**16** Remove the fastening bolts (2 pieces).

**17** Remove the caliper bracket.

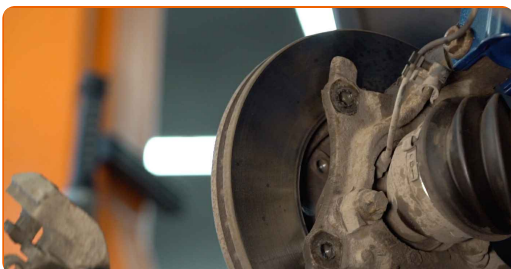

 **18** Clean the brake disc fastener. Use a wire brush. Use WD-40 spray.



**19** Unscrew the brake disc fastening. Use HEX No.H5. Use a ratchet wrench.





20 Remove the brake disc.



21 Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



22 Install the brake disc.



23 Tighten the brake disc fastening. Use HEX No.H5. Use a torque wrench. Tighten it to 7 Nm torque.



24

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



**AUTODOC recommends:**

- Replacement: brake discs – VAUXHALL Astra Mk V (H) Estate (A04). After applying the spray, wait a few minutes.

25

Install the brake caliper bracket.




26

Install the fastening bolts (2 pieces).

27

Tighten the brake caliper bracket. Use a drive socket #18. Use a torque wrench. Tighten it to 100 Nm torque.

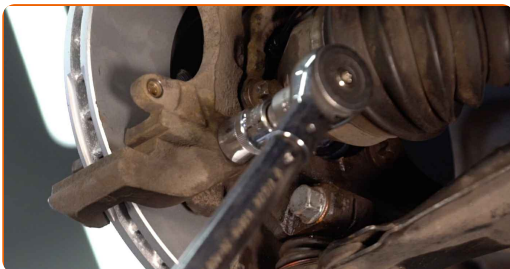

28

Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.

 


Replacement: brake discs – VAUXHALL Astra Mk V (H) Estate (A04). Tip:

- After applying the spray, wait a few minutes.


29

Press in the brake caliper piston. Use brake caliper wind back tool.




30

 Install the brake pads.



31.1

 Install the brake caliper and fix it.



**31.2** Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



**32** Install the dust boot caps of the brake caliper guide pins.



**33** Install the brake caliper retaining spring. Use a flat screwdriver. Use pliers.



**34** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



**35** Clean the brake disk surface. Use a brake cleaner.



**AUTODOC recommends:**

- Replacement: brake discs – VAUXHALL Astra Mk V (H) Estate (A04). After applying the spray, wait a few minutes.

**36**

Install the wheel.




**Replacement: brake discs – VAUXHALL Astra Mk V (H) Estate (A04). Tip from AUTODOC experts:**

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


**37**

Screw in the wheel bolts. Use wheel impact socket #17.

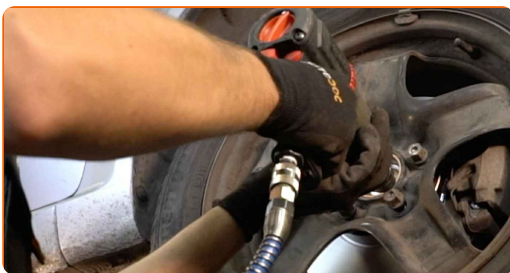

**38**

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 110 nm torque.

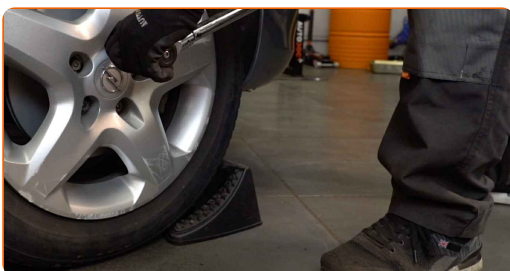

**39**

Remove the jacks and chocks.



**AUTODOC recommends:**

- Important! Replacement: brake discs – VAUXHALL Astra Mk V (H) Estate (A04). Check the brake fluid level in the reservoir and top up if necessary.

**40**

Tighten the brake fluid reservoir cap. Close the hood.

Replacement: brake discs – VAUXHALL Astra Mk V (H) Estate (A04).  
AUTODOC experts recommend:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.

**WELL DONE!** 

**VIEW MORE TUTORIALS**



## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BRAKE DISCS: A WIDE SELECTION**

### **(i) DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.