



How to change front
brake pads on
**VAUXHALL Astra Mk V
(H) Estate (A04)** –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

VAUXHALL Astra Mk V (H) Estate (A04) 1.4, VAUXHALL Astra Mk V (H) Estate (A04) 1.6, VAUXHALL Astra Mk V (H) Estate (A04) 1.8, VAUXHALL Astra Mk V (H) Estate (A04) 2.0 Turbo, VAUXHALL Astra Mk V (H) Estate (A04) 1.3 CDTi, VAUXHALL Astra Mk V (H) Estate (A04) 1.7 CDTi, VAUXHALL Astra Mk V (H) Estate (A04) 1.9 CDTi, VAUXHALL Astra Mk V (H) Estate (A04) 1.7 CDTI, VAUXHALL Astra Mk V (H) Estate (A04) 1.9 CDTi 16V (L35)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Astra H Caravan (A04) 1.3 CDTI (L35)

REPLACEMENT: BRAKE PADS – VAUXHALL ASTRA MK V (H) ESTATE (A04). LIST OF THE TOOLS YOU'LL NEED:

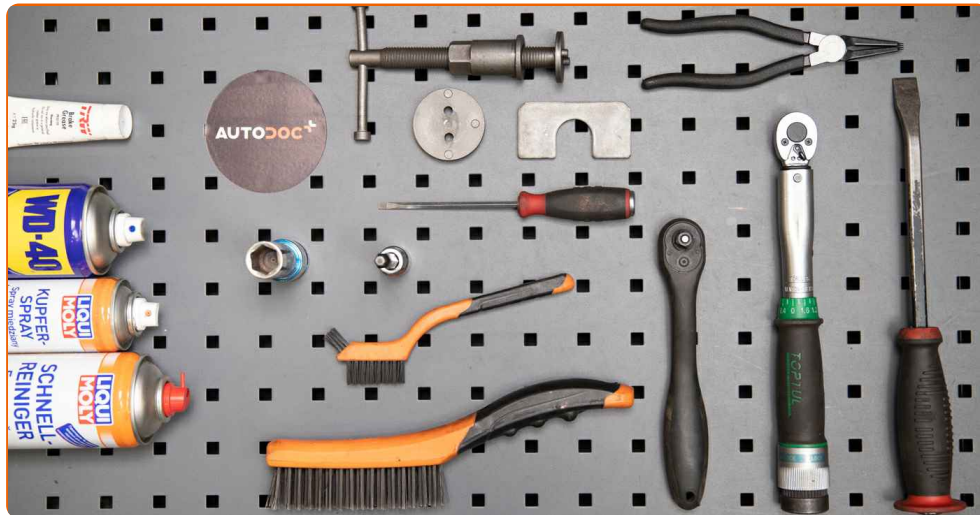

- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Anti-squeal paste
- HEX bit No.H7.
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Flat Screwdriver
- Crow bar
- Pliers
- Wheel chock

Buy tools

Replacement: brake pads – VAUXHALL Astra Mk V (H) Estate (A04).
AUTODOC experts recommend:

- Replace the brake disks on the car VAUXHALL Astra Mk V (H) Estate (A04) in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car – VAUXHALL Astra Mk V (H) Estate (A04) – should be done with the engine switched off.

 
CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.

2 Secure the wheels with chocks.



3 Loosen the wheel mounting bolts. Use wheel impact socket #17.



4 Raise the front of the car and secure on supports.

5 Unscrew the wheel bolts.



Replacement: brake pads – VAUXHALL Astra Mk V (H) Estate (A04). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

6 Remove the wheel.




7 Detach the brake caliper retaining spring. Use a flat screwdriver.



8

Remove the dust boot caps of the brake caliper guide pins. Use a flat screwdriver.

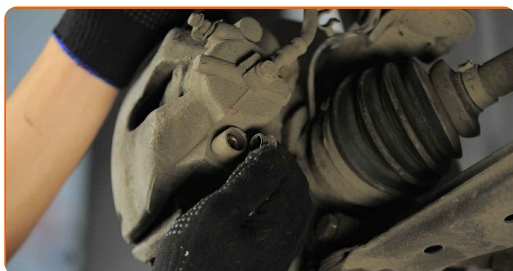


9

Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.

10

Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.

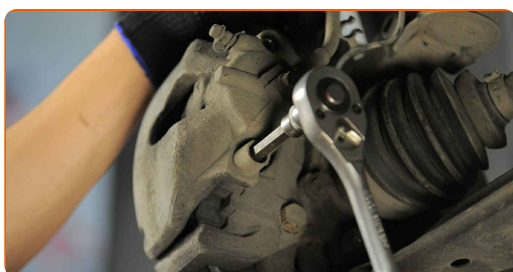

11

Spread the brake pads. Use a crowbar.



12

Remove the brake caliper.

 


Replacement: brake pads – VAUXHALL Astra Mk V (H) Estate (A04).
AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

13

Remove the brake pads.



14

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake pads – VAUXHALL Astra Mk V (H) Estate (A04). After applying the spray, wait a few minutes.

15

Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.

 


Replacement: brake pads – VAUXHALL Astra Mk V (H) Estate (A04). Tip:

- After applying the spray, wait a few minutes.


16

Press in the brake caliper piston. Use brake caliper wind back tool.



17

 Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.



AUTODOC recommends:

- Make sure the disc surface is clean before installing the pads.

18

Install new brake pads.



Replacement: brake pads – VAUXHALL Astra Mk V (H) Estate (A04). Tip from AUTODOC:

- Make sure the pads are installed with linings facing the disc.

19.1

Install the brake caliper and fix it.



19.2

Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



20 Install the dust boot caps of the brake caliper guide pins.



21 Install the brake caliper retaining spring. Use a flat screwdriver. Use pliers.



22 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



23 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake pads – VAUXHALL Astra Mk V (H) Estate (A04). After applying the spray, wait a few minutes.

24

Install the wheel.

 


Replacement: brake pads – VAUXHALL Astra Mk V (H) Estate (A04). Tip:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


25

Screw in the wheel bolts. Use wheel impact socket #17.



26

 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 110 nm torque.



27

Remove the jacks and chocks.



Replacement: brake pads – VAUXHALL Astra Mk V (H) Estate (A04). Tip from AUTODOC experts:

- Check the brake fluid level in the expansion tank and refill if necessary.

28

Tighten the brake fluid reservoir cap. Close the hood.

AUTODOC recommends:

- VAUXHALL Astra Mk V (H) Estate (A04) – Press the brake pedal several times with the engine shut down until you feel the resistance built up.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
 **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE PADS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.