
- AUTODOC CLUB

How to change manual gearbox oil on VAUXHALL Corsa Mk I (B) Hatchback (S93) – replacement guide



SIMILAR VIDEO TUTORIAL

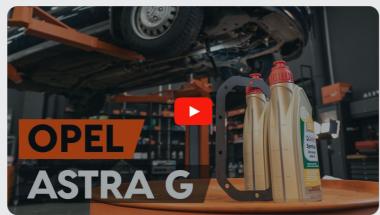

This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: VAUXHALL Corsa Mk I (B) Hatchback (S93) 1.0 i 12V, VAUXHALL Corsa Mk I (B) Hatchback (S93) 1.2 i, VAUXHALL Corsa Mk I (B) Hatchback (S93) 1.4 i, VAUXHALL Corsa Mk I (B) Hatchback (S93) 1.4 i S, VAUXHALL Corsa Mk I (B) Hatchback (S93) 1.4 i 16V, VAUXHALL Corsa Mk I (B) Hatchback (S93) 1.6 i 16V, VAUXHALL Corsa Mk I (B) Hatchback (S93) 1.6 GSI 16V, VAUXHALL Corsa Mk I (B) Hatchback (S93) 1.7 D, VAUXHALL Corsa Mk I (B) Hatchback (S93) 1.2 i 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Astra G CC (T98) 1.2 16V (F08, F48)







Replacement: manual gearbox oil – VAUXHALL Corsa Mk I (B) Hatchback (S93). AUTODOC experts recommend:

• All work should be done with the engine stopped.

REPLACEMENT: MANUAL GEARBOX OIL – VAUXHALL CORSA MK I (B) HATCHBACK (S93). TAKE THE FOLLOWING STEPS:

Open the hood.



1

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Lift the car using a jack or place it over an inspection pit.



Support the engine skid plate. Use a hydraulic transmission jack.





Undo the fasteners of the oil pan lower cover. Use a drive socket #12.





Replacement: manual gearbox oil – VAUXHALL Corsa Mk I (B) Hatchback (S93). AUTODOC recommends:

• To avoid injury, hold the engine skid plate cautiously tight when unscrewing the fasteners and when lowering the hydraulic transmission jack.

6

Remove the hydraulic transmission jack. Remove the oil pan cover.



AUTODOC recommends:

- Replacement: manual gearbox oil VAUXHALL Corsa Mk I (B) Hatchback (S93). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.
- 7

Clean the transmission fluid pan. Use a wire brush. Use all-purpose cleaning spray.






Prepare a waste oil container with at least 2 l capacity.



9

Unscrew the fasteners of the transmission fluid pan. Use a drive socket #11. Use a ratchet wrench.

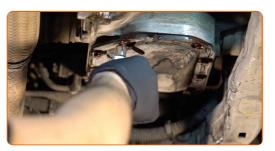

10

Remove the transmission fluid pan.



Replacement: manual gearbox oil – VAUXHALL Corsa Mk I (B) Hatchback (S93). Tip:

 When removing the transmission fluid pan, incline it so that the fluid only comes out from one side of it.

11

Drain the used oil.





AUTODOC recommends:

• Wait until the fluid has completely run out of the pan.

12

Clean the mounting seat of the transmission fluid pan. Use all-purpose cleaning spray.



13

Remove the transmission fluid pan gasket. Use a seal scraper.



14

Clean the mounting seat of the transmission fluid pan gasket. Use a wire brush. Use cleaner&thinner.



15

Apply sealant to the mounting seat of the transmission fluid pan gasket. Install the new transmission fluid pan gasket.







Treat the mounting seat of the transmission fluid pan. Use cleaner&thinner.



Replacement: manual gearbox oil – VAUXHALL Corsa Mk I (B) Hatchback (S93). Tip from AUTODOC:

• Prevent fluid from getting on the mounting seat of the transmission fluid pan.



Install and fasten the transmission fluid pan.



18

Tighten the fastening bolts of the transmission fluid pan in a criss-cross pattern. Use a drive socket #11. Use a torque wrench. Tighten it to 20 Nm torque.





Remove the retainers and move aside the coolant pipe.



20

Clean the gearbox breather. Use all-purpose cleaning spray.



21

Unscrew the gearbox breather. Use a drive socket #16. Use a ratchet wrench.



22

Insert the funnel. Pour new transmission fluid in the gearbox through the breather hole. Required amount of oil: 1.6 L.



Replacement: manual gearbox oil – VAUXHALL Corsa Mk I (B) Hatchback (S93). Tip from AUTODOC experts:

• Use the oil recommended by the manufacturer.



Screw the gearbox breather. Use a drive socket #16. Use a torque wrench. Tighten it to 28 nm torque.



24

Return the coolant pipe to its initial position and fasten it.



25

Support the engine skid plate. Use a hydraulic transmission jack.



26

Reinstall the oil pan lower cover.



27

Remove the hydraulic transmission jack.





Tighten the fasteners of the oil pan lower cover. Use a drive socket #12. Use a torque wrench. Tighten it to 30 nm torque.



29Lower the car.30Remove the fe

Remove the fender protection cover.




Close the hood.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

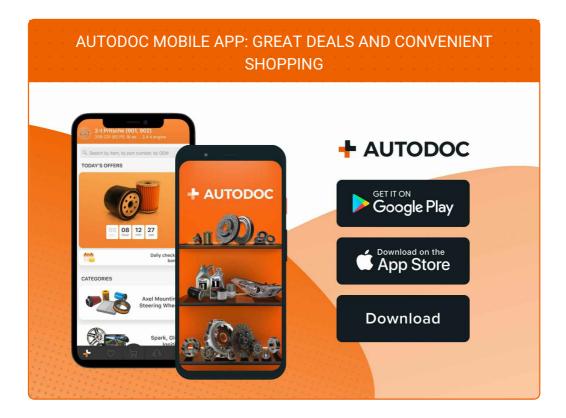

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

MANUAL GEARBOX OIL: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.