



How to change front coil  
springs on **VW Beetle  
Hatchback (5C1, 5C2)** –  
replacement guide

### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

#### **Important!**

This replacement procedure can be used for:

VW Beetle Hatchback (5C1, 5C2) 2.0 TSI, VW Beetle Hatchback (5C1, 5C2) 1.4 TSI,  
 VW Beetle Hatchback (5C1, 5C2) 1.6 TDI, VW Beetle Hatchback (5C1, 5C2) 2.0 TDI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Golf V Hatchback (1K1) 1.6

REPLACEMENT: COIL SPRINGS – VW BEETLE HATCHBACK (5C1, 5C2). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #17
- Drive socket # 13
- Drive socket # 16
- Drive socket # 18
- Drive socket # 21
- Drive socket # 27
- HEX bit No.H6.
- XZN socket bit # 12
- Wheel impact socket #17
- Shock absorber socket
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

**Buy tools**

Replacement: coil springs – VW Beetle Hatchback (5C1, 5C2). AUTODOC recommends:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- All work should be done with the engine stopped.

## REPLACEMENT: COIL SPRINGS – VW BEETLE HATCHBACK (5C1, 5C2). RECOMMENDED SEQUENCE OF STEPS:

 
**1** Open the bonnet.

**2** Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

**3** Remove the cowl grille seal.



**4** Raise up and remove the cowl grille.



5

Clean the fasteners of the shock strut upper mount. Use WD-40 spray.



 
6

Loosen the upper fastener of the shock strut mount. Use a drive socket #13. Use a ratchet wrench.




7

Secure the wheels with chocks.

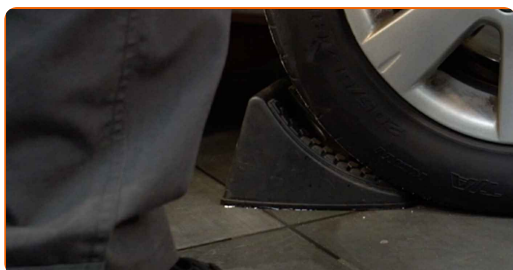

8

 Loosen the wheel hub fastener. Use a drive socket #27. Use a tap wrench.

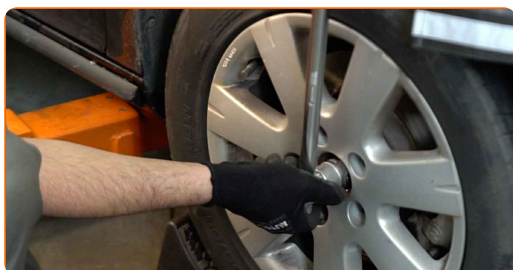

**9** Loosen the wheel mounting bolts. Use wheel impact socket #17.



**10** Raise the front of the car and secure on supports.

**11** Unscrew the wheel bolts.


**AUTODOC recommends:**

- Important! Hold the wheel while unscrewing the fastening bolts. VW Beetle Hatchback (5C1, 5C2)


**12** Remove the wheel.



**13** Disconnect the wiring and the brake hose from the bracket on the shock strut. Use a crowbar.

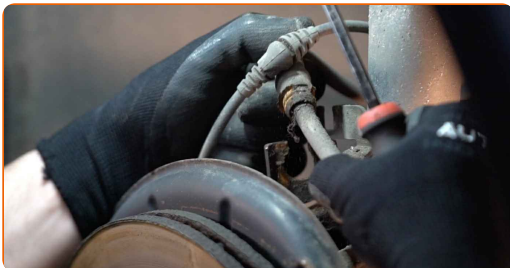

 **14** Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

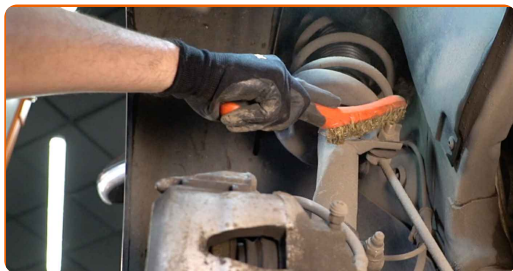


**15** Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.


**16** Unscrew the nut and remove the stabilizer rod from the shock strut. Use a drive socket #18. Use a ratchet wrench.



 **17** Remove the stabilizer rod.

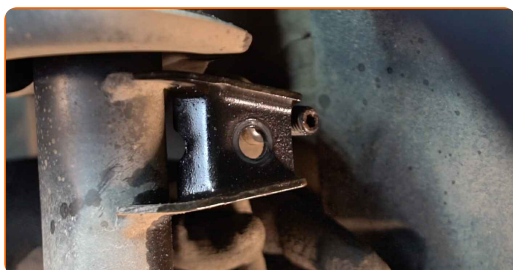

 
**18** Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a drive socket #18. Use XZN #12. Use a ratchet wrench. Use a tap wrench.

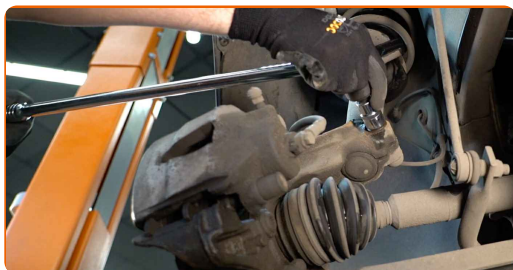

**19** Remove the fastening bolt.



 
**20** Clean all joints of the arm. Use a wire brush. Use WD-40 spray.



**Replacement: coil springs – VW Beetle Hatchback (5C1, 5C2). Tip:**

- After applying the spray, wait a few minutes.
- Wear protective goggles.

 
**21** Unscrew the fastener connecting the ball joint to the suspension control arm. Use a drive socket #16. Use a tap wrench.






22

 Disconnect the spherical joint from the arm.

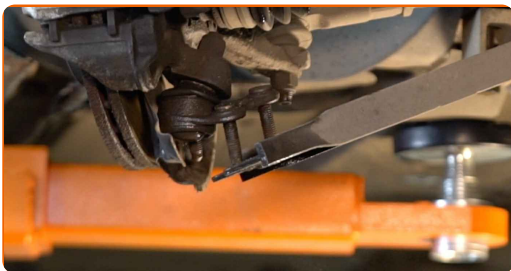


23

 Unscrew the fastener connecting the drive shaft to the wheel hub. Use a drive socket #27.

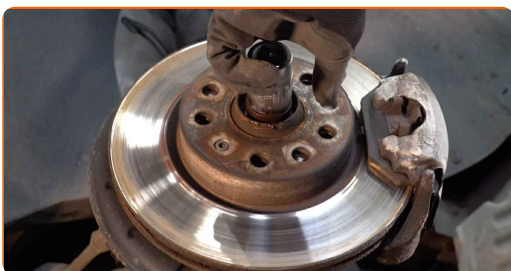


24

 Remove the fastening bolt.

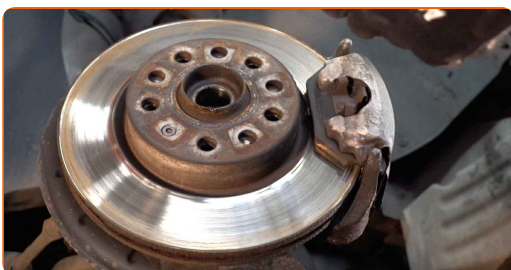

25

 Remove the drive shaft.

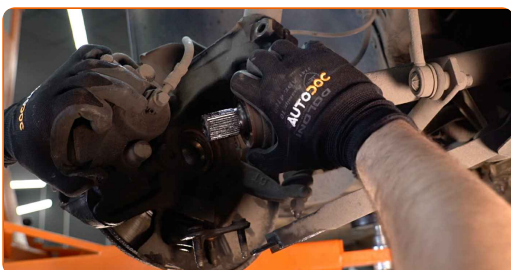

26

Prop up the steering knuckle. Use a hydraulic transmission jack.



**27**

Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



 
**28**

Release the lower fastener connecting the shock strut to the steering knuckle. Use a special drive socket to remove the shock absorber. Use a ratchet wrench.




**29**

Disconnect the steering knuckle from the shock absorber strut.

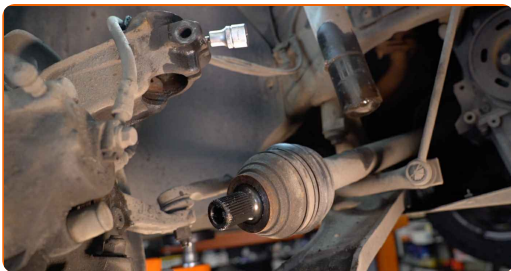

**30**

 Unscrew the top fastening of the shock strut mount.

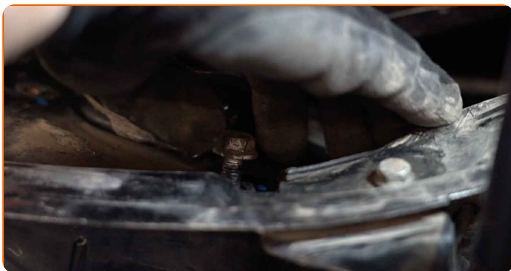

Replacement: coil springs – VW Beetle Hatchback (5C1, 5C2). Tip from AUTODOC experts:

- To avoid injuries, hold the shock strut when undoing the fastening bolts.


**31**

 Remove the suspension strut.



**32**

Set the shock absorber strut on the spring compressor tool.

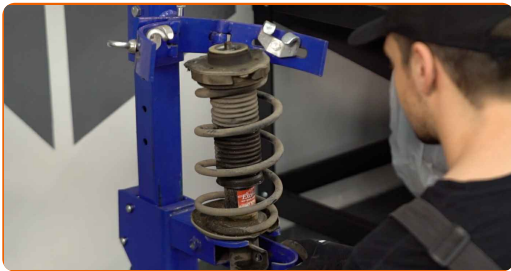

Replacement: coil springs – VW Beetle Hatchback (5C1, 5C2). AUTODOC experts recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

**33**

Compress the spring.



 
**34** Treat the shock strut rod. Use a wire brush. Use WD-40 spray.



**35** Remove the strut piston rod nut. Use HEX No.H6. Use a drive socket #21. Use a ratchet wrench.




**36** Remove the top strut mount.

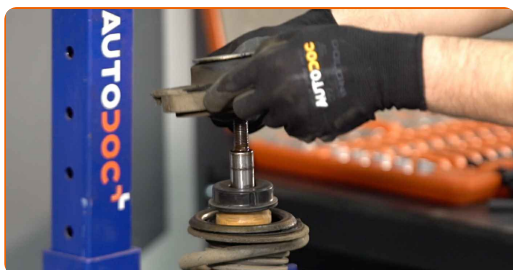

**37** Release the coil spring.



 **38** Remove the shock absorber dust cap and the bump stop.

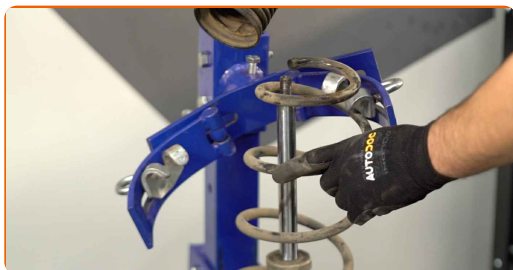

**AUTODOC recommends:**

- Replacement: coil springs – VW Beetle Hatchback (5C1, 5C2). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

 
**39**

Remove the spring.



**40**

Install the spring on the shock absorber.




**41**

Install the boot and a bump stop onto the shock absorber.



**42**


Compress the spring.

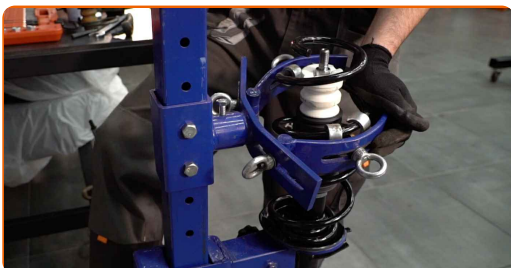

**43** Install the upper strut mount and the strut mount bearing.



 
**44** Tighten the shock strut piston rod nut. Use HEX No.H6. Use a drive socket #21. Use a torque wrench. Tighten it to 60 Nm torque.



Replacement: coil springs – VW Beetle Hatchback (5C1, 5C2). Professionals recommend:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

 **45** Decompress the spring.




**46** Remove the assembled shock strut.



**47** Install the shock strut into the wheel arch.



 
**48** Screw the top fastening of the shock strut mount. Do not tighten it.




**AUTODOC recommends:**

- Important! Hold the suspension strut while screwing in the fastening bolts. VW Beetle Hatchback (5C1, 5C2)

 **49** Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.



 
**50** Fix the shock absorber strut on the steering knuckle.



**51** Install the fastening bolt.



 **52** Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a drive socket #18. Use XZN #12. Use a ratchet wrench.



**53** Remove the support from under the steering knuckle.

Replacement: coil springs – VW Beetle Hatchback (5C1, 5C2). AUTODOC recommends:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.



 
54

Clean the splines of the drive shaft CV joint. Use a wire brush. Use WD-40 spray.



55

Mount the drive shaft into the wheel hub.




56

Attach the ball joint to the control arm.




57

 Tighten the ball joint fastener. Use a drive socket #16. Use a torque wrench. Tighten it to 60 nm torque.



 
- 58** Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.+90°



**AUTODOC recommends:**

- Important! Be sure to use new fasteners.

 
- 59** Install the transverse stabilizer link.




- 60** Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #18. Use a combination spanner #17. Use a torque wrench. Tighten it to 60 Nm torque.



 
**61** Fasten the brake hose on the strut. Connect the fastener of the ABS sensor cable to the shock absorber strut.



 
**62** Install and tighten the drive shaft bolt. Use a drive socket #27.



 **63** Treat the shock strut fasteners. Treat all joints of the arm. Use copper grease.



 **64** Clean the brake disk surface. Use a wire brush.



**65** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

66

Clean the brake disk surface. Use a brake cleaner.




**AUTODOC recommends:**

 - Replacement: coil springs – VW Beetle Hatchback (5C1, 5C2). After applying the spray, wait a few minutes.

67

Install the wheel.




Replacement: coil springs – VW Beetle Hatchback (5C1, 5C2). Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

68

 Screw in the wheel bolts. Use wheel impact socket #17.



- 69 Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #13. Use a torque wrench. Tighten it to 15 Nm torque. +90°




**AUTODOC recommends:**

- Important! Be sure to use new fasteners.


- 70 Treat the shock strut fasteners. Use copper grease.



- 71 Install and secure the cowl grille.

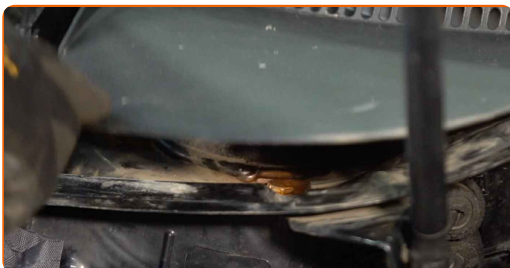


- 72 Install the cowl grille seal.

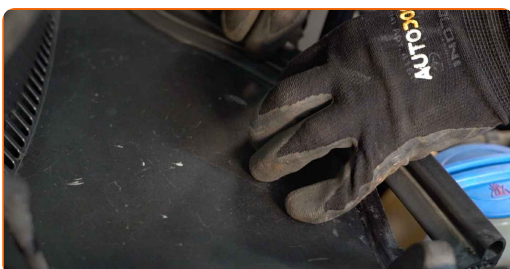

**73** Lower the car.


**74** Tighten the bolt connecting the drive shaft to the wheel hub. Use a drive socket #27. Use a torque wrench. Tighten it to 200 Nm torque. +180°

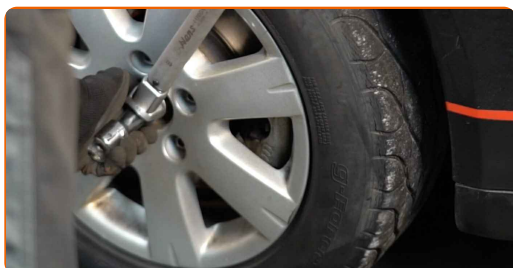


**AUTODOC recommends:**

- Important! Be sure to use new fasteners.

**75** Tighten the wheel bolts using a criss-cross pattern. Use a torque wrench. Tighten it to 120 Nm torque.

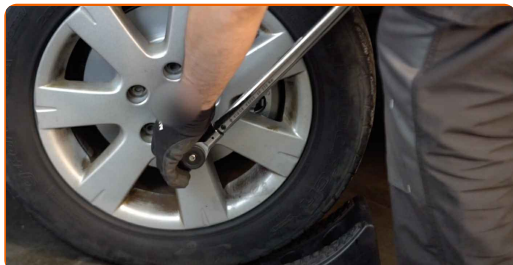

**76** Remove the jacks and chocks.

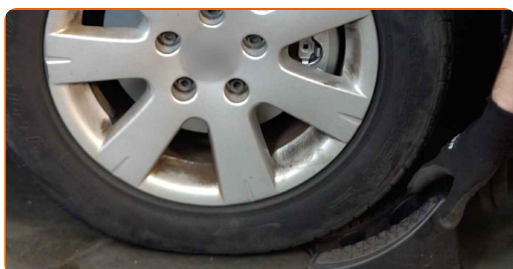

**77** Remove the fender protection cover.

78

Close the hood.

**WELL DONE!** 

**VIEW MORE TUTORIALS**

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**COIL SPRINGS: A WIDE SELECTION**

### **i DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.