- AUTODOC CLUB

How to change front lower arm on **VW Golf VI Convertible (517)** – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: VW Golf VI Convertible (517) 1.2 TSI, VW Golf VI Convertible (517) 1.4 TSI, VW Golf VI Convertible (517) 2.0 GTI, VW Golf VI Convertible (517) 1.6 TDI, VW Golf VI Convertible (517) 2.0 TDI, VW Golf VI Convertible (517) 2.0 R

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW GOLF VI (5K1) 2.0 GTi



- Drive socket # 18
- Wheel impact socket #17
- Wheel chock

Buy tools

-

O



Replacement: front lower arm – VW Golf VI Convertible (517). AUTODOC recommends:

• The replacement procedure is identical for the left and right lower control arms.

• All work should be done with the engine stopped.

REPLACEMENT: FRONT LOWER ARM – VW GOLF VI CONVERTIBLE (517). USE THE FOLLOWING PROCEDURE:



Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the front of the car and secure on supports.





Unscrew the wheel bolts.




AUTODOC recommends:

 Important! Hold the wheel while unscrewing the fastening bolts. VW Golf VI Convertible (517)

5

Remove the wheel.

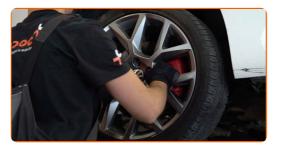

6

Clean all joints of the arm. Use a wire brush. Treat all joints of the arm. Use WD-40 spray.

Replacement: front lower arm – VW Golf VI Convertible (517). Tip:

- After applying the spray, wait a few minutes.
- Wear protective goggles.



Unscrew the fasteners of the ball joint. Use a drive socket #15. Use a tap wrench.



8

Unscrew the rear fastener connecting the control arm to the subframe. Use a drive socket #15. Use a tap wrench.



9

Unscrew the rear fastener connecting the control arm to the car body. Use a drive socket #18. Use a tap wrench.



10

Unscrew the front arm fastener. Use a drive socket #15. Use a drive socket #18. Use a tap wrench.



+ AUTODOC CLUB





Remove the arm. Use a crowbar.



12

Treat the fasteners of the ball joint. Use copper grease.



13

Install a new arm.



Replacement: front lower arm – VW Golf VI Convertible (517). Tip from AUTODOC experts:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.





Install the front fastener of the arm. Do not tighten it.



15

Attach the ball joint to the control arm.



16

Install the fasteners of the ball joint.



17

Screw the fasteners of the ball joint. Use a drive socket #15. Use a ratchet wrench.



18

Screw the rear fastener connecting the control arm to the subframe. Use a drive socket #15. Use a drive socket #18. Use a ratchet wrench.





Screw the rear fastener connecting the control arm to the car body. Use a drive socket #15. Use a drive socket #18. Use a ratchet wrench.



20

Support the arm. Use a hydraulic transmission jack.



21

Screw the front arm fastener. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.+180°



AUTODOC recommends:

• Important! Be sure to use new fasteners.



Tighten the rear fastener connecting the arm to the car body. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.+90°



AUTODOC recommends:

• Important! Be sure to use new fasteners.



Tighten the rear fastener connecting the arm to the body subframe. Use a drive socket #15. Use a torque wrench. Tighten it to 50 Nm torque.+90°



Replacement: front lower arm – VW Golf VI Convertible (517). Professionals recommend:

• Important! Be sure to use new fasteners.



Tighten the fasteners of the ball joint. Use a drive socket #15. Use a torque wrench. Tighten it to 60 nm torque.



25

Remove the support from under the arm.



AUTODOC recommends:

 Replacement: front lower arm – VW Golf VI Convertible (517). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

26

Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.





႐ြံ

27

Install the wheel.



AUTODOC recommends:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.

28

Screw in the wheel bolts. Use wheel impact socket #17.



29

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 nm torque.



30

Remove the jacks and chocks.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

CONTROL ARM: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.