

How to change air filter on VW Golf VI Van (5K1_)

- replacement guide





SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for: VW Golf VI Van (5K1_) 2.0 TDi, VW Golf VI Van (5K1_) 1.4 TSi, VW Golf VI Van (5K1_)

2.0 GTi, VW Golf VI Van (5K1_) 1.6 TDi, VW Golf VI Van (5K1_) 1.6 TDi BlueMotion

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Passat B6 Variant (3C5) 2.0 TDI

CLUB.AUTODOC.CO.UK 1-6





REPLACEMENT: AIR FILTER – VW GOLF VI VAN (5K1_). TOOLS YOU'LL NEED:



- Torx bit T27
- Ratchet wrench

Fender cover

Buy tools

CLUB.AUTODOC.CO.UK 2-6





Replacement: air filter – VW Golf VI Van (5K1_). Tip from AUTODOC experts:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER - PASSAT VARIANT B6. RECOMMENDED SEQUENCE OF STEPS:

- Open the bonnet.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Undo the fastening screws of the air filter cover. Use Torx T27. Use a ratchet wrench.



Slightly raise the cover of the air filter housing.



CLUB.AUTODOC.CO.UK 3-6









Remove the filter element from the filter housing.



6 Clean the air filter cover and housing.



Replacement: air filter – VW Golf VI Van (5K1_). AUTODOC recommends:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.
- Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



CLUB.AUTODOC.CO.UK 4-6



Replacement: air filter – Passat Variant B6. Tip:

- Check out the correct location of the filter element. Do not skew.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.
- Reinstall the air filter cover. Fasten it.



Screw in the fastening screws of the air filter cover. Use Torx T27. Use a ratchet wrench.



- 10 Remove the fender protection cover.
- Close the hood.



VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 5-6





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 6-6