



How to change front ABS  
sensor on **VW PASSAT**  
**Variant (3B5)** –  
replacement guide

### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

#### **i Important!**


This replacement procedure can be used for:

VW PASSAT Variant (3B5) 1.6, VW PASSAT Variant (3B5) 1.8, VW PASSAT Variant (3B5) 1.8 T, VW PASSAT Variant (3B5) 2.3 VR5, VW PASSAT Variant (3B5) 2.8 V6, VW PASSAT Variant (3B5) 1.9 TDI, VW PASSAT Variant (3B5) 2.8 V6 Syncro/4motion, VW PASSAT Variant (3B5) 1.8 Syncro/4motion, VW PASSAT Variant (3B5) 1.9 TDI Syncro/4motion, VW PASSAT Variant (3B5) 2.3 VR5 Syncro/4motion, VW PASSAT Variant (3B5) 2.5 TDI, VW PASSAT Variant (3B5) 2.5 TDI Syncro/4motion, VW PASSAT Variant (3B5) 1.9 TDI 4motion

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A4 Saloon (8D2, B5) 1.6

REPLACEMENT: ABS SENSOR – VW PASSAT VARIANT (3B5). TOOLS YOU MIGHT NEED:

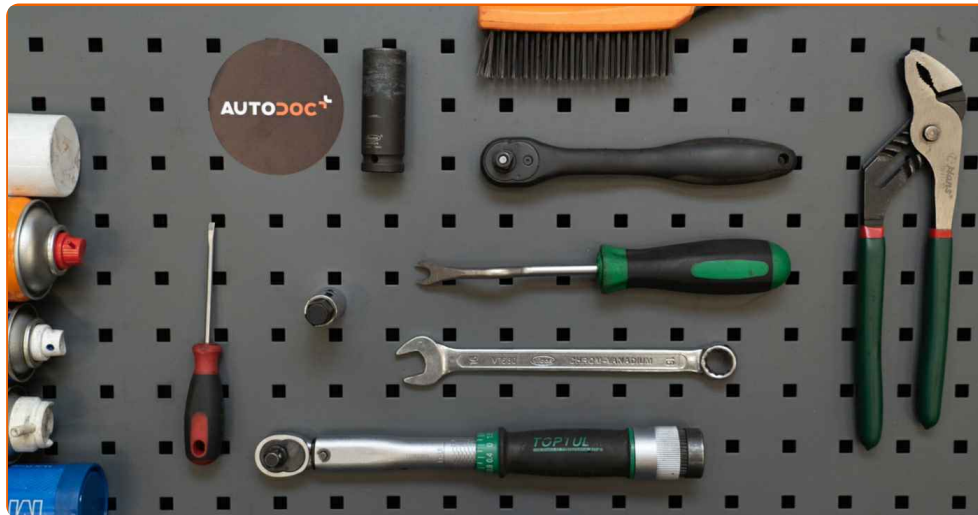

- Wire brush
- WD-40 spray
- Brake cleaner
- Electronic spray
- Multipurpose grease
- Copper grease
- Torque wrench
- HEX bit No.H14
- Wheel impact socket #17
- Ratchet wrench
- Clip removal tool
- Flat screwdriver
- Tap wrench
- Pincers
- Wheel chock

**Buy tools**

 
Replacement: ABS sensor – VW PASSAT Variant (3B5). Tip:

- All work should be done with the engine stopped.

**REPLACEMENT: ABS SENSOR – VW PASSAT VARIANT (3B5). USE THE FOLLOWING PROCEDURE:**

**1** Secure the wheels with chocks.

**2** Loosen the fastener of the driveshaft. Use HEX No.H14. Use a tap wrench.



**3** Loosen the wheel mounting bolts. Use wheel impact socket #17.



**4** Raise the front of the car and secure on supports.

**5** Unscrew the wheel bolts.



**AUTODOC recommends:**

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. VW PASSAT Variant (3B5)

**6**

Remove the wheel.




**7**

Disconnect the ABS sensor wiring. Use a clip removal tool.



**8**

Detach the ABS sensor connector.

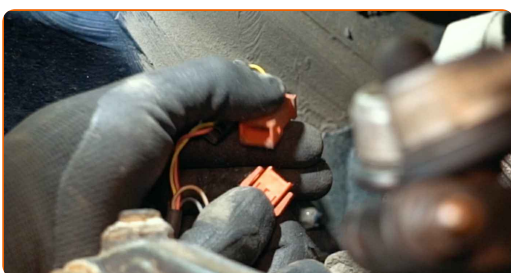

**9**

 
Clean the ABS sensor fastener. Use WD-40 spray.



**10** Disconnect the ABS sensor. Use pincers.



**11** Clean the ABS sensor mounting seat. Use a wire brush. Use WD-40 spray. Use a brake cleaner.




**AUTODOC recommends:**

- Replacement: ABS sensor – VW PASSAT Variant (3B5). After applying the spray, wait a few minutes.

**12** Treat the ABS sensor fastener. Use a multipurpose grease. Use a flat screwdriver.



 **13** Connect the ABS sensor.





**14** Connect the ABS sensor wiring.



**15** Unscrew the fastener connecting the drive shaft to the wheel hub. Use HEX No.H14. Use a ratchet wrench.

 


**16** Remove the fastening bolt.

Replacement: ABS sensor – VW PASSAT Variant (3B5). Tip from AUTODOC experts:

- Make sure the ABS sensor is installed correctly.

**17** Install and tighten the drive shaft bolt. Use HEX No.H14. Use a ratchet wrench.



**18** Connect the ABS sensor wiring.

 


**19** Treat the ABS sensor connector. Use dielectric grease.


**20** Attach the ABS sensor connector.



**21** Clean the wheel rim mounting seat. Use a wire brush.



 **22** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



**23** Clean the brake disk surface. Use a brake cleaner.



**AUTODOC recommends:**

- After applying the spray, wait a few minutes.

**24**

Install the wheel.



**AUTODOC recommends:**

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. VW PASSAT Variant (3B5)

**25**

Screw in the wheel bolts. Use wheel impact socket #17.



**26**

Lower the car.

**27**

Tighten the bolt connecting the drive shaft to the wheel hub. Use HEX No.H14. Use a torque wrench. Tighten it to 115 Nm torque.+180°

Replacement: ABS sensor – VW PASSAT Variant (3B5). AUTODOC recommends:

- Important! Be sure to use new fasteners.

**28** Tighten the wheel bolts using a criss-cross pattern. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



**29** Remove the jacks and chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**ABS SENSOR: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.