



How to change spark
plugs on **VW Spacefox /
Space Cross (5Z6, 5Z7,
5Z9)** – replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:
 VW Spacefox / Space Cross (5Z6, 5Z7, 5Z9) 1.6

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW POLO (9N_) 1.4 16V

REPLACEMENT: SPARK PLUGS – VW SPACEFOX /
SPACE CROSS (5Z6, 5Z7, 5Z9). TOOLS YOU'LL NEED:



- High-temperature anti-seize lubricant
- Spark plug socket # 16
- Ratchet wrench
- Torque wrench
- Crow bar
- Flat Screwdriver
- Microfibre towel
- Fender cover

Buy tools

Replacement: spark plugs – VW Spacefox / Space Cross (5Z6, 5Z7, 5Z9).
AUTODOC recommends:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – VW SPACEFOX / SPACE CROSS (5Z6, 5Z7, 5Z9). RECOMMENDED SEQUENCE OF STEPS:

1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Detach the crankcase ventilation hose from the engine cover at the left.



4 Remove the engine cover. The air filter housing is integrated into the engine cover.

Replacement: spark plugs – VW Spacefox / Space Cross (5Z6, 5Z7, 5Z9). Tip:

- Raise the engine cover, holding it on two sides simultaneously.

5 Cover the throttle body with a microfibre towel to prevent dust and dirt from getting into the system.




6 Detach the crankcase ventilation hose from the oil filler neck.


7 Unscrew the oil filler neck.




8 Remove the oil filler neck.

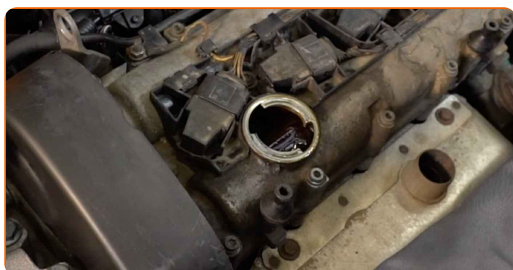


9 Cover the oil filler opening with a microfibre towel to prevent dirt and foreign objects from getting into the system.

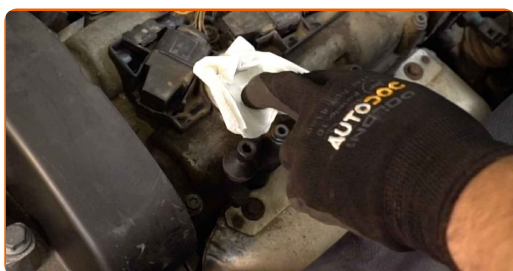

 
10 Undo the plastic locking tabs of the ignition coil connector. Use a flat screwdriver.



 11 Pry up the ignition coil. Use a crowbar (2 pieces).



 
12 Take out the ignition coil from the spark plug well.



Replacement: spark plugs – VW Spacefox / Space Cross (5Z6, 5Z7, 5Z9).
AUTODOC experts recommend:

- Remember the sequence of steps for ignition coil demounting.

 
13 Clean dirt, dust and debris from inside the spark plug wells.




14 Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.



 
15 Take out the spark plugs. Use the spark plug socket #16.



 16 Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.




 17 Install the new spark plugs into their mounting seats. Use the spark plug socket #16.



18

Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 25 nm torque.

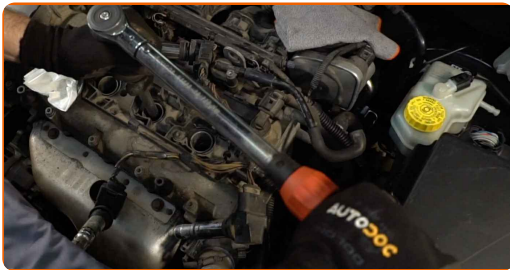

**Replacement: spark plugs – VW Spacefox / Space Cross (5Z6, 5Z7, 5Z9).
AUTODOC recommends:**

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

19

Treat the ignition coil tip. Use high-temperature grease.



20

Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.




AUTODOC recommends:

- Replacement: spark plugs – VW Spacefox / Space Cross (5Z6, 5Z7, 5Z9). Follow the installation steps.


21

Lock the connector.

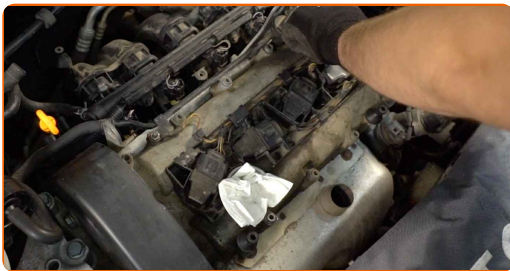

22

Remove the microfibre towel from the oil filler opening.

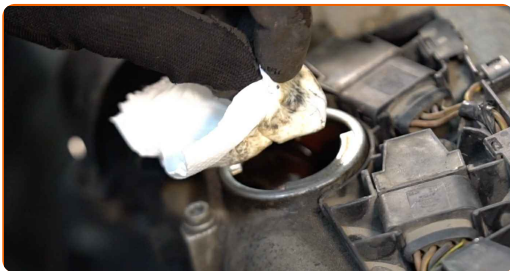

23

Install the oil filler neck.



24

Screw in the oil filler neck.

25

Attach the crankcase ventilation hose to the oil filler neck.

26

Remove the microfibre towel from the throttle body.



27

Install the engine cover and secure it. Make sure you hear a click indicating that it is locked in place.



Replacement: spark plugs – VW Spacefox / Space Cross (5Z6, 5Z7, 5Z9).
Professionals recommend:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners and the throttle body air intake hose.
- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.

28

Attach the crankcase ventilation hose to the engine cover at the left.



29 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

30 Shut off the engine.

31 Remove the fender protection cover.

32 Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SPARK PLUGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.