




How to change
headlights on **Toyota**
Yaris P1 – replacement
guide

VIDEO TUTORIAL

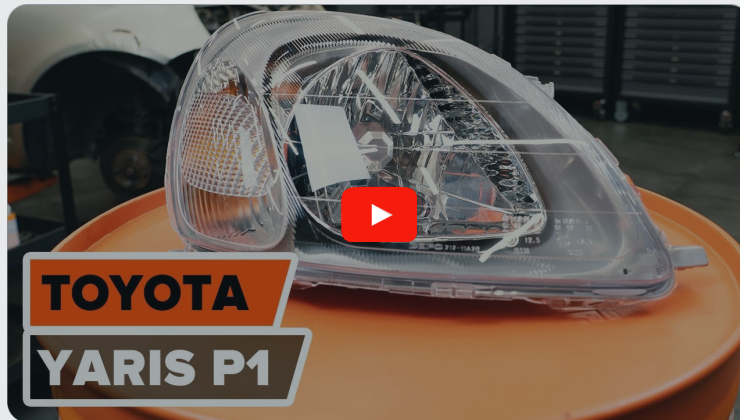


Important!

This replacement procedure can be used for:

TOYOTA Yaris I Hatchback (P1) 1.0 (SCP10_), TOYOTA Yaris I Hatchback (P1) 1.5 (NCP13_), TOYOTA Yaris I Hatchback (P1) 1.4 D-4D (NLP10_), TOYOTA Yaris I Hatchback (P1) 1.3 (SCP12_)

The steps may slightly vary depending on the car design.

REPLACEMENT: HEADLIGHTS – TOYOTA YARIS P1.
TOOLS YOU MIGHT NEED:

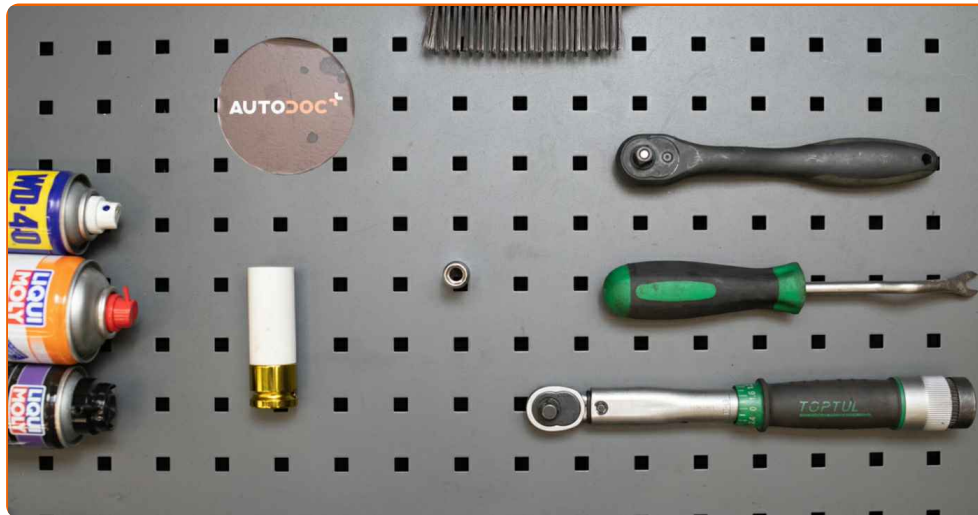

- WD-40 spray
- Brake cleaner
- Electronic spray
- Torque wrench
- Drive socket # 10
- Ratchet wrench
- Phillips screwdriver
- Clip removal tool
- Wheel impact socket #21
- Wheel chock

BUY TOOLS


Replacement: headlights – Toyota Yaris P1. AUTODOC recommends:

- The replacement procedure is identical for the right and left headlight.
- All work should be done with the engine stopped.

REPLACEMENT: HEADLIGHTS – TOYOTA YARIS P1. RECOMMENDED SEQUENCE OF STEPS:

1

Open the hood.

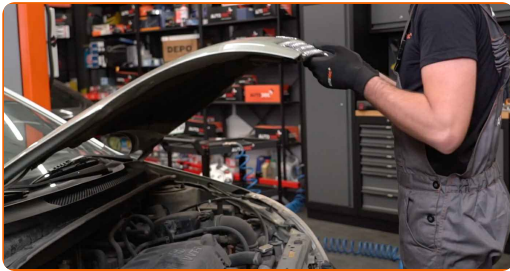


2

Secure the wheels with chocks.


3

Loosen the wheel mounting bolts. Use wheel impact socket #21.

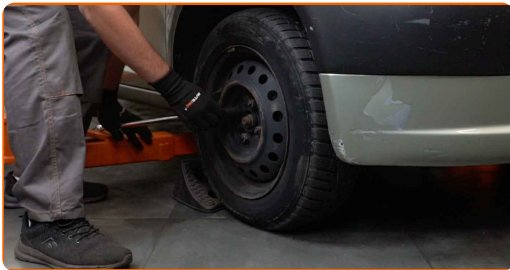

4

Raise the front of the car and secure on supports.

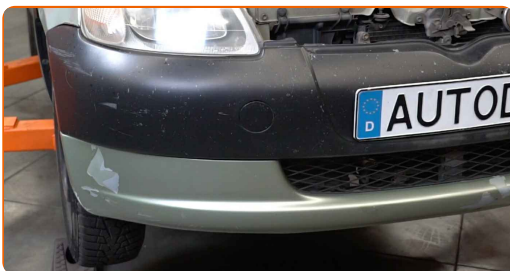

5

Unscrew the wheel bolts.




AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Toyota Yaris P1

6

Remove the wheel.

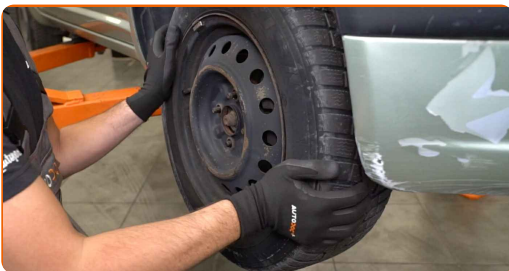


7

Unscrew and remove the wheel arch cover fasteners. Use a clip removal tool. Use a Phillips screwdriver. Use a ratchet wrench.



8

Move the part aside.

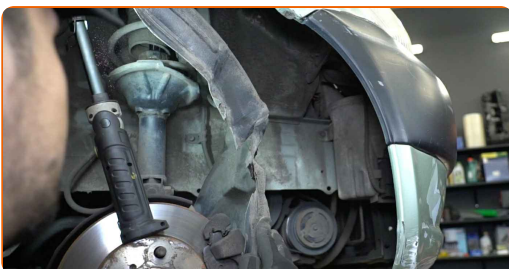

9 Clean the bumper fasteners. Use WD-40 spray.

10 Unscrew the upper fasteners of the bumper. Use a drive socket #10. Use a ratchet wrench.



11 Release the side clips of the bumper.



12 Carefully release the bumper from the fasteners.




13 Remove the bumper.

AUTODOC recommends:

- Replacement: headlights – Toyota Yaris P1. Do not use excessive force when removing the part as this may damage it.

14

Unscrew the headlight fasteners. Use a drive socket #10. Use a ratchet wrench.

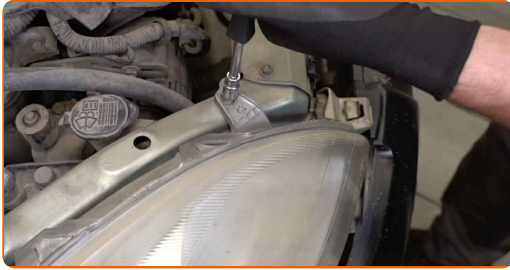

15

Remove the headlight.




AUTODOC recommends:


- Replacement: headlights – Toyota Yaris P1. Do not use excessive force when removing the part as this may damage it.

16

Unplug the connectors of the headlight bulbs. Use a clip removal tool.

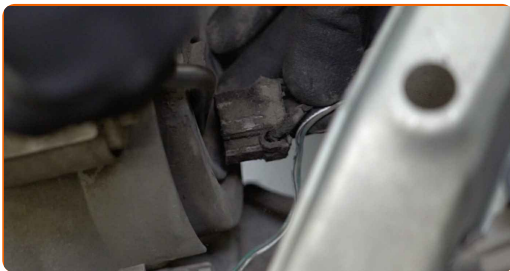


17 Treat the connectors of the headlights. Use electronic spray.

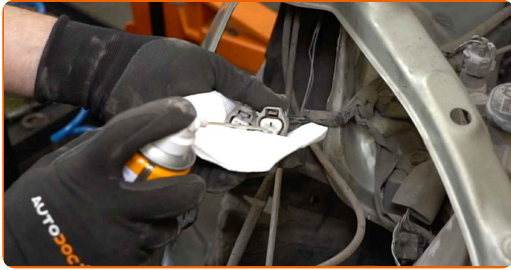

18 Plug in the connectors of the headlight bulbs.




19 Install the new headlight.

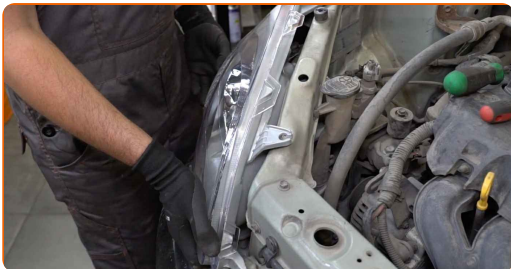

AUTODOC recommends:

- Replacement: headlights – Toyota Yaris P1. Do not use excessive force during installation. This may damage the part.

20 Tighten the headlamp fasteners. Use a drive socket #10. Use a torque wrench.

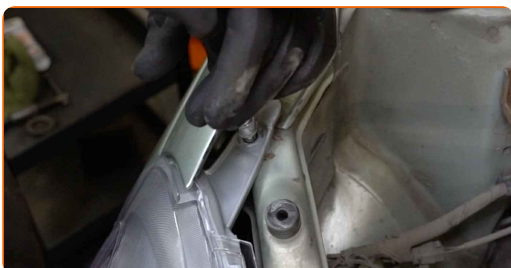

AUTODOC recommends:

- Do not apply too much force when tightening the fasteners.

21

Install the bumper to the mounting seat.




AUTODOC recommends:

- Replacement: headlights – Toyota Yaris P1. Do not use excessive force during installation. This may damage the part.


22

Snap the bumper side clips into place. Make sure you hear a click indicating that it is locked in place.

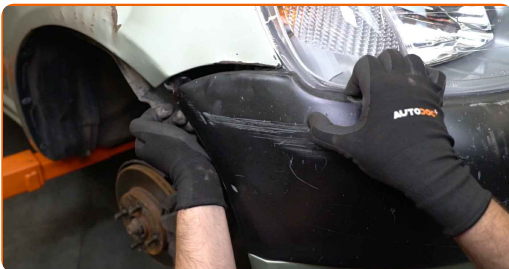

23


Screw in the bumper upper fasteners. Use a drive socket #10. Use a ratchet wrench.

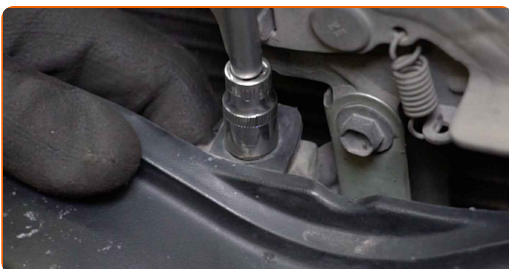

Replacement: headlights – Toyota Yaris P1. AUTODOC experts recommend:

- To prevent damage to the components, hold the bumper when screwing in the upper fasteners.


24 Install the wheel arch cover to its mounting seat. Screw in the fasteners. Use a Phillips screwdriver. Use a ratchet wrench.

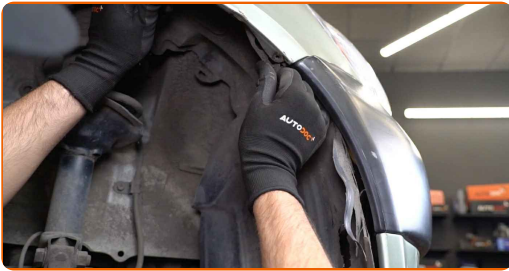


25 Clean the wheel rim mounting seat. Use a wire brush.



26 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

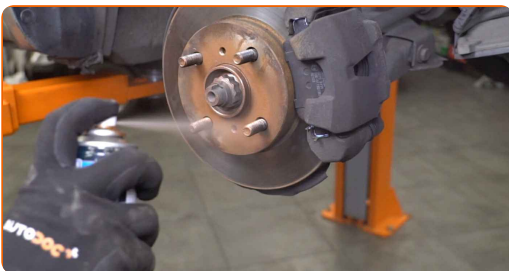

27 Clean the brake disk surface. Use a brake cleaner.

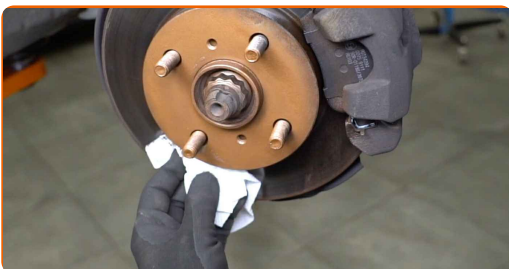

AUTODOC recommends:

- Replacement: headlights – Toyota Yaris P1. After applying the spray, wait a few minutes.

28

Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Toyota Yaris P1

29

Screw in the wheel bolts. Use wheel impact socket #21.

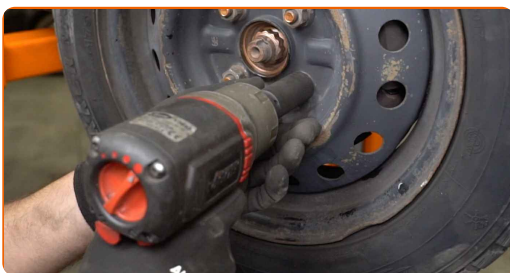


30

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #21. Use a torque wrench. Tighten it to 103 Nm torque.



31

Remove the jacks and chocks.

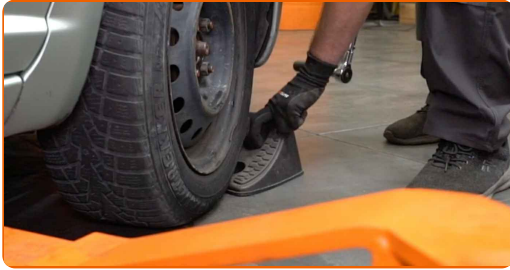


32

Switch on the ignition.

33

Check whether the headlights function properly.

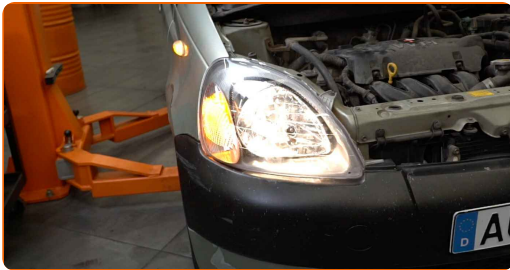

34

Switch off the ignition.

35

Close the hood.

**WELL DONE!** [VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

AUTODOC+

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR TOYOTA

HEADLIGHTS: A WIDE SELECTION

CHOOSE CAR PARTS FOR TOYOTA YARIS P1

HEADLIGHTS FOR TOYOTA: BUY NOW

**HEADLIGHTS FOR TOYOTA YARIS P1: THE BEST DEALS &
OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.