- AUTODOC CLUB

How to change air filter on **Opel Zafira B A05** – replacement guide



VIDEO TUTORIAL




(i) Important!

This replacement procedure can be used for:

OPEL Astra G CC (T98) 1.2 16V (F08, F48), OPEL Astra G CC (T98) 1.6 (F08, F48), OPEL Astra G CC (T98) 1.6 16V (F08, F48), OPEL Astra G CC (T98) 1.8 16V (F08, F48), OPEL Astra G CC (T98) 2.0 16V (F08, F48), OPEL Astra G CC (T98) 1.7 TD (F08, F48), OPEL Astra G CC (T98) 2.0 DI (F08, F48), OPEL Astra G Caravan (T98) 1.2 16V (F35), OPEL Astra G Caravan (T98) 1.6 (F35), OPEL Astra G Caravan (T98) 1.6 16V (F35), OPEL Astra G Caravan (T98) 1.8 16V (F35), OPEL Astra G Caravan (T98) 2.0 16V (F35), OPEL Astra G Caravan (T98) 1.7 TD (F35), OPEL Astra G Caravan (T98) 2.0 DI (F35), OPEL Astra G Caravan (T98) 2.2 DTI (F35), (+ 87)

The steps may slightly vary depending on the car design.

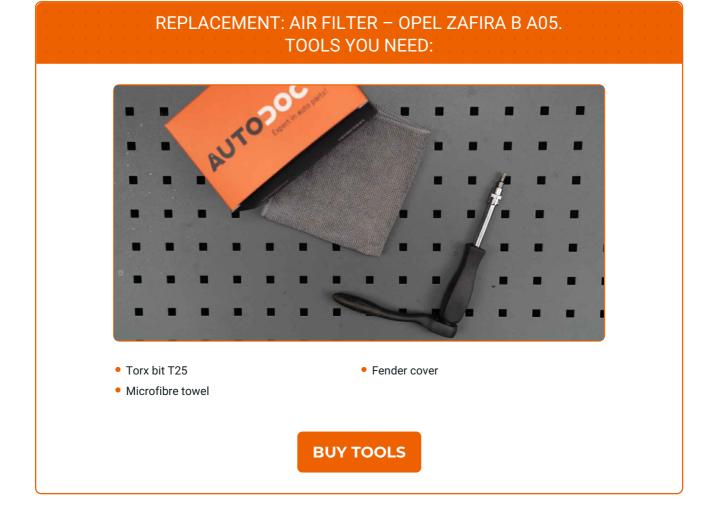

•

O

+ AUTODOC CLUB



Replacement: air filter – Opel Zafira B A05. AUTODOC experts recommend:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car Opel Zafira B A05 should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Open the bonnet.



2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



3

Undo the fastening screws of the air filter cover. Use Torx T25.



+ AUTODOC CLUB



4

Unplug the mass air flow sensor connector.



5

Slightly raise the cover of the air filter housing.



6

Remove the filter element from the filter housing.



7

Clean the air filter cover and housing.



Replacement: air filter - Opel Zafira B A05. Tip:

 Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.



8

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



AUTODOC recommends:

- Replacement: air filter Opel Zafira B A05. Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

9

Reinstall the air filter cover. Fasten it.



10

Screw in the fastening screws of the air filter cover. Use Torx T25.



+ AUTODOC CLUB



11

Plug in the mass air flow sensor conntector.



12

Remove the fender protection cover.



13

Close the hood.






VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

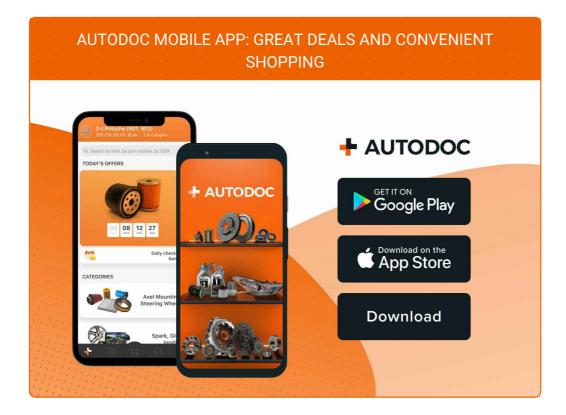

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR OPEL

AIR FILTER: A WIDE SELECTION



CHOOSE CAR PARTS FOR OPEL ZAFIRA B A05

AIR FILTER FOR OPEL: BUY NOW

AIR FILTER FOR OPEL ZAFIRA B A05: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.