- AUTODOC CLUB

How to change spark plugs on **Opel Zafira B A05** – replacement guide



VIDEO TUTORIAL




(i) Important!

This replacement procedure can be used for:

OPEL Corsa D Hatchback (S07) 1.4 (L08, L68), OPEL Corsa A CC (S83) 1.4 i (F08, M08, F68, M68), OPEL Kadett E CC (T85) 1.6 i (C08, C48, D08, D48), OPEL Kadett E CC (T85) 1.8 i (C08, C48, D08, D48), OPEL Kadett E Saloon (T85) 1.6 i (C19, D19), OPEL Kadett E Saloon (T85) 1.6 i (C15, C35, D15, D35), OPEL Kadett E Caravan (T85) 1.8 i (C15, C35, D15, D35), OPEL Kadett E Caravan (T85) 1.8 i (C15, C35, D15, D35), OPEL Kadett E Convertible (T85) 1.6 i, OPEL Vectra A CC (J89) 1.6 i (F68, M68), OPEL Astra J Sports Tourer (P10) 1.6 (35), OPEL Vectra A Saloon (J89) 1.6 i (F19, M19), OPEL Vectra A CC (J89) 1.6 i Cat (F68, M68), OPEL Vectra A Saloon (J89) 2000 16V 4x4 (F19, M19), OPEL Calibra A (C89) 2.0 i 16V (M07), (+ 275)

The steps may slightly vary depending on the car design.

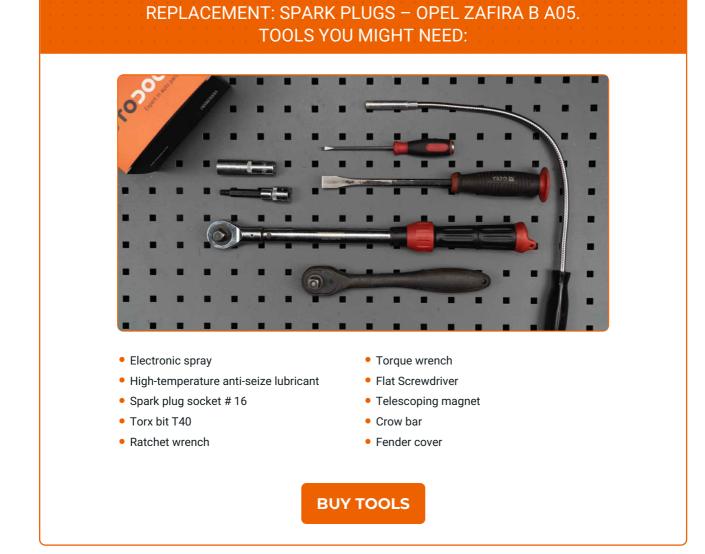

CLUB.AUTODOC.CO.UK

4

O



Replacement: spark plugs – Opel Zafira B A05. Tip from AUTODOC:

• The replacement procedure is the same for all spark plugs.

• All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – OPEL ZAFIRA B A05. USE THE FOLLOWING PROCEDURE:



Open the hood.





Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.





Remove the engine cover.





Replacement: spark plugs – Opel Zafira B A05. Tip:

• Raise the engine cover, holding it on two sides simultaneously.



Detach the connector from the ignition coil.



5

Unscrew the ignition coil bracket. Use Torx T40. Use a ratchet wrench.



6

Pry up the ignition coil. Use a crowbar. Take out the ignition coil from the spark plug well.



7

Clean dirt, dust and debris from inside the spark plug wells.





Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.



9

Take out the spark plugs. Use a telescoping magnet.



10

Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.



11

Install the new spark plugs into their mounting seats. Use the spark plug socket #16.





Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 25 nm torque.



Replacement: spark plugs – Opel Zafira B A05. AUTODOC experts recommend:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

13

Treat the ignition coil tips. Use high-temperature grease. Use a flat screwdriver.



14

Install the ignition coil to the spark plug well. Make sure you hear a click indicating that it is locked in place.





Tighten the ignition coil fastening. Use Torx T40. Use a ratchet wrench.



16

Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.





Plug in the ignition coil connector.



18

Install the engine cover and secure it.



Replacement: spark plugs – Opel Zafira B A05. AUTODOC recommends:

• Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.



Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.



20

Shut off the engine.



21

Remove the fender protection cover.



22

Close the hood.





VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR OPEL

SPARK PLUGS: A WIDE SELECTION



CHOOSE CAR PARTS FOR OPEL ZAFIRA B A05

SPARK PLUGS FOR OPEL: BUY NOW

SPARK PLUGS FOR OPEL ZAFIRA B A05: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.