

Carry out replacement in the following order:

1




Open the bonnet.

2.1



Loosen and remove the air filter cover.

2.2

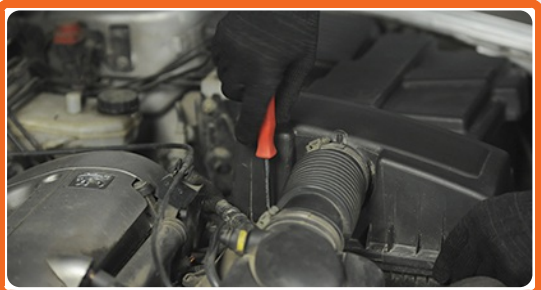

2.3



2.4



2.5



3.1



Remove the air filter and replace it with a new one.

3.2



3.3



4.1



Reinstall the air filter cover. Fasten it.

4.2



4.3



5



Close the hood



We hope that this information
have been useful for you!

[Video tutorials](#)

Watch our detailed video guides about your Peugeot 406 repair on our youtube channel. Watch video guides.

[AutoDoc online](#)

Highest quality air filters for your car Peugeot 406 are available on AutoDoc. Go to the website.

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

QUALITY AUTO PARTS



PEUGEOT




AIR FILTERS



PEUGEOT 406



AIR FILTERS FOR PEUGEOT

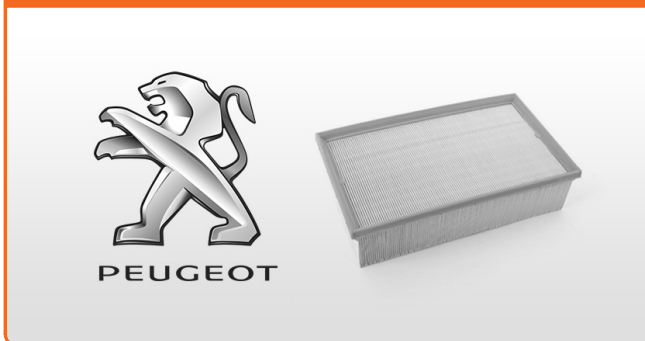

AIR FILTERS FOR PEUGEOT 406



i Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement works. AutoDoc shall not be liable for any loss, injury, damage of property, acquired in the repair or replacement process due to incorrect usage or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for informative purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

AUTODOC IN SOCIAL MEDIA

