



VIDEO TUTORIAL

Important!

This replacement procedure can be used for:
TOYOTA RAV 4 II (_A2_) 2.0 4WD (ACA21, ACA20)

The steps may slightly vary depending on the car design.

AUTODOC recommends:

- Replace the cabin filter at least once every six months, in early spring and autumn seasons.
- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- If the air flow into the cabin has sharply reduced, replace the filter before a scheduled maintenance.
- All work should be done with the engine stopped.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1



Open the glove box.

2

Press the retainers.

3



Remove the cabin air filter housing.

AUTODOC recommends:

- Do not apply excessive force when removing the part. Otherwise you may damage it.

5



Remove the filter element from the filter housing.

AUTODOC recommends:

- Do not attempt to clean and reuse the filter - it will affect the quality of air cleaning inside the car.

6



Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

AUTODOC recommends:

- Check out the correct location of the filter element. Do not skew.
- Take care to only use quality filters.

7



Install the cabin air filter housing. Make sure you hear a click indicating that it is locked in place.

AUTODOC recommends:

- Follow the air flow direction arrow on the filter.

8



Close the glove box.

9

Switch on the ignition.

10

Switch on the air conditioning system. This is necessary in order to make sure that the component operates properly.

11

Switch off the ignition.

**DID YOU FIND THESE INSTRUCTIONS
HELPFUL?**

YES

NO



BECOME A MEMBER OF AUTODOC CLUB!

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC APP

Download

 **Google play**

 **App Store**


A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR



BUY SPARE PARTS FOR TOYOTA




INTERIOR AIR FILTERS: A WIDE SELECTION

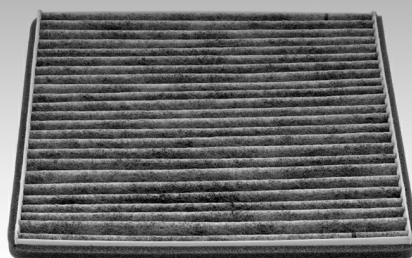


CHOOSE CAR PARTS FOR TOYOTA RAV 4 II



INTERIOR AIR FILTERS FOR TOYOTA: BUY NOW

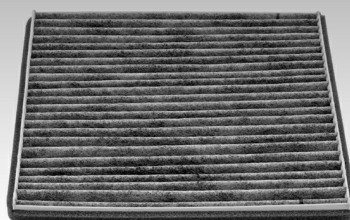

INTERIOR AIR FILTERS FOR TOYOTA RAV 4 II: THE BEST DEALS & OFFERS

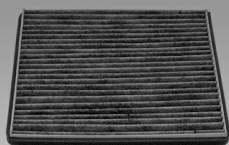

Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2018 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by Autodoc GmbH.