



How to change front
wheel bearing on **Audi**
A4 B6 – replacement
guide

VIDEO TUTORIAL




i Important!

This replacement procedure can be used for:

AUDI A8 (4D2, 4D8) 4.2 quattro, AUDI A8 (4D2, 4D8) 3.7, AUDI A8 (4D2, 4D8) 3.7 quattro, AUDI A8 (4D2, 4D8) S8 quattro, AUDI A6 Saloon (4B2, C5) 1.8 T quattro, AUDI A6 Saloon (4B2, C5) 1.8, AUDI A6 Avant (4B5, C5) 1.8, AUDI A6 Avant (4B5, C5) 1.8 T, AUDI A6 Avant (4B5, C5) 1.8 T quattro, AUDI A6 Saloon (4B2, C5) 2.4, AUDI A6 Avant (4B5, C5) 2.4, AUDI A6 Avant (4B5, C5) 4.2 quattro, AUDI A8 (4D2, 4D8) 3.3 TDI quattro, AUDI A8 (4D2, 4D8) S 8 quattro, AUDI A6 Saloon (4B2, C5) S6 quattro, (+ 67)

The steps may slightly vary depending on the car design.

REPLACEMENT: WHEEL BEARING – AUDI A4 B6. TOOLS YOU MIGHT NEED:

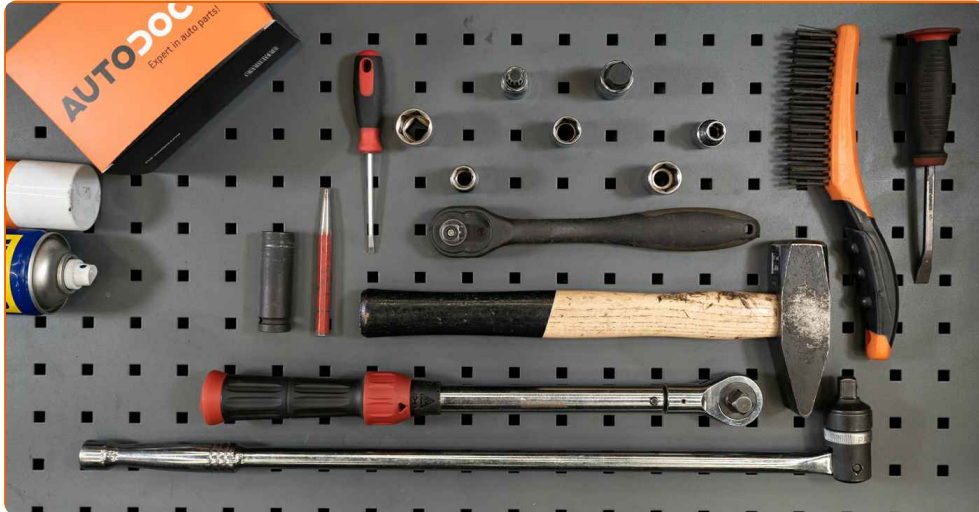

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16
- Combination spanner #18
- Combination spanner #21
- Drive socket # 10
- Drive socket # 13
- Drive socket # 16
- Drive socket # 18
- Drive socket # 21
- XZN socket bit # 12
- HEX bit No.H17.
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Bush and bearing driver set
- Pin punch
- Hammer
- Flat chisel
- Crow bar
- Wheel chock

BUY TOOLS


AUTODOC recommends:

- Do not re-use the bearing assembly of your Audi A4 B6 car.
- The wheel hub bearing replacement procedure is identical for both wheels on the same axle.
- Please note: all work on the car – Audi A4 B6 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Secure the wheels with chocks.

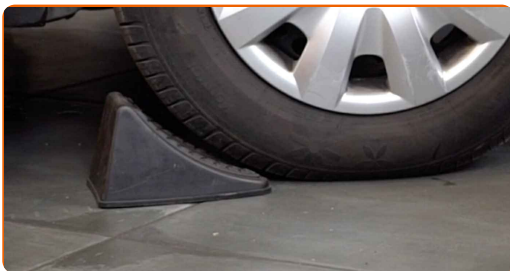

2

Loosen the wheel mounting bolts. Use wheel impact socket #17.


3

Raise the front of the car and secure on supports.



4

Unscrew the wheel bolts.

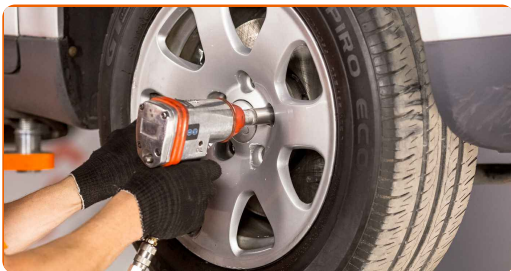


AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Audi A4 B6


5

Remove the wheel.

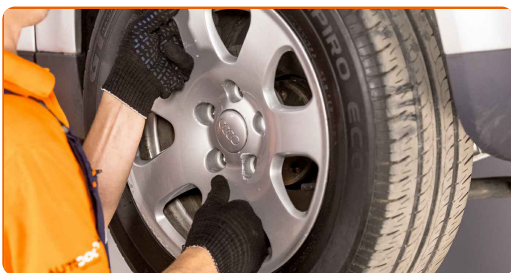


6

Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.

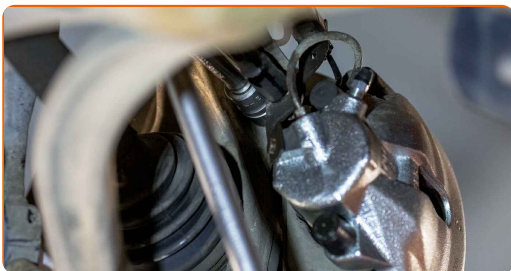

7

Unscrew the caliper bracket fastening. Use a drive socket #21. Use a ratchet wrench.

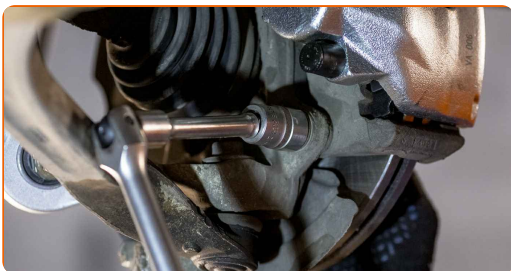

8

Remove the brake caliper together with its bracket.




Replacement: wheel bearing – Audi A4 B6. Tip from AUTODOC experts:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

9

Remove the brake disc.

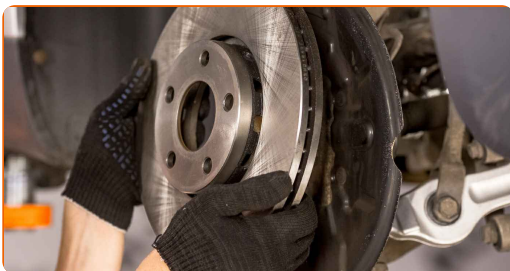

10

Clean the fastener of the driveshaft. Use a wire brush. Use WD-40 spray.

11

Loosen the fastener of the driveshaft. Use HEX No.H17. Use a ratchet wrench.




12

Clean the fastener that connects the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.


13

Unscrew the ball joint fastening to the steering knuckle. Use a drive socket #18. Use a combination spanner #18. Use a ratchet wrench.

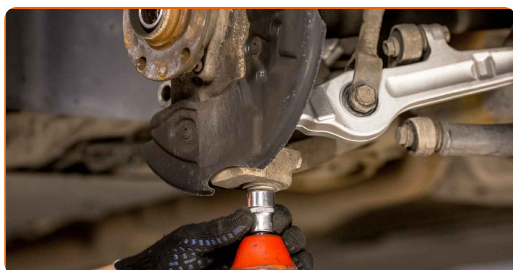


14

Disconnect the lower arm from the steering knuckle. Use a hammer. Use a crowbar.

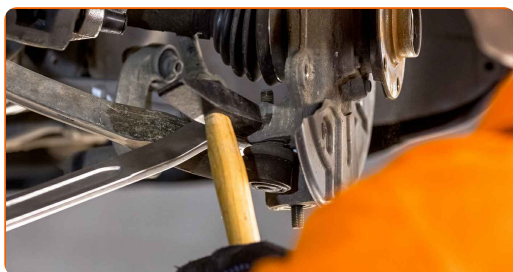


15

Loosen the tie rod end fastening bolt. Use a drive socket #13. Use a ratchet wrench.

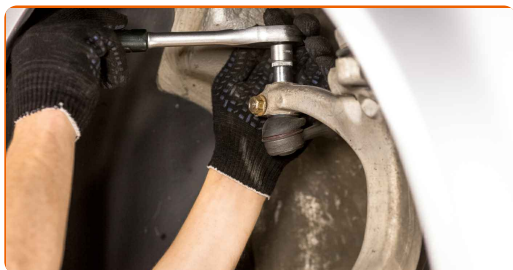


16

Unscrew the end fastening nut to the steering knuckle. Use a drive socket #16. Use a ratchet wrench.

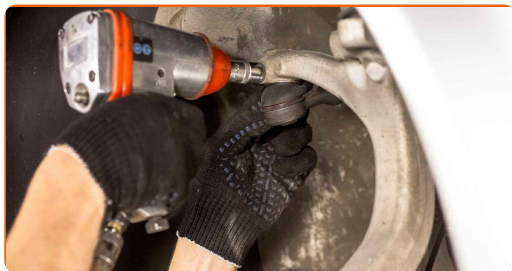


17

Remove the fastening bolt. Use a pin punch. Use a hammer.

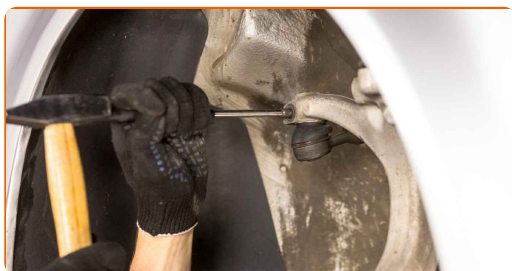


18

Disconnect the tie rod end from the steering knuckle. Use a flat metal-working chisel. Use a hammer.

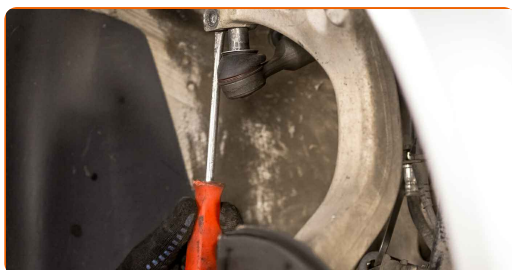


19

Unscrew the upper arm fastenings. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.

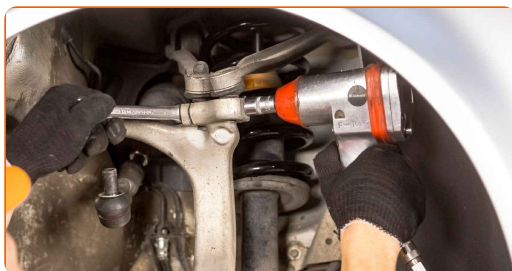

20

Detach the upper control arm from the steering knuckle. Use a flat metal-working chisel. Use a hammer.

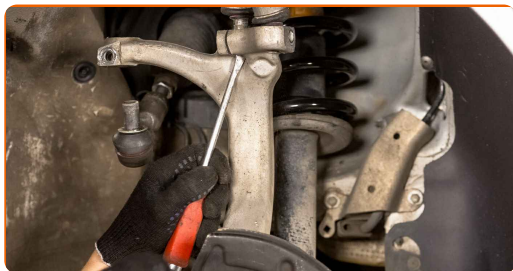


21

Unscrew the ABS sensor fastening from the steering knuckle. Use a drive socket #10. Use a ratchet wrench.




22

Remove the ABS sensor from the steering knuckle.

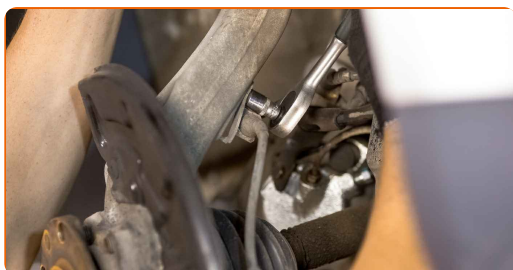


23

Remove the steering knuckle together with the hub.

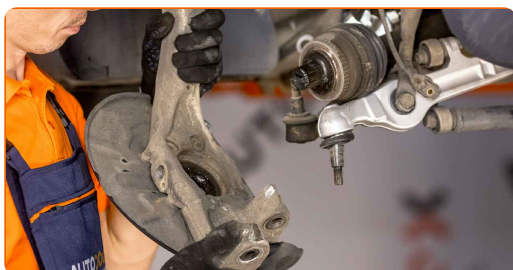


24

Press the wheel hub out from the tapered roller bearing. Use a bush and bearing driver set. Use a hammer.

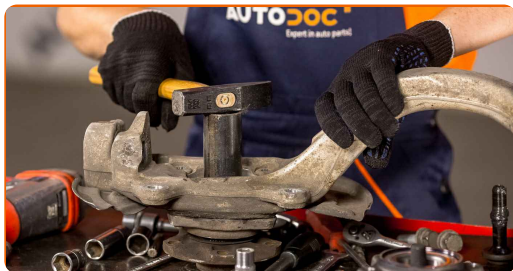


25

Unscrew the hub bearing fastening to the steering knuckle. Use XZN #12. Use a ratchet wrench.

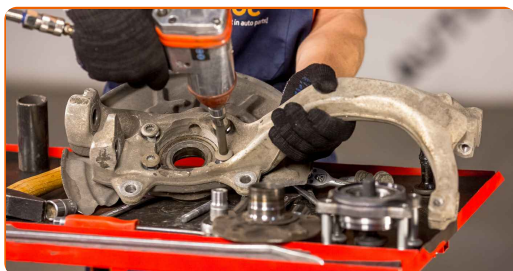

26

Press out the wheel hub bearing. Use a hammer.

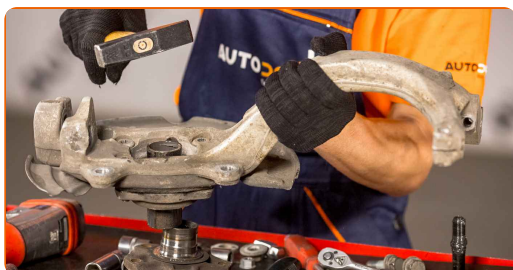


AUTODOC recommends:

- Apply special grease to the bearing assembly mounting seat.

27

Press the new bearing in the steering knuckle. Use a hammer.

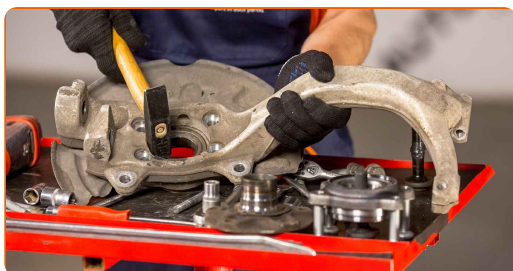

28

Tighten the wheel hub bolts. Use XZN #12. Use a torque wrench. Tighten it to 80 Nm torque.+90°




Replacement: wheel bearing – Audi A4 B6. AUTODOC recommends:

- Important! Be sure to use new fasteners.
- Check to make sure the wheel hub bearing is positioned correctly. Avoid its misalignment.

29

Press the wheel hub into the bearing inner race. Use a bush and bearing driver set.

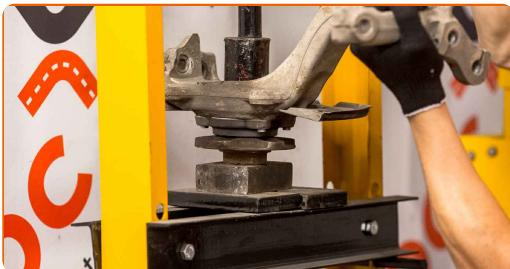


Replacement: wheel bearing – Audi A4 B6. Tip:

- Stop pressing on the surface of the bearing immediately after it has been fitted into its mounting seat.


- 30** Install the steering knuckle with a hub in assembly.



- 31** Connect the lower arm to the steering knuckle.

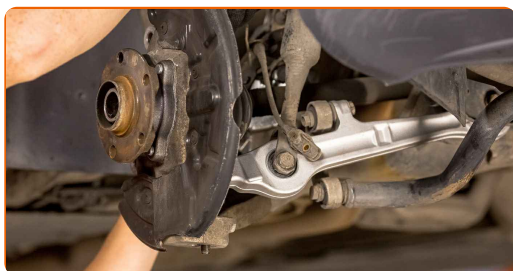


- 32** Screw the wheel hub axle nut.

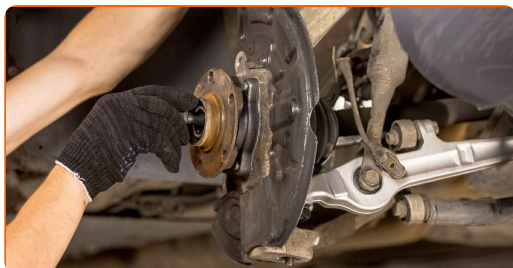

- 33** Attach the upper control arm to the steering knuckle. Use a hammer.

- 34** Tighten the upper arm fastenings. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 45 Nm torque.

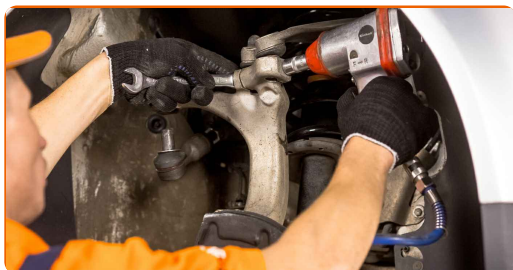

- 35** Clean the ball joint mounting seat. Use a wire brush. Use WD-40 spray.


36

Screw the fasteners of the ball joint. Use a drive socket #18. Use a ratchet wrench.




37

Connect the tie rod end to the steering knuckle. Use a hammer.

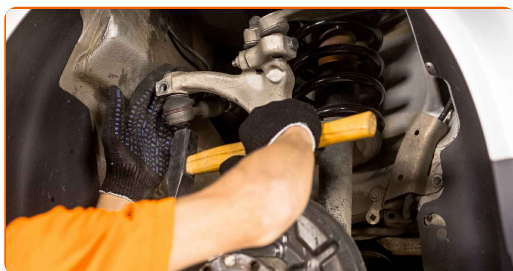


38

Install the fastening bolt.

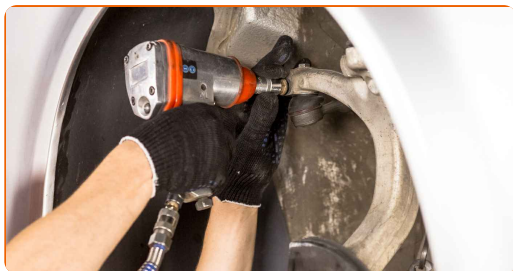


39

Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #16. Use a torque wrench. Tighten it to 45 nm torque.

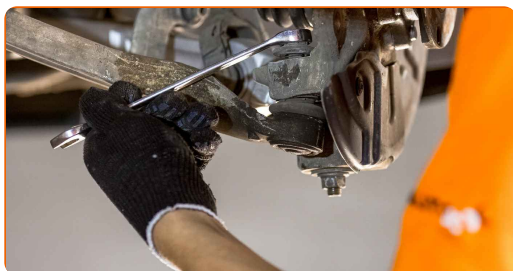


40 Tighten the tie rod end fastening bolt. Use a drive socket #13. Use a torque wrench. Tighten it to 7 nm torque.

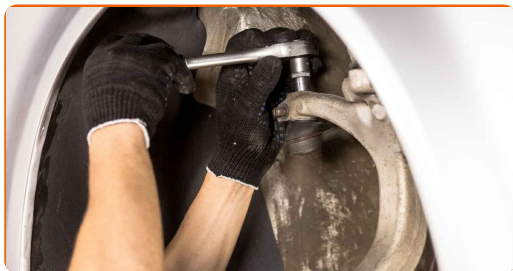

41 Tighten the ball joint fastener. Use a drive socket #18. Use a torque wrench. Tighten it to 120 Nm torque.

42 Install the brake disc.

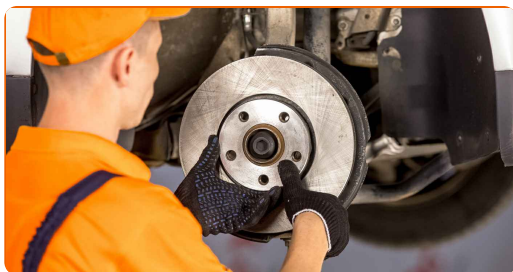


43 Clean the mounting seats of the caliper and its bracket. Use a wire brush. Use WD-40 spray.

44 Install the brake caliper together with its bracket.




45 Tighten the brake caliper bracket. Use a drive socket #21. Use a torque wrench. Tighten it to 190 Nm torque.

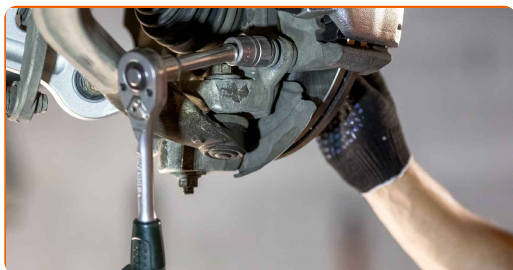


46

Connect the ABS sensor to the steering knuckle.

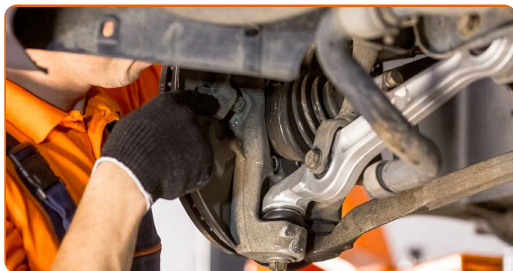


47

Screw in the fastener that connects the ABS sensor to the rear knuckle. Use a drive socket #10. Use a ratchet wrench.

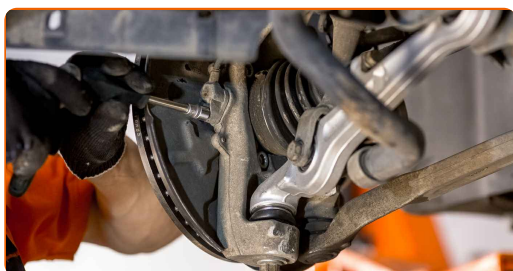

48

Tighten the drive shaft nut. Use HEX No.H17. Use a torque wrench. Tighten it to 115 Nm torque.+180°

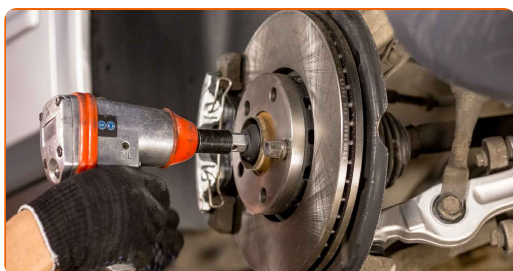

AUTODOC recommends:

- Important! Be sure to use new fasteners.

49

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



50

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: wheel bearing – Audi A4 B6. After applying the spray, wait a few minutes.

51

Install the wheel.



AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. Audi A4 B6


52

Screw in the wheel bolts. Use wheel impact socket #17.



53

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.

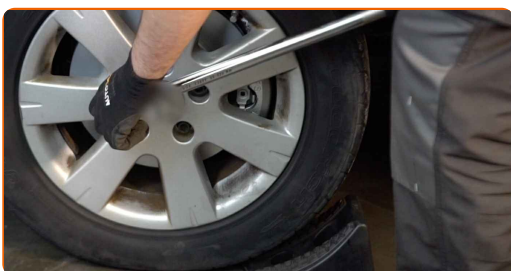

54

Remove the jacks and chocks.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

WHEEL BEARING: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B6

WHEEL BEARING FOR AUDI: BUY NOW

WHEEL BEARING FOR AUDI A4 B6: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.