



How to change front
lower arm on **Fiat Bravo**
2 – replacement guide

VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

FIAT BRAVO II (198) 1.6 D Multijet, FIAT BRAVO II (198) 1.9 D Multijet, FIAT STILO Multi Wagon (192) 2.4 20V, FIAT STILO Multi Wagon (192) 1.6 16V, FIAT STILO Multi Wagon (192) 1.8 16V, FIAT STILO Multi Wagon (192) 1.9 JTD, FIAT STILO Multi Wagon (192) 1.4 16V, FIAT STILO Multi Wagon (192) 1.9 D Multijet, FIAT STILO Multi Wagon (192) 1.9 D Multijet (192DXT1B), FIAT BRAVO II (198) 1.4, FIAT BRAVO II (198) 1.4 T-Jet, FIAT STILO Multi Wagon (192) 1.9 D, FIAT BRAVO II (198) 2.0 D Multijet, FIAT Stilo Box Body / Estate (192) 1.4 (192DXH1B), FIAT Stilo Box Body / Estate (192) 1.9 JTD (192DXG1B), (+ 5)

The steps may slightly vary depending on the car design.

REPLACEMENT: FRONT LOWER ARM – FIAT BRAVO 2.

TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #17
- Drive socket # 10
- Drive socket # 17
- Drive socket # 19
- Drive socket # 21
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Phillips Screwdriver
- Pin punch
- Tap wrench
- Hammer
- Crow bar
- Hydraulic transmission jack
- Wheel chock

[BUY TOOLS](#)

Replacement: front lower arm – Fiat Bravo 2. AUTODOC recommends:

- The replacement procedure is identical for the left and right lower control arms.
- All work should be done with the engine stopped.

REPLACEMENT: FRONT LOWER ARM – FIAT BRAVO 2. RECOMMENDED SEQUENCE OF STEPS:

1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.




3

Raise the front of the car and secure on supports.



4

Unscrew the wheel bolts.

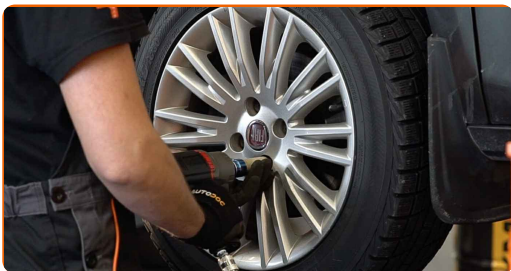


Replacement: front lower arm – Fiat Bravo 2. Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.


5

Remove the wheel.

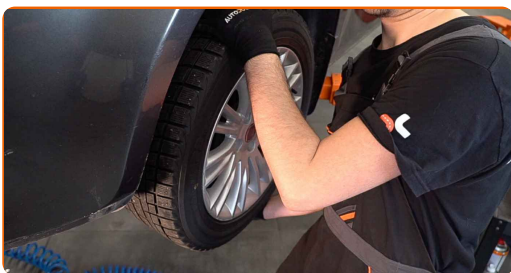


6

Unscrew and remove the wheel arch cover fasteners. Use a Phillips screwdriver. Use a drive socket #10. Use a ratchet wrench.

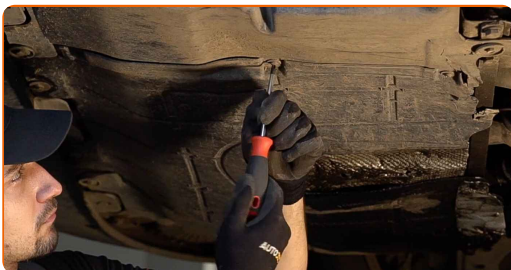


7


Remove the wheel arch cover.

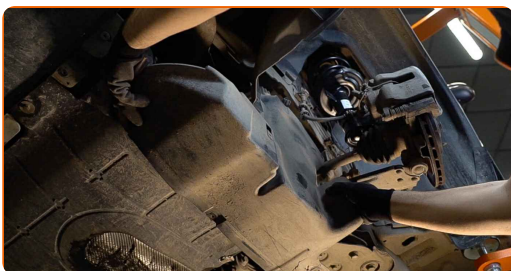


- 8 Clean the fastener connecting the ball joint to the steering knuckle. Clean all joints of the arm. Use a wire brush. Use WD-40 spray.

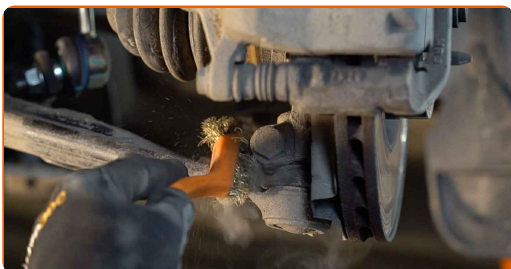


- 9 Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #17. Use a drive socket #17. Use a ratchet wrench.

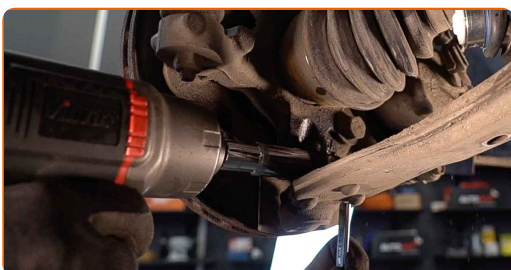

- 10 Remove the fastening bolt.

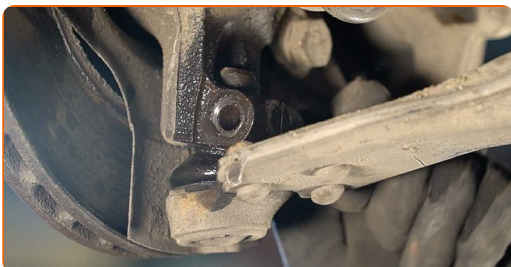

- 11 Unscrew the front arm fastener. Use a drive socket #21. Use a tap wrench.

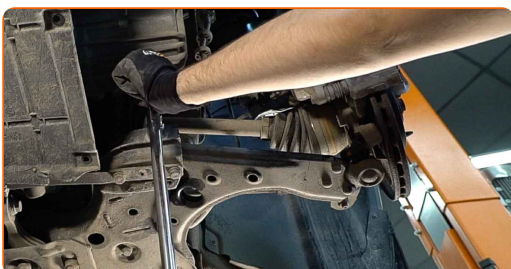

12

Unscrew the rear arm fastener. Use a drive socket #19. Use a tap wrench.



13

Remove the fastening bolts (2 pieces).




14

Release the fastener connecting the ball joint to the steering knuckle. Use a crowbar. Use a hammer.




15

Disconnect the ball joint from the steering knuckle.

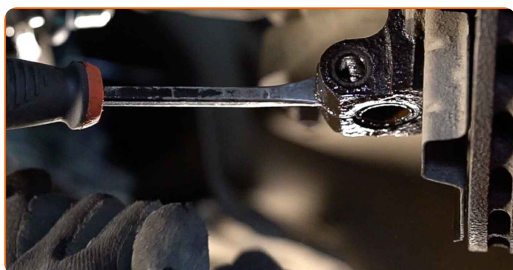


16

Remove the arm. Use a crowbar.

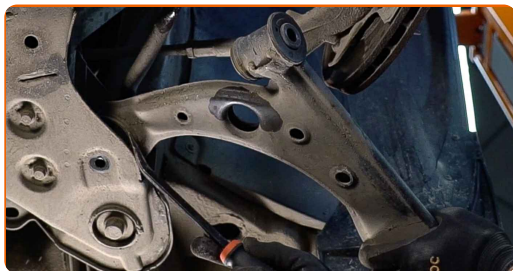

17

Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.

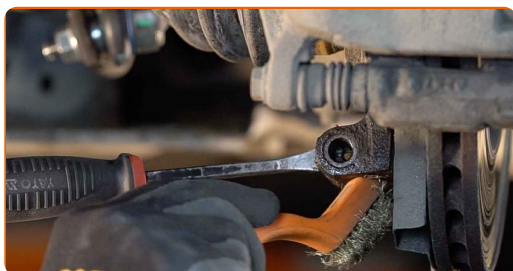

18

Install a new arm. Use a pin punch.




Replacement: front lower arm – Fiat Bravo 2. AUTODOC experts recommend:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.


19

Connect the ball joint to the steering knuckle.

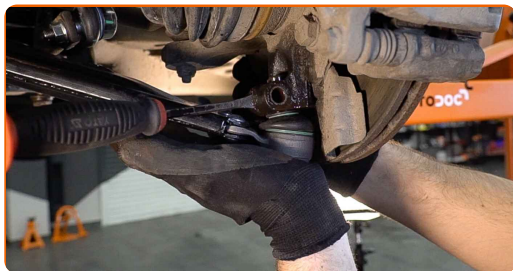


20

Install the control arm fasteners.

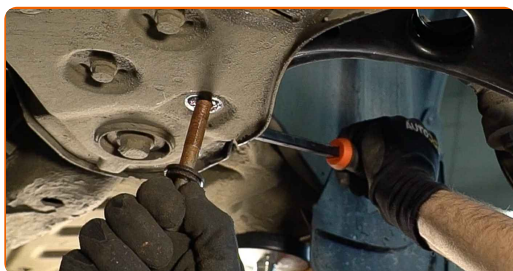

21

Support the arm. Use a hydraulic transmission jack.

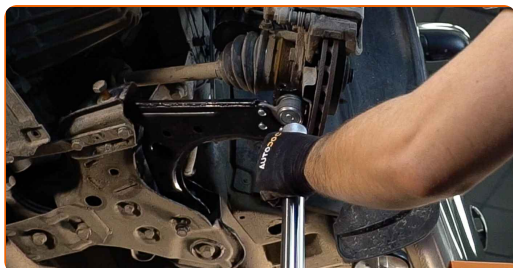


22

Install the fastening bolt.


23

Screw the fastener connecting the ball joint to the steering knuckle. Use a drive socket #17. Use a combination spanner #17.

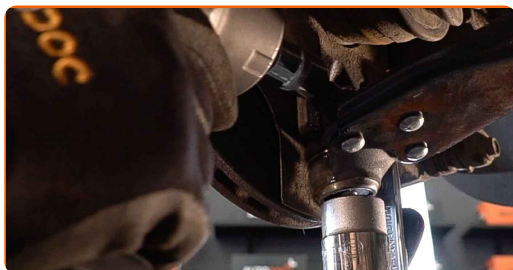


24

Raise the hydraulic transmission jack by 10-15 cm.

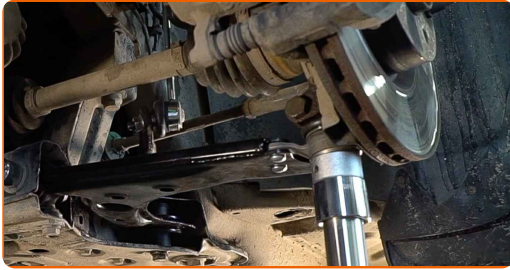


25

Tighten the ball joint fastener. Use a drive socket #17. Use a combination spanner #17. Use a torque wrench. Tighten it to 65 nm torque.

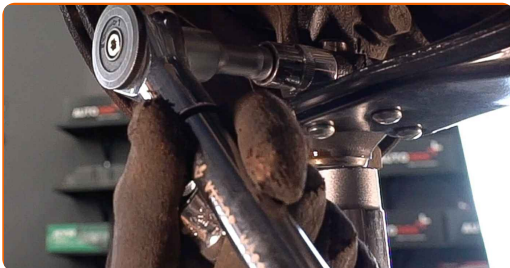

26


Tighten the front fastener connecting the control arm to the subframe. Use a drive socket #21. Use a torque wrench. Tighten it to 95 Nm torque.+90°

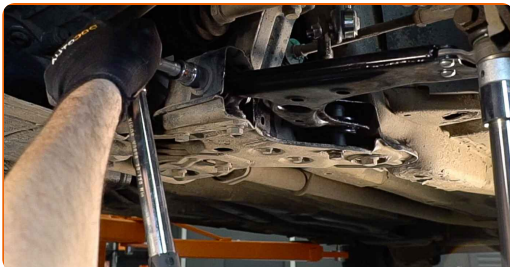


Replacement: front lower arm – Fiat Bravo 2. Professionals recommend:

- Important! Be sure to use new fasteners.

- 27 Tighten the rear fastener connecting the arm to the body subframe. Use a drive socket #19. Use a torque wrench. Tighten it to 120 nm torque.

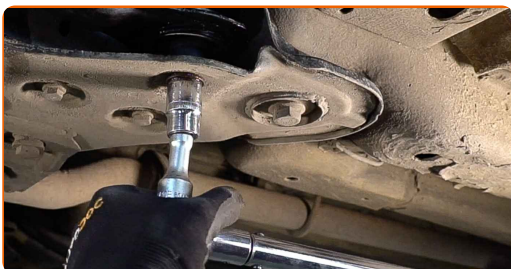


- 28 Remove the support from under the arm.

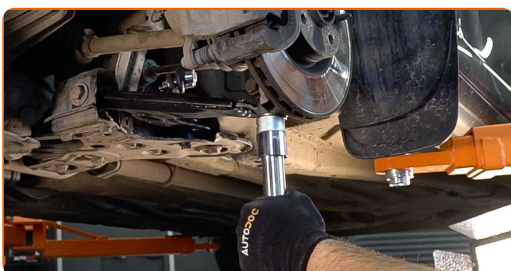

AUTODOC recommends:


- Replacement: front lower arm – Fiat Bravo 2. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

- 29 Install the wheel arch cover to its mounting seat.

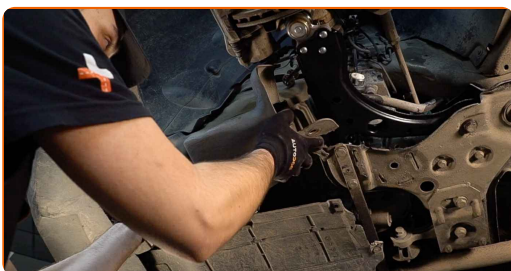


30

Install and tighten the wheel arch cover fasteners. Use a Phillips screwdriver. Use a drive socket #10. Use a ratchet wrench.

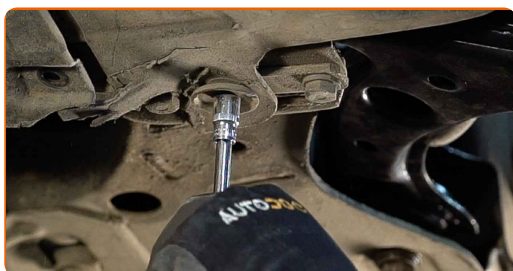

31

Treat all joints of the arm. Use copper grease.

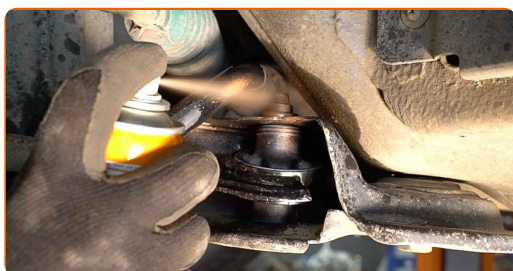


32

Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.



33

Install the wheel.

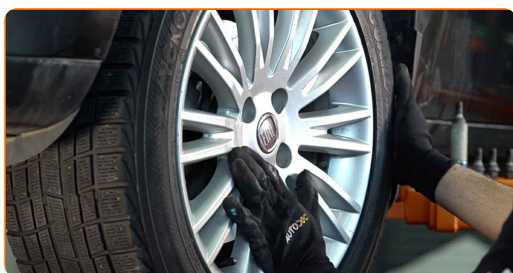


AUTODOC recommends:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


34

Screw in the wheel bolts. Use wheel impact socket #17.

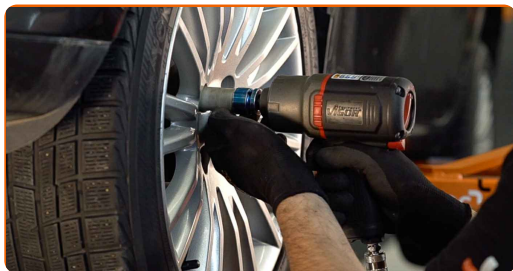


35

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 nm torque.

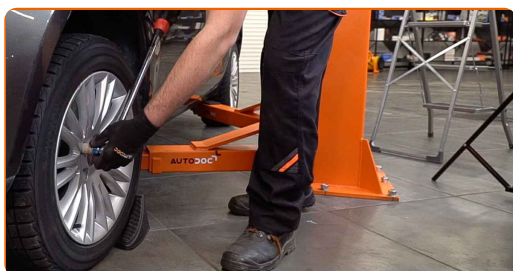

36

Remove the jacks and chocks.

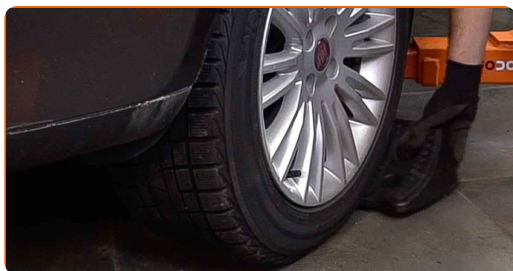

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FIAT

CONTROL ARM: A WIDE SELECTION

CHOOSE CAR PARTS FOR FIAT BRAVO 2

CONTROL ARM FOR FIAT: BUY NOW

CONTROL ARM FOR FIAT BRAVO 2: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.