



How to change front
wheel bearing on **Ford**
Fiesta V JH JD –
replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

FORD FOCUS (DAW, DBW) 1.4 16V, FORD FOCUS (DAW, DBW) 1.6 16V, FORD FOCUS (DAW, DBW) 1.8 16V, FORD FOCUS Saloon (DFW) 1.4 16V, FORD FOCUS Saloon (DFW) 1.6 16V, FORD FOCUS Saloon (DFW) 1.8 16V, FORD FOCUS Estate (DNW) 1.4 16V, FORD FOCUS Estate (DNW) 1.6 16V, FORD FOCUS Estate (DNW) 1.8 16V, FORD FOCUS (DAW, DBW) 2.0 16V, FORD FOCUS (DAW, DBW) 1.8 Turbo DI / TDDi, FORD FOCUS Saloon (DFW) 2.0 16V, FORD FOCUS Saloon (DFW) 1.8 Turbo DI / TDDi, FORD FOCUS Estate (DNW) 2.0 16V, FORD FOCUS Estate (DNW) 1.8 Turbo DI / TDDi, (+ 37)

The steps may slightly vary depending on the car design.

**REPLACEMENT: WHEEL BEARING – FORD FIESTA V JH
JD. TOOLS YOU MIGHT NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 13
- Drive socket # 17
- Drive socket # 32
- Torx bit T50
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Hammer
- Crow bar
- Bush and bearing driver set
- Ball joint puller
- Wheel chock


BUY TOOLS

Replacement: wheel bearing – Ford Fiesta V JH JD. Professionals recommend:

- Do not re-use the bearing assembly of your Ford Fiesta V JH JD car.
- The wheel hub bearing replacement procedure is identical for both wheels on the same axle.
- Please note: all work on the car – Ford Fiesta V JH JD – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Secure the wheels with chocks.

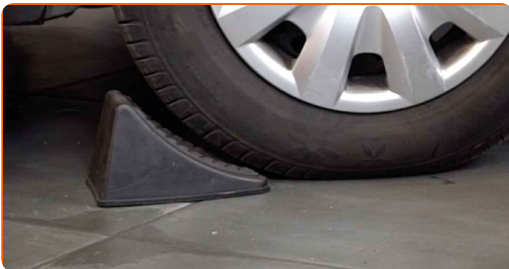

2 Loosen the wheel mounting bolts. Use wheel impact socket #19.



3 Raise the front of the car and secure on supports.

4

Unscrew the wheel bolts.



Replacement: wheel bearing – Ford Fiesta V JH JD. AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.


5

Remove the wheel.




6

Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.

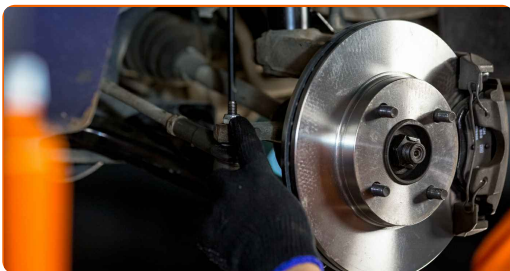


7 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #17. Use a ratchet wrench.

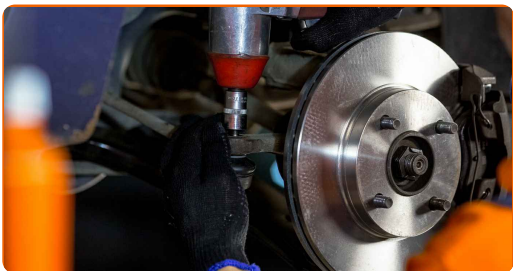


8 Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.



9 Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.

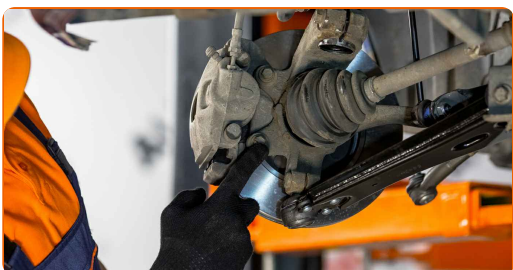


10 Unscrew the caliper bracket fastening. Use a drive socket #13. Use a ratchet wrench.

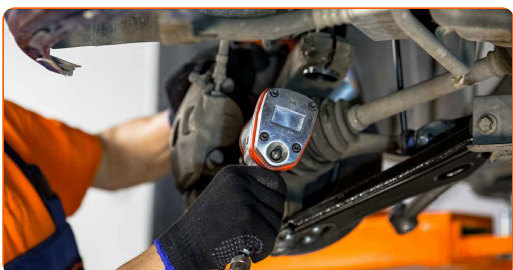

11

Remove the brake caliper together with its bracket.

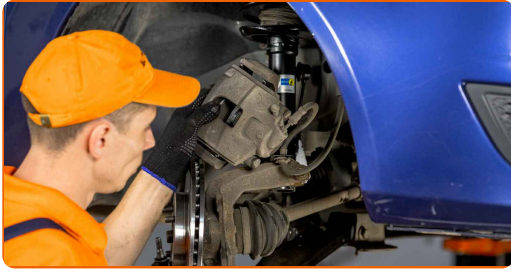


Replacement: wheel bearing – Ford Fiesta V JH JD. Tip from AUTODOC experts:


- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

12


Remove the brake disc.

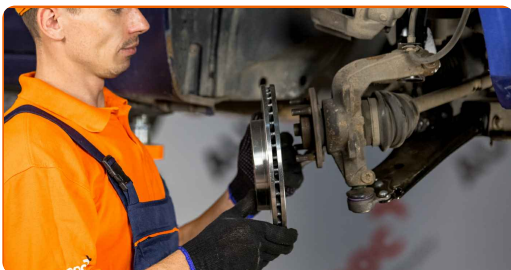

13 Clean the wheel hub fastener. Use a wire brush. Use WD-40 spray.

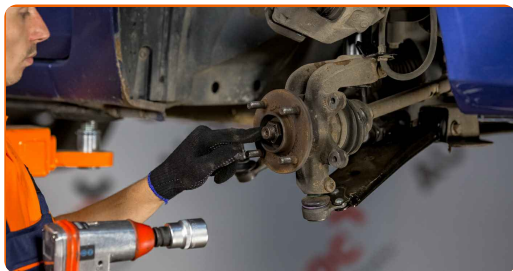

14 Unscrew the wheel hub axle nut. Use a drive socket #32.

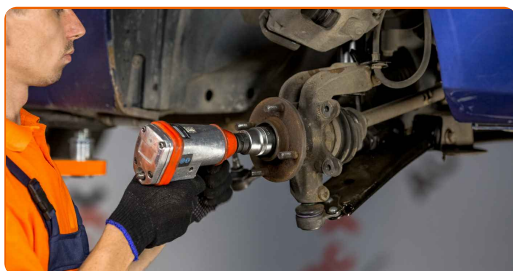


15 Remove the drive shaft. Use a hammer.

Replacement: wheel bearing – Ford Fiesta V JH JD. Tip from AUTODOC:

- Make sure that the drive shaft is not unloaded (when the car is jacked).


16 Clean the fastener connecting the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.

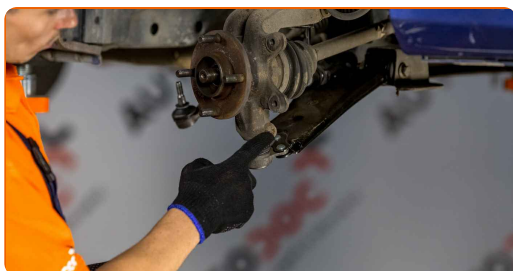


- 17 Unscrew the ball joint fastening to the steering knuckle. Use Torx T50. Use a drive socket #17. Use a ratchet wrench.




- 18 Remove the fastening bolt. Use a hammer.

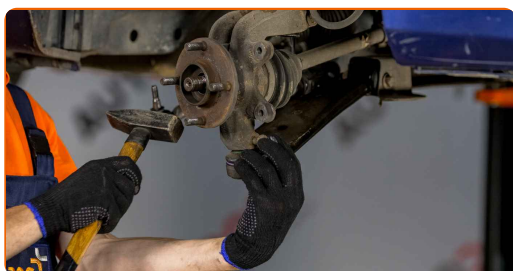


- 19 Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

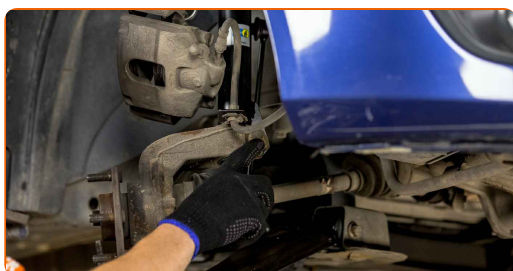


- 20 Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a drive socket #15. Use a ratchet wrench.

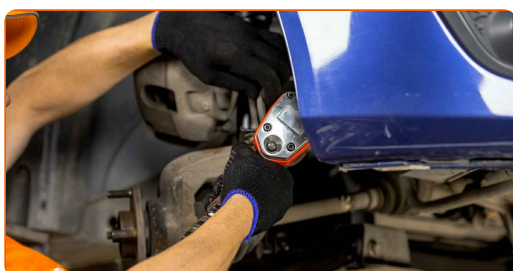


21 Remove the fastening bolt.

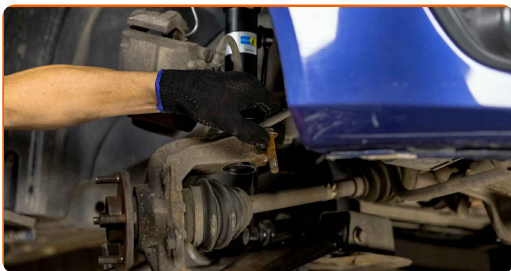


22 Disconnect the lower arm from the steering knuckle. Use a crowbar.

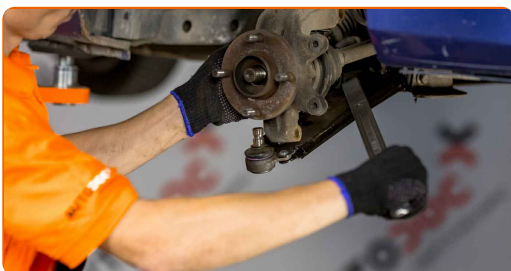


23 Disconnect the steering knuckle from the shock absorber strut. Use a hammer.

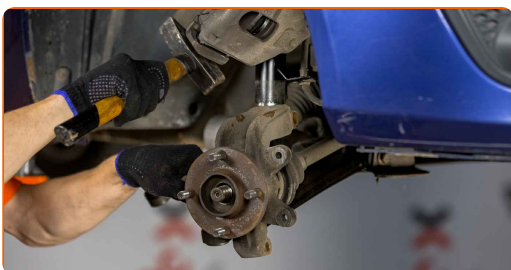

24 Remove the steering knuckle together with the hub.

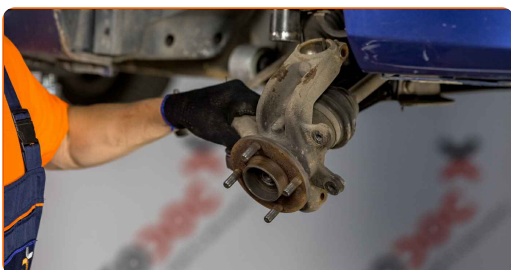

25 Press the wheel hub out from the tapered roller bearing. Use a bush and bearing driver set. Use a hammer.

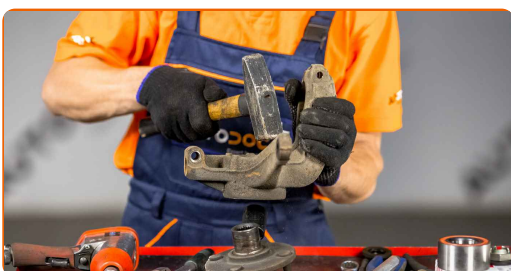

26 Press out the wheel hub bearing. Use a bush and bearing driver set.




27 Clean the hub bearing mounting seat. Use a wire brush. Use WD-40 spray.


28 Press the new bearing in the steering knuckle. Use a bush and bearing driver set. Use a hammer.



29 Press the wheel hub into the bearing inner race. Use a bush and bearing driver set.

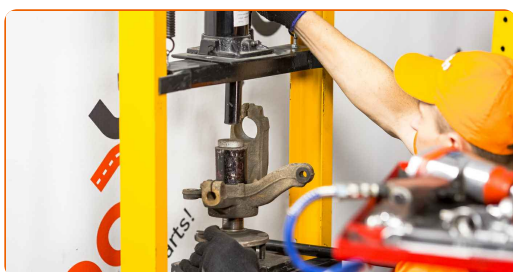

30 Install the steering knuckle with a hub in assembly.

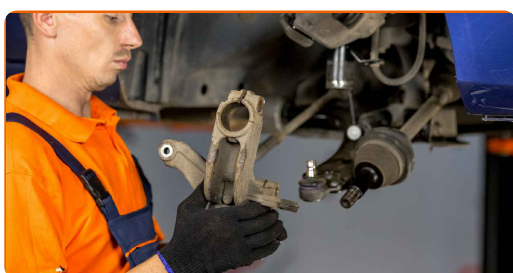

31 Mount the drive shaft into the wheel hub.




32 Fix the shock absorber strut on the steering knuckle.

33 Connect the lower arm to the steering knuckle. Use a hammer.




34 Install the fastening bolts.

35 Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a drive socket #15. Use a torque wrench. Tighten it to 90 Nm torque.

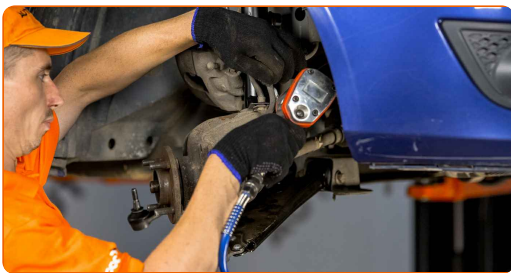

36 Tighten the hub. Use a drive socket #32. Use a torque wrench. Tighten it to 290 nm torque.

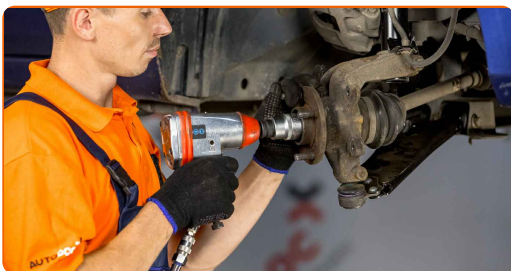

- 37 Tighten the ball joint fastener. Use Torx T50. Use a drive socket #17. Use a torque wrench. Tighten it to 48 nm torque.



- 38 Install the brake disc.




- 39 Clean the mounting seats of the caliper and its bracket. Use a wire brush. Use WD-40 spray.




- 40 Install the brake caliper together with its bracket.




41 Tighten the brake caliper bracket. Use a drive socket #13. Use a torque wrench. Tighten it to 65 Nm torque.

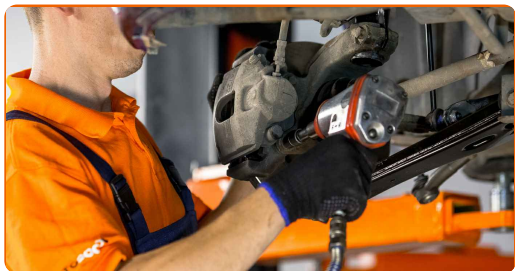


42 Connect the tie rod end to the steering knuckle.

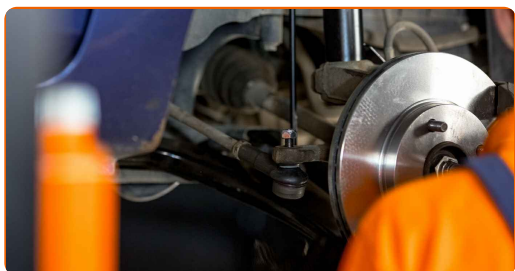

43 Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #17. Use a torque wrench. Tighten it to 48 nm torque.

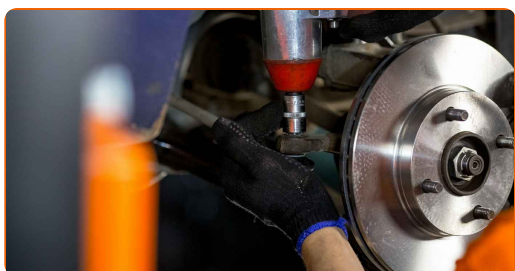

44 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

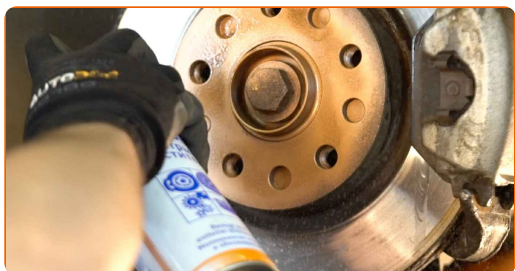

45

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: wheel bearing – Ford Fiesta V JH JD. After applying the spray, wait a few minutes.

46

Install the wheel.



Replacement: wheel bearing – Ford Fiesta V JH JD. AUTODOC experts recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

47


Screw in the wheel bolts. Use wheel impact socket #19.



- 48** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 95 nm torque.



- 49** Remove the jacks and chocks.

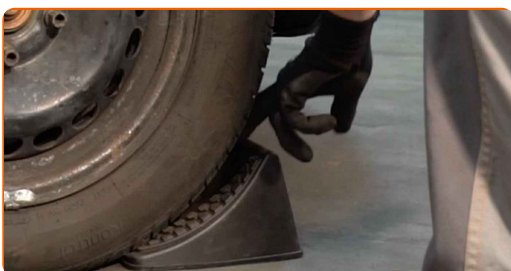

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON **Google Play**

Download on the **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FORD

WHEEL BEARING: A WIDE SELECTION

CHOOSE CAR PARTS FOR FORD FIESTA V JH JD

WHEEL BEARING FOR FORD: BUY NOW

**WHEEL BEARING FOR FORD FIESTA V JH JD: THE BEST
DEALS & OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.