



VIDEO TUTORIAL

Important!

This replacement procedure can be used for:

SKODA FABIA I (6Y2) 1.2, SKODA FABIA I Combi (6Y5) 1.2, SKODA FABIA I
Praktik (6Y5) 1.2, SKODA FABIA I Saloon (6Y3) 1.2

The steps may slightly vary depending on the car design.

REQUIRED TOOLS:



- Wire brush
- WD-40 spray
- Copper grease
- Drive socket # 12
- Drive socket # 16
- Ratchet wrench
- Torque wrench
- Phillips screwdriver
- Fender cover

AUTODOC recommends:

- All work should be done with the engine stopped.


CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1



Open the bonnet.

2

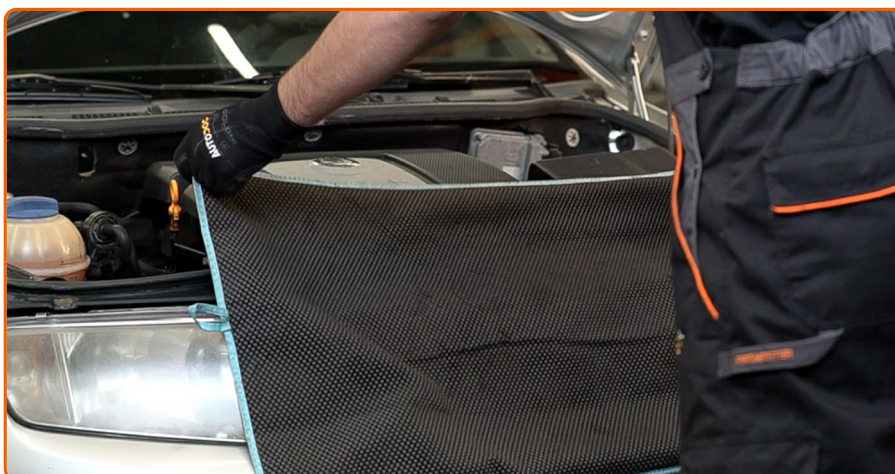

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3

Lift the car using a jack or place it over an inspection pit.

AUTODOC recommends:

- The vehicle must be on even keel, and if it is at an angle, the drain plug must be at the lowest point.

4



Unscrew the fasteners of the lower sound insulation. Use a drive socket #12. Use a Phillips screwdriver.

5



Remove the lower sound insulation.

6



Clean the engine mount fasteners. Use a wire brush. Use WD-40 spray.

7



Unscrew the fastener connecting the engine mount to the gearbox housing. Use a drive socket #16. Use a ratchet wrench.

8



Unscrew the engine mount fastener that connects it to the subframe. Use a drive socket #16. Use a ratchet wrench.

9



Remove the engine mount.

AUTODOC recommends:

- Carefully check the other engine mounts and replace them if necessary.

10



Install the engine mount to its mounting seat.

11



Screw in the engine mount fastener that connects it to the subframe. Use a drive socket #16.

12



Screw in the engine mount fastener that connects it to the gearbox housing. Use a drive socket #16. Use a ratchet wrench.

13.1



Tighten the engine mount fastening bolts.

13.2



Use a drive socket #16. Use a torque wrench. Tighten it to 57 Nm torque.

14



Treat the engine mount fasteners. Use copper grease.

15



Install the lower sound insulation.

16



Screw in the fasteners of the lower sound insulation. Use a drive socket #12. Use a Phillips screwdriver.

17

Lower the car.

18



Remove the fender protection cover.

19



Close the hood.

**DID YOU FIND THESE INSTRUCTIONS
HELPFUL?**

YES

NO



BECOME A MEMBER OF AUTODOC CLUB!

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC
APP

Download

 Google play

 App Store


A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR



BUY SPARE PARTS FOR SKODA



ENGINE MOUNTS: A WIDE SELECTION

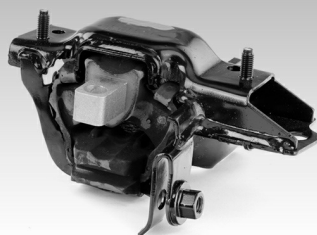

CHOOSE CAR PARTS FOR SKODA FABIA I (6Y5)



ENGINE MOUNTS FOR SKODA: BUY NOW



ŠKODA



ENGINE MOUNTS FOR SKODA FABIA I (6Y5): THE BEST DEALS & OFFERS



Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2018 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by Autodoc GmbH.