VIDEO TUTORIAL

ⓘ Important!

This replacement procedure can be used for:
OPEL COMBO Box Body / Estate 1.3 CDTI 16V, OPEL CORSA C (X01) 1.3 CDTI (F08, F68), OPEL CORSA C Box (X01) 1.3 CDTI 16V (F08, W5L)

The steps may slightly vary depending on the car design.

REQUIRED TOOLS:

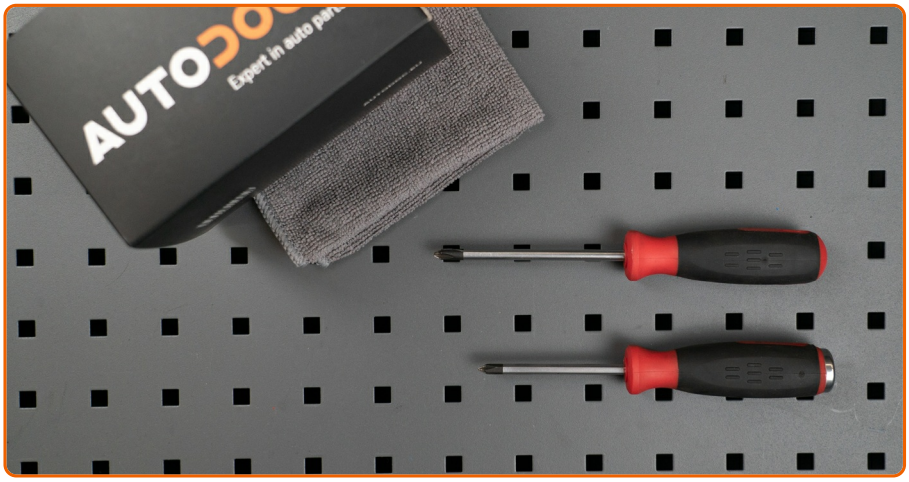

- Flat Screwdriver
- Hydraulic transmission jack

AUTODOC recommends:

- Right and left gas struts of the boot lid should be replaced simultaneously.
- The replacement procedure is identical for the right and left gas struts of the boot lid.
- All work should be done with the engine stopped.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Open the boot lid.

2

Support the boot lid. Use a hydraulic transmission jack.

3

Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.

4

Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.

AUTODOC recommends:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.

5

Remove the boot lid gas strut.

6

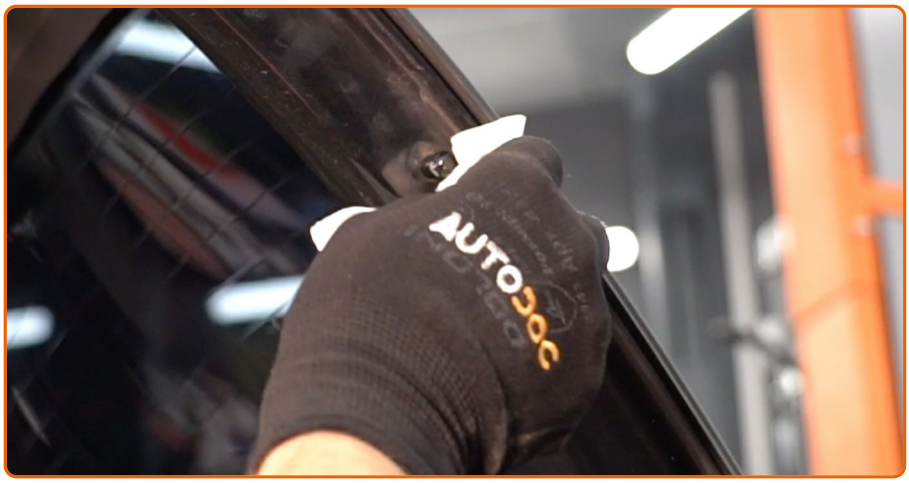

Clean the mounting seats of the boot strut.

7

Install the new boot lid gas strut.

AUTODOC recommends:

- To avoid any injuries, be sure to hold the boot lid while installing the gas strut.

8

Snap on the circlip connecting the gas strut to the boot lid.

9

Snap on the circlip connecting the gas strut to the car body.

10

Remove the hydraulic transmission jack.

AUTODOC recommends:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.
- Check the working condition of the boot lid gas springs after they are installed.

11

Close the lid of the luggage compartment.

DID YOU FIND THESE INSTRUCTIONS HELPFUL?

YES NO

BECOME A MEMBER OF AUTODOC CLUB!

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

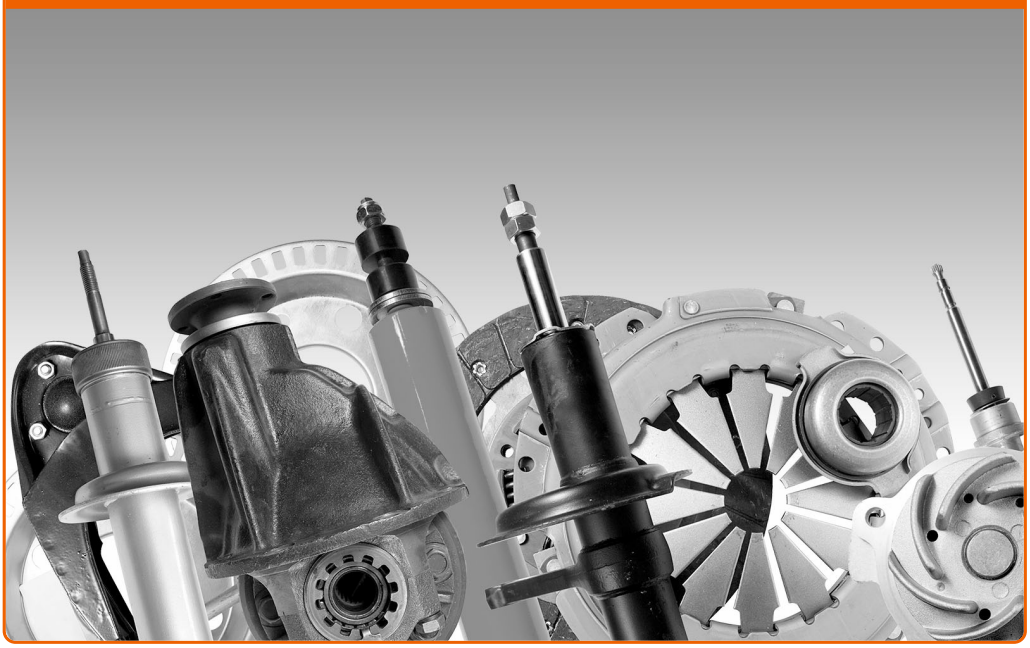

BUY SPARE PARTS FOR OPEL

BOOT GAS SPRINGS : A WIDE SELECTION



CHOOSE CAR PARTS FOR OPEL CORSA C (F08, F68)

BOOT GAS SPRINGS FOR OPEL: BUY NOW

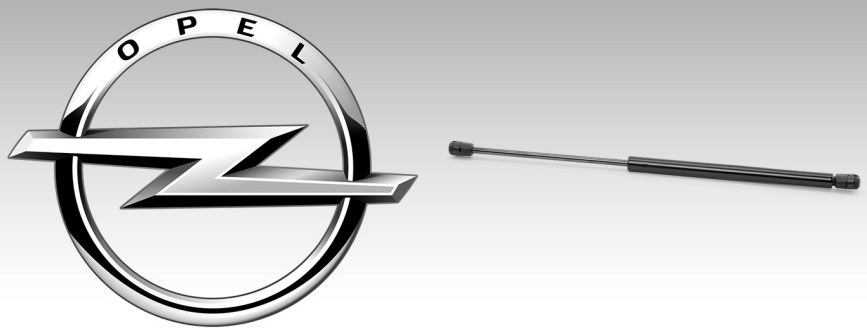

BOOT GAS SPRINGS FOR OPEL CORSA C (F08, F68): THE BEST DEALS & OFFERS

ⓘ Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2018 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by Autodoc GmbH.