



How to change front  
lower arm on **VW Touran**  
**1T1 1T2** – replacement  
guide

## VIDEO TUTORIAL




### Important!

This replacement procedure can be used for:

VW Touran I (1T3) 1.2 TSI, VW Caddy III Van (2KA, 2KH, 2CA, 2CH) 1.9 TDI 4motion, VW Golf Plus / Crossgolf (5M1, 521) 1.6 BiFuel, VW Golf VI Hatchback (5K1) 1.6 MultiFuel, VW Golf Plus / Crossgolf (5M1, 521) 1.6 TDI, VW Golf VI Hatchback (5K1) 2.0 R 4motion, VW Jetta Mk6 (162, 163, AV3, AV2) 1.2 TSI, VW Jetta Mk6 (162, 163, AV3, AV2) 1.6 TDI, VW Jetta Mk6 (162, 163, AV3, AV2) 2.0 TDI, VW Golf VI Variant (AJ5) 1.6 MultiFuel, VW Golf Plus / Crossgolf (5M1, 521) 1.2 TSI, VW Golf VI Convertible (517) 1.2 TSI, VW Golf VI Convertible (517) 1.4 TSI, VW Golf VI Convertible (517) 2.0 GTI, VW Golf VI Convertible (517) 1.6 TDI, (+ 126)

The steps may slightly vary depending on the car design.

**REPLACEMENT: FRONT LOWER ARM – VW TOURAN  
1T1 1T2. TOOLS YOU MIGHT NEED:**

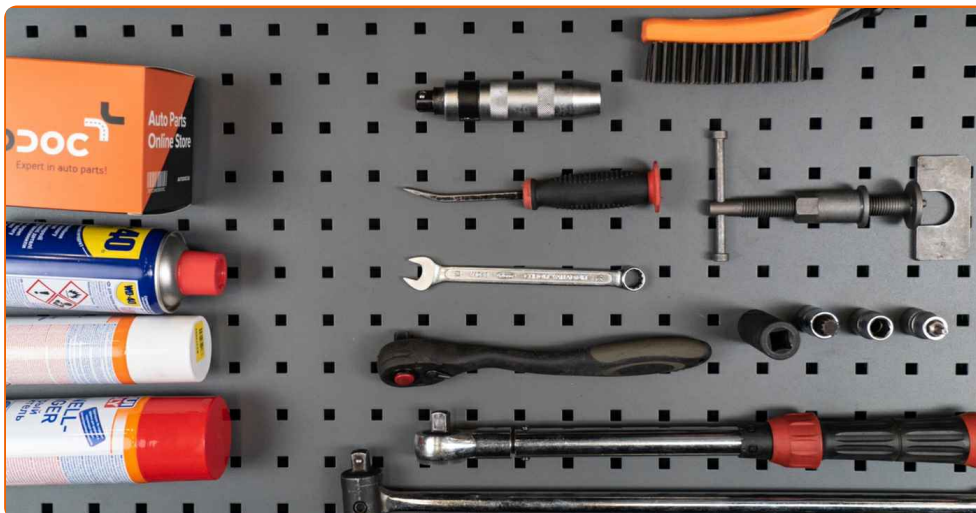

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 16
- Drive socket # 18
- Torx bit T25
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Crow bar
- Tap wrench
- Rubber mallet
- Hydraulic transmission jack
- Wheel chock

**BUY TOOLS**

Replacement: front lower arm – VW Touran 1T1 1T2. AUTODOC recommends:


- The replacement procedure is identical for the left and right lower control arms.
- All work should be done with the engine stopped.

## REPLACEMENT: FRONT LOWER ARM – VW TOURAN 1T1 1T2. TAKE THE FOLLOWING STEPS:

**1** Secure the wheels with chocks.



**2** Loosen the wheel mounting bolts. Use wheel impact socket #17.

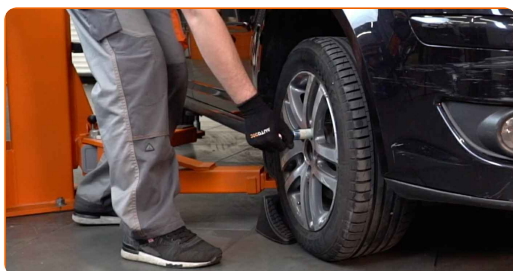

**3** Raise the front of the car and secure on supports.




**4** Unscrew the wheel bolts.




Replacement: front lower arm – VW Touran 1T1 1T2. Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

**5** Remove the wheel.

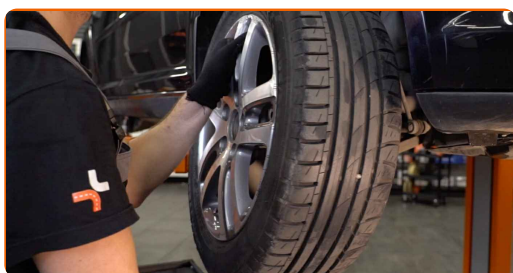

**6** Undo the fasteners of the oil pan lower cover. Use Torx T25.

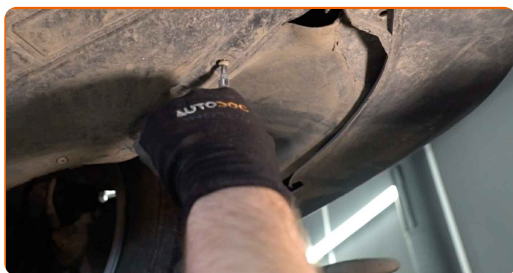

**7** Remove the oil pan cover.



8

Clean all joints of the arm. Use a wire brush. Use WD-40 spray.




**AUTODOC recommends:**

- Replacement: front lower arm – VW Touran 1T1 1T2. After applying the spray, wait a few minutes.
- Wear protective goggles.


9

Unscrew the rear fastener connecting the control arm to the subframe. Use a drive socket #16. Use a tap wrench.

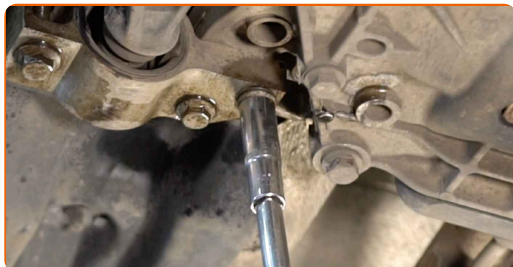


10

Unscrew the rear fastener connecting the control arm to the car body. Use a drive socket #18. Use a tap wrench.

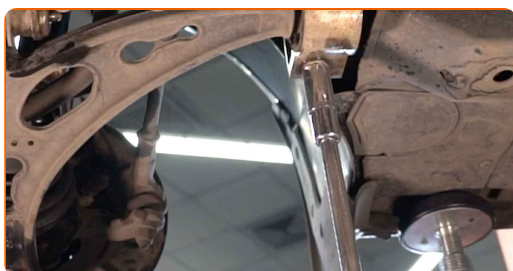





**11** Unscrew the front arm fastener. Use a drive socket #18. Use a tap wrench.

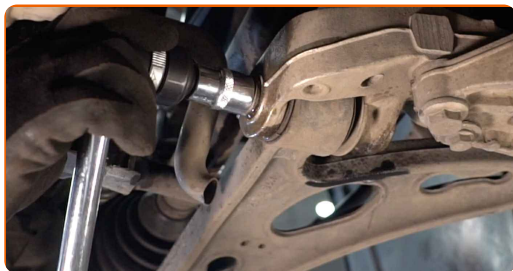


**12** Remove the fastening bolts. Use a drive socket #18. Use a drive socket #16.

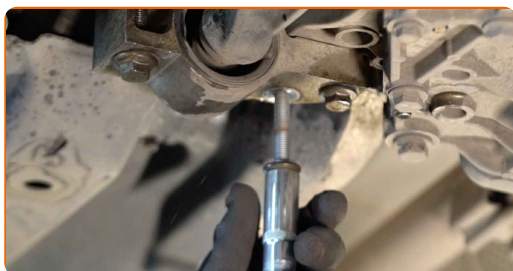

**13** Unscrew the fastener connecting the ball joint to the suspension control arm. Use a drive socket #16. Use a tap wrench.

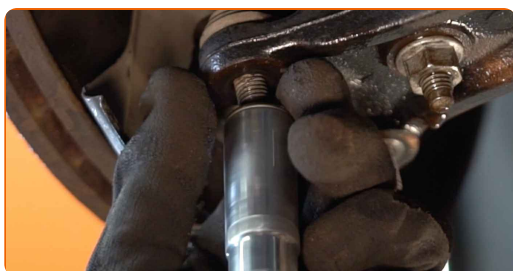


**14** Remove the fastening bolt. Use a drive socket #18.

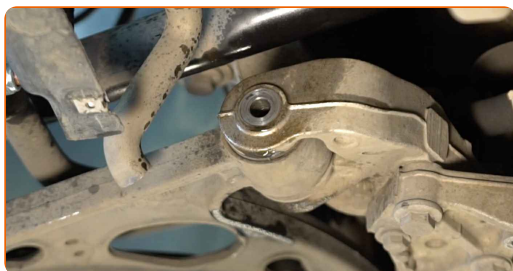

**15** Disconnect the spherical joint from the arm. Use a crowbar.

**16**

Remove the arm. Use a crowbar.

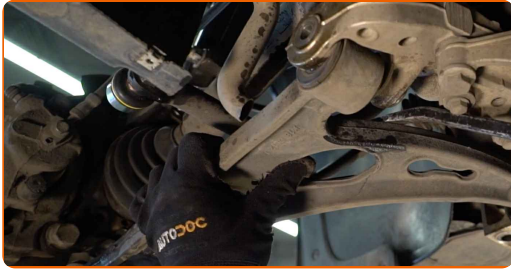

**17**

Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.



**18**

Install a new arm. Use a rubber mallet.



Replacement: front lower arm – VW Touran 1T1 1T2. AUTODOC experts recommend:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.



**19** Install the fastening bolt. Use a drive socket #18.



**20** Attach the ball joint to the control arm.

**21** Install the fastening bolts. Use a crowbar.



**22** Screw the rear fastener connecting the control arm to the car body. Use a drive socket #18. Use a ratchet wrench.



**23** Screw the rear fastener connecting the control arm to the subframe. Use a drive socket #16. Use a ratchet wrench.




24

Screw the fasteners of the ball joint. Use a drive socket #16. Use a ratchet wrench.




25

Tighten the ball joint fastener. Use a drive socket #16. Use a torque wrench. Tighten it to 60 nm torque.

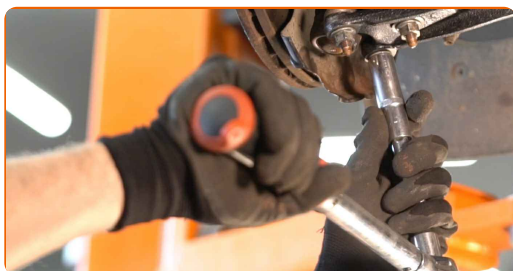

26

Support the arm. Use a hydraulic transmission jack.

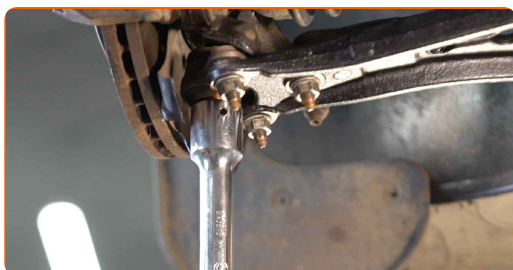

27

Tighten the front fastener connecting the control arm to the subframe. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.+180°



**AUTODOC recommends:**

- Important! Be sure to use new fasteners.


- 28** Tighten the rear fastener connecting the arm to the car body. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque. +90°



**AUTODOC recommends:**

- Important! Be sure to use new fasteners.


- 29** Tighten the rear fastener connecting the arm to the body subframe. Use a drive socket #16. Use a torque wrench. Tighten it to 50 Nm torque. +90°

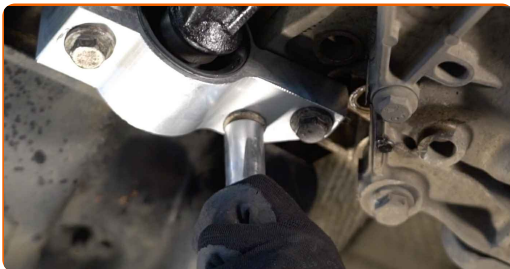

**AUTODOC recommends:**

- Important! Be sure to use new fasteners.

- 30** Remove the support from under the arm.

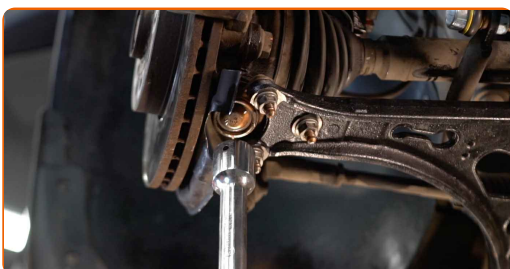

**AUTODOC recommends:**

- VW Touran 1T1 1T2 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

**31**

Treat all joints of the arm. Use copper grease.



**32**

Reinstall the oil pan lower cover.



**33**

Tighten the fasteners of the oil pan lower cover. Use Torx T25.



**34**

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



35

Clean the brake disk surface. Use a brake cleaner.



Replacement: front lower arm – VW Touran 1T1 1T2. Tip from AUTODOC:

- After applying the spray, wait a few minutes.

36


Install the wheel.

AUTODOC recommends:


- Important! Hold the wheel while screwing in the fastening bolts. VW Touran 1T1 1T2

37

Screw in the wheel bolts. Use wheel impact socket #17.

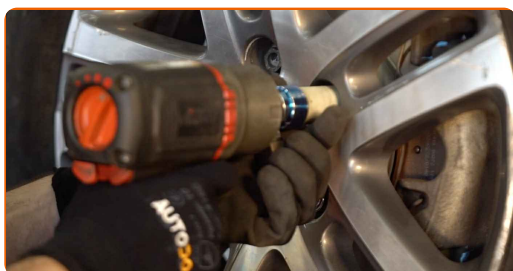

- 38** Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 nm torque.

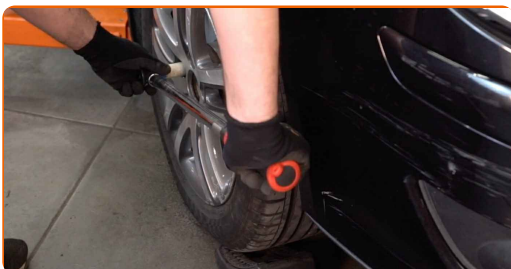

- 39** Remove the jacks and chocks.



**WELL DONE!** 

[VIEW MORE TUTORIALS](#)



# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON **Google Play**

Download on the **App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR VW**

**CONTROL ARM: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR VW TOURAN 1T1 1T2**

**CONTROL ARM FOR VW: BUY NOW**

**CONTROL ARM FOR VW TOURAN 1T1 1T2: THE BEST DEALS  
& OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.