



How to change front
brake discs on **Renault**
Twingo C06 –
replacement guide

VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

RENAULT SUPER 5 (B/C40_) 1.0, RENAULT SUPER 5 (B/C40_) 1.1, RENAULT RAPID Box (F40_, G40_) 1.1, RENAULT RAPID Box (F40_, G40_) 1.6 D, RENAULT TWINGO I (C06_) 1.2, RENAULT CLIO I (B/C57_, 5/357_) 1.1, RENAULT RAPID Box (F40_, G40_) 1.0, RENAULT CLIO I Box (S57_) 1.1, RENAULT SUPER 5 Box (S40_) 1.0, RENAULT SUPER 5 Box (S40_) 1.1, RENAULT TWINGO I Box (S06_) 1.2

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE DISCS – RENAULT TWINGO
C06. TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torx bit T30
- Wheel impact socket #17
- Brake caliper wind back tool
- Torque wrench
- Round-nose pliers
- Impact screwdriver
- Crow bar
- Wheel chock

BUY TOOLS

Replacement: brake discs – Renault Twingo C06. AUTODOC recommends:

- Replace the brake disks on the car Renault Twingo C06 in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car – Renault Twingo C06 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Open the bonnet. Unscrew the brake fluid reservoir cap.



2


Secure the wheels with chocks.



3 Loosen the wheel mounting bolts. Use wheel impact socket #17.



4 Raise the front of the car and secure on supports.

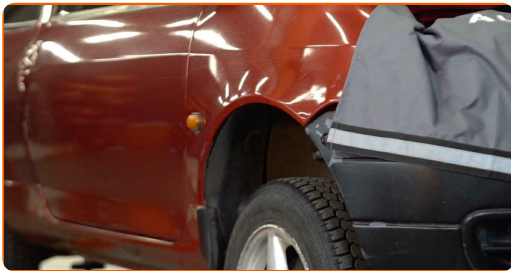


5 Unscrew the wheel bolts.




Replacement: brake discs – Renault Twingo C06. Tip from AUTODOC:

- To avoid injury, hold up the wheel when unscrewing the bolts.

6 Remove the wheel.

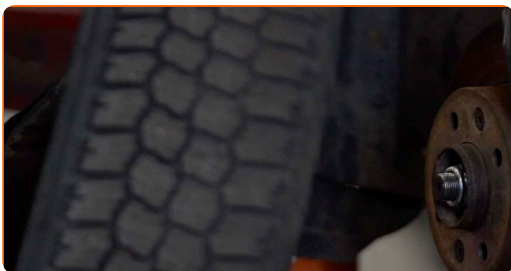

7 Spread the brake pads. Use a crowbar.

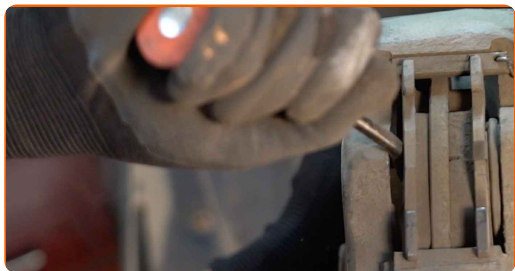


8 Remove the brake pad retaining pin. Use a crowbar.



9 Remove the retainer of the brake pads.



10 Remove the brake pads.

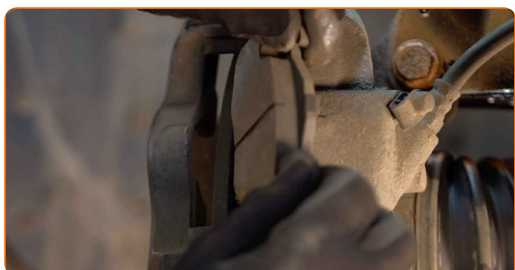

11 Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.



12

Unscrew the brake disc fastening. Use Torx T30. Use an impact screwdriver.



13

Remove the brake disc.



14


Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake discs – Renault Twingo C06. After applying the spray, wait a few minutes.


15 Treat the brake caliper piston. Use a brake cleaner.

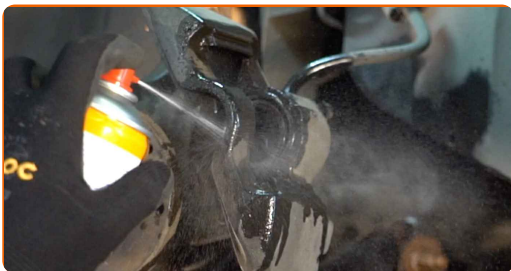

Replacement: brake discs – Renault Twingo C06. AUTODOC experts recommend:

- After applying the spray, wait a few minutes.


16 Press in the brake caliper piston. Use brake caliper wind back tool.

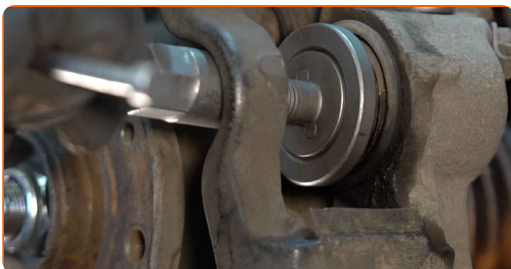


17 Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.




18 Install the brake disc.

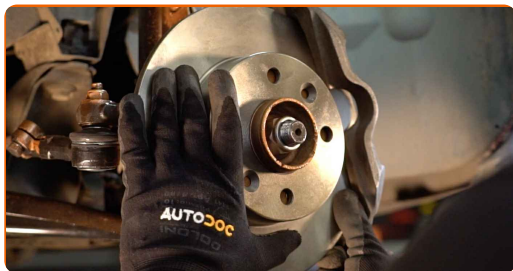

19 Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 15 Nm torque.

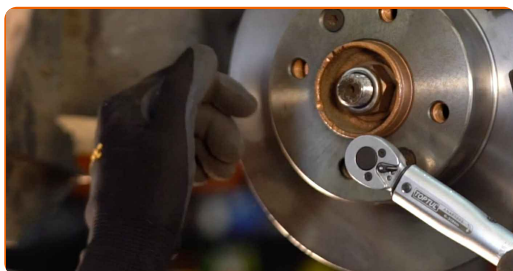


20 Install the brake pads.

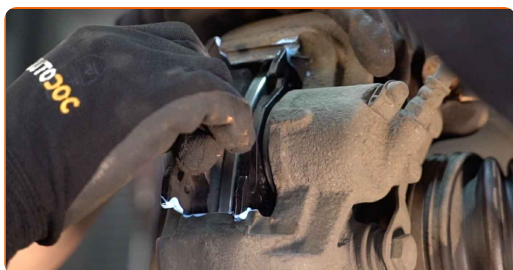

21 Install the retainer of the brake pads.




22 Install the brake pad retaining pin. Use round-nose pliers.

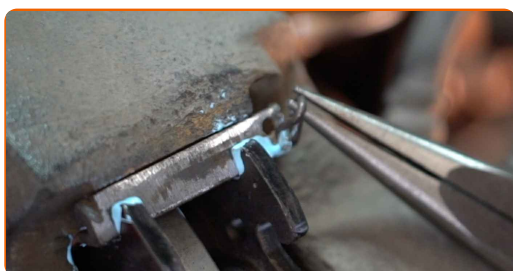


23

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

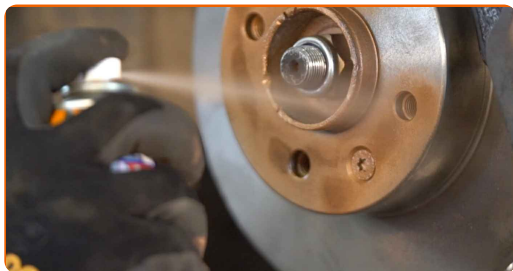

24

Clean the brake disk surface. Use a brake cleaner.

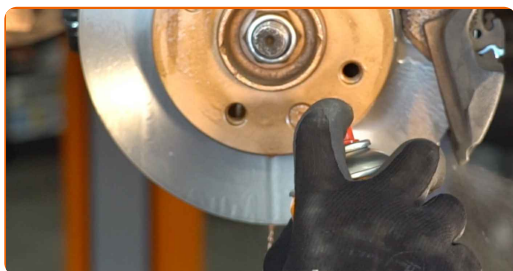


AUTODOC recommends:

- Replacement: brake discs – Renault Twingo C06. After applying the spray, wait a few minutes.

25


Install the wheel.

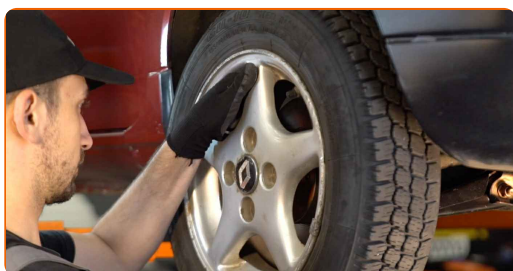


Replacement: brake discs – Renault Twingo C06. Tip from AUTODOC:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


26 Screw in the wheel bolts. Use wheel impact socket #17.

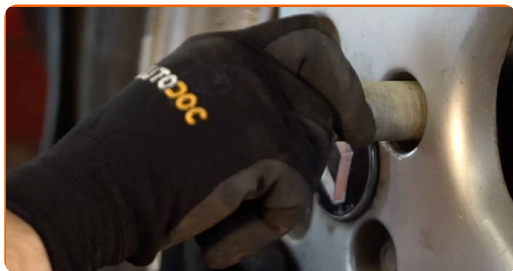

27 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 90 Nm torque.

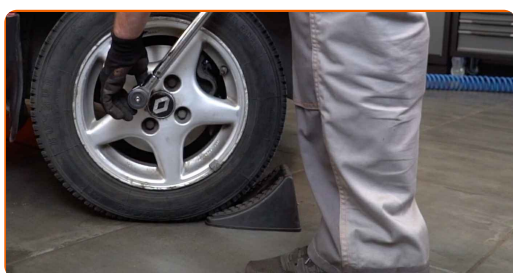


28 Remove the jacks and chocks.

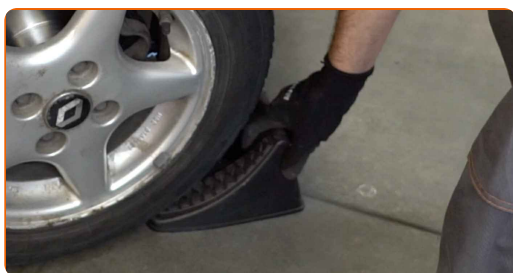

AUTODOC recommends:

- Important! Replacement: brake discs – Renault Twingo C06. Check the brake fluid level in the reservoir and top up if necessary.

29 Tighten the brake fluid reservoir cap.

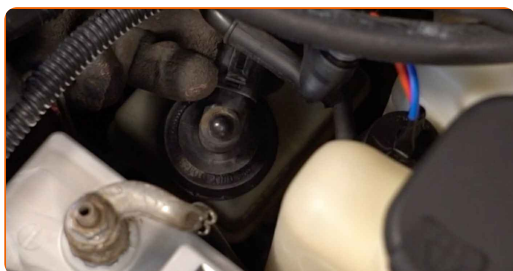

Replacement: brake discs – Renault Twingo C06. Tip from AUTODOC experts:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.

30

Close the hood.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR RENAULT

BRAKE DISCS: A WIDE SELECTION

CHOOSE CAR PARTS FOR RENAULT TWINGO C06

BRAKE DISCS FOR RENAULT: BUY NOW

**BRAKE DISCS FOR RENAULT TWINGO C06: THE BEST
DEALS & OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.