



How to change
serpentine belt on **Ford**
Focus MK2 –
replacement guide

VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

FORD C-Max II (DXA/CB7, DXA/CEU) 1.6 TDCi, FORD Grand C-Max (DXA/CB7, DXA/CEU) 1.6 TDCi, FORD FOCUS III Saloon 1.6 TDCi, FORD FOCUS III 1.6 TDCi, FORD FOCUS III Turnier 1.6 TDCi, FORD Fiesta Mk6 Hatchback (JA8, JR8) 1.4 TDCi, FORD Fiesta Mk6 Van 1.4 TDCi, FORD Fiesta Mk6 Van 1.6 TDCi, FORD Focus II Estate (DA_, FFS, DS) 1.6 TDCi, FORD Focus II Hatchback (DA_, HCP, DP) 1.6 TDCi, FORD C-MAX (DM2) 1.6 TDCi, FORD Focus C-Max (DM2) 1.6 TDCi, FORD Focus II Saloon (DB_, FCH, DH) 1.6 TDCi, FORD Fiesta Mk5 Hatchback (JH1, JD1, JH3, JD3) 1.6 TDCi, FORD FUSION (JU_) 1.6 TDCi, (+ 40)

The steps may slightly vary depending on the car design.

REPLACEMENT: SERPENTINE BELT – FORD FOCUS
MK2. TOOLS YOU NEED:



• Combination spanner #15

• Fender cover


BUY TOOLS

Replacement: serpentine belt – Ford Focus MK2. AUTODOC recommends:


- All work should be done with the engine stopped.

REPLACEMENT: SERPENTINE BELT – FORD FOCUS MK2. RECOMMENDED SEQUENCE OF STEPS:

1 Open the bonnet.

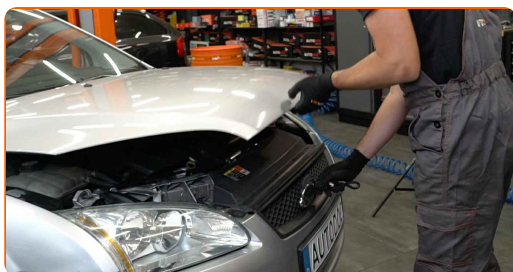

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

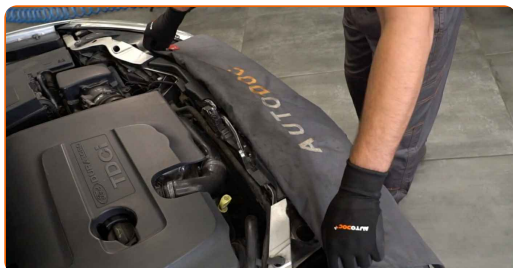

3 Lift the car using a jack or place it over an inspection pit.

4 Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #15.



5 Remove the V-ribbed belt.




Replacement: serpentine belt – Ford Focus MK2. Tip from AUTODOC:

- Check the condition of the tensioner pulley and idler pulley. Replace them if necessary.


6 Return the tensioner pulley to its initial position. Use a combination spanner #15.

7 Install the V-ribbed belt.

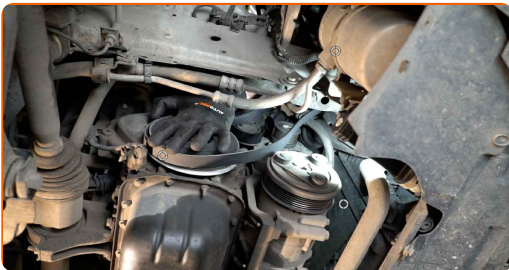

8 Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #15.

9 Place the V-ribbed belt on the tensioner pulley.

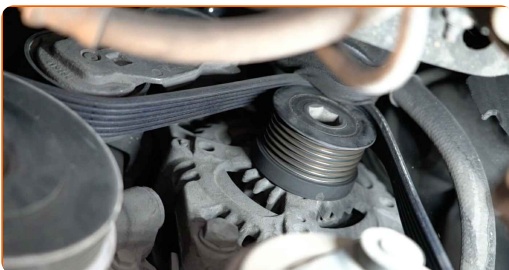


Replacement: serpentine belt – Ford Focus MK2. Tip:

- Make sure that the V-ribbed belt fits all pulleys snugly.

10

Return the tensioner pulley to its initial position. Use a combination spanner #15.

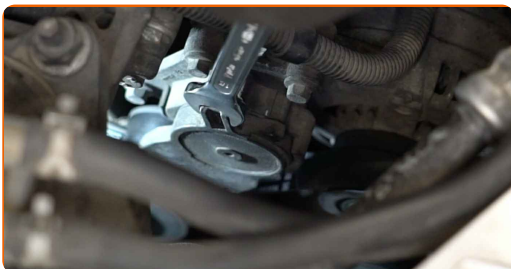


11

Lower the car.


12

Remove the fender protection cover.

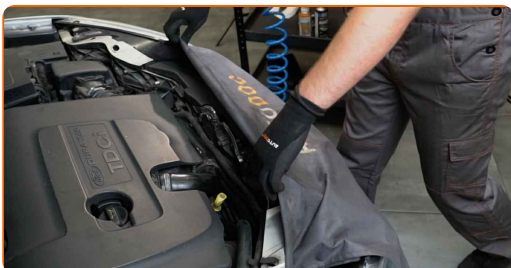

13

Close the hood.

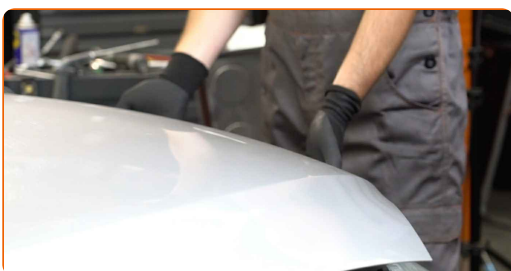

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FORD

SERPENTINE BELT: A WIDE SELECTION

CHOOSE CAR PARTS FOR FORD FOCUS MK2

SERPENTINE BELT FOR FORD: BUY NOW

**SERPENTINE BELT FOR FORD FOCUS MK2: THE BEST
DEALS & OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.