



How to change track rod
end on **Renault Clio 2** –
replacement guide

VIDEO TUTORIAL




 Important!

This replacement procedure can be used for:

RENAULT Kangoo I Express (FC) 1.5 dCi, RENAULT Kangoo I Express (FC) 1.6 16V bivalent, RENAULT Megane I Hatchback (BA) 1.4 e, RENAULT Megane I Hatchback (BA) 2.0 i, RENAULT Megane I Hatchback (BA) 1.9 D Eco, RENAULT Modus / Grand Modus (F, JP) 1.5 dCi 75, RENAULT Modus / Grand Modus (F, JP) 1.5 dCi 90, RENAULT Twingo II Hatchback 1.5 dCi 75, RENAULT Twingo II Hatchback 1.5 dCi 90, RENAULT Megane I Hatchback (BA) 1.9 dT, RENAULT Megane I Coach (DA) 2.0 i, RENAULT Megane I Coach (DA) 2.0 16V, RENAULT Megane I Hatchback (BA) 1.4 Eco, RENAULT Megane I Classic (LA) 1.4, RENAULT Megane I Classic (LA) 1.9 TDI, (+ 172)

The steps may slightly vary depending on the car design.

REPLACEMENT: TRACK ROD END – RENAULT CLIO 2.
 TOOLS YOU MIGHT NEED:

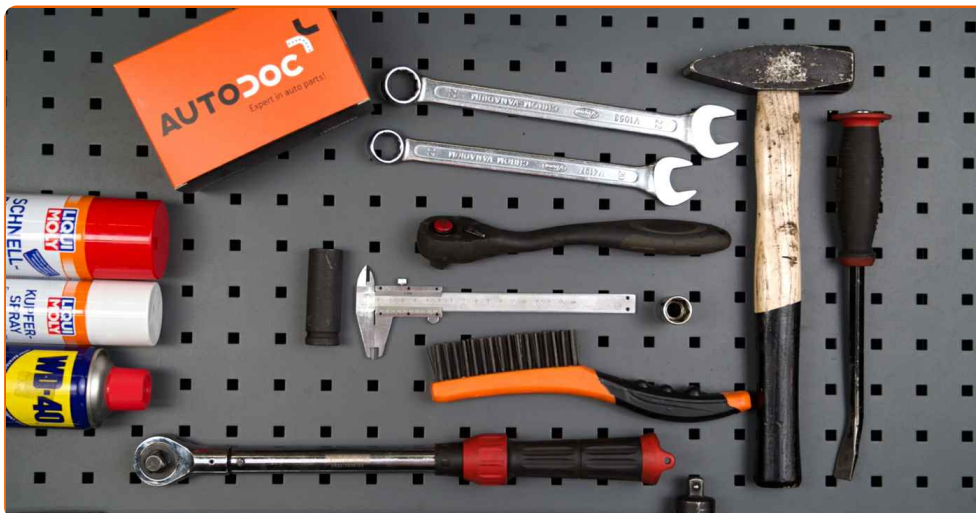

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 17
- Combination spanner #20
- Combination spanner #22
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Vernier caliper
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

Replacement: track rod end – Renault Clio 2. Tip from AUTODOC:

- Replace tie rod ends in pairs.
- The replacement procedure is identical for the right and left tie rod ends.
- During the installation process, use only new bolts and nuts.
- Please note: all work on the car – Renault Clio 2 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Secure the wheels with chocks.

**2**


Loosen the wheel mounting bolts. Use wheel impact socket #19.



3 Raise the front of the car and secure on supports.




4 Unscrew the wheel bolts.

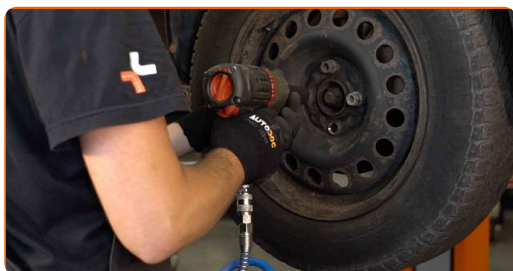


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Renault Clio 2

5 Remove the wheel.

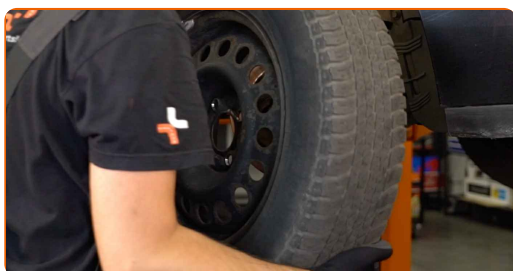


6 Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.

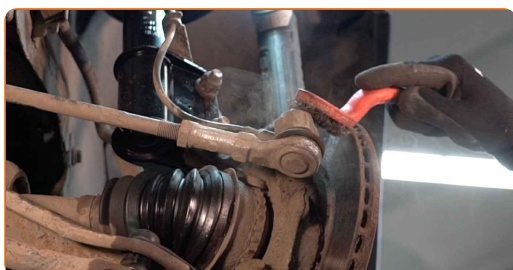

- 7 When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.




- 8 Loosen the lock nut securing the tie rod end to the tie rod. Use a combination spanner #20. Use a combination spanner #22.

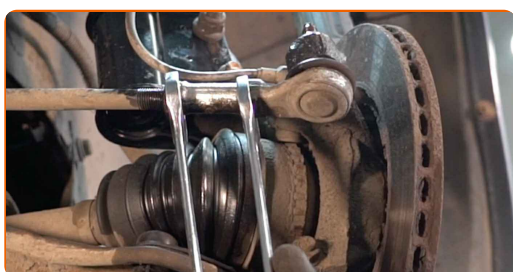


- 9 Support the ball joint of the steering tie-rod end. Use a hydraulic transmission jack.



- 10 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #17. Use a ratchet wrench.

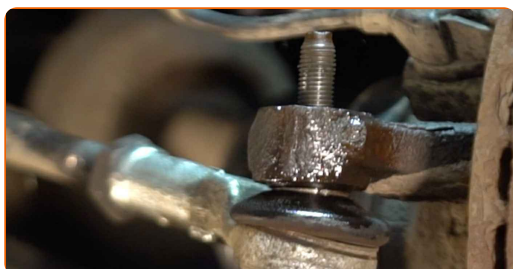


11 Remove the hydraulic transmission jack.

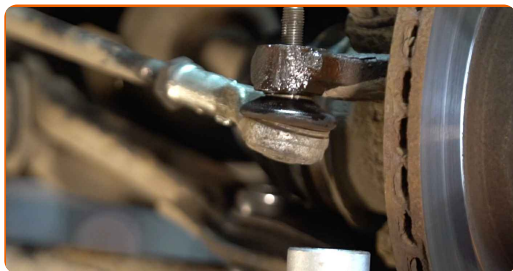


AUTODOC recommends:

- Replacement: track rod end – Renault Clio 2. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


12 Disconnect the tie rod end from the steering knuckle.

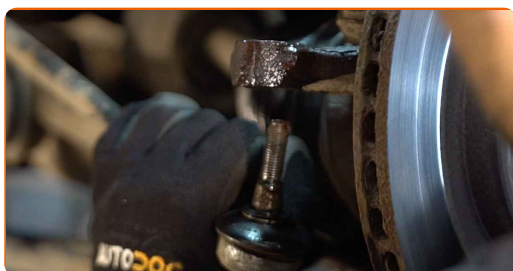

13 Screw the end out of the tie rod.

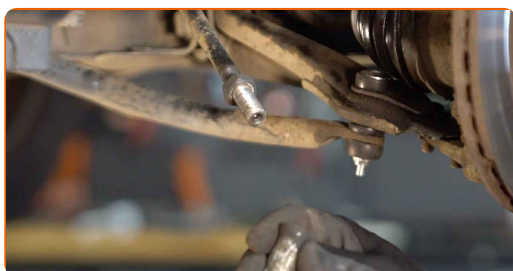

14 Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.

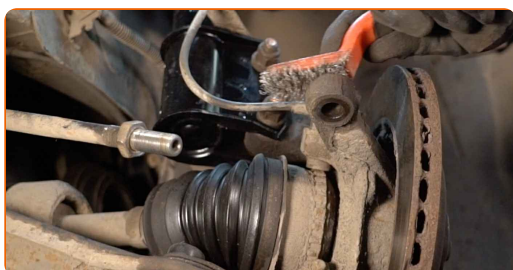

15 Treat the threaded part of the tie rod. Use copper grease.


16 Screw on a new tie rod end.




Replacement: track rod end – Renault Clio 2. AUTODOC experts recommend:

- While installing the steering rod end remember to make the same number of turns or to leave the same length of thread showing as per your measurements.

17 Connect the tie rod end to the steering knuckle.

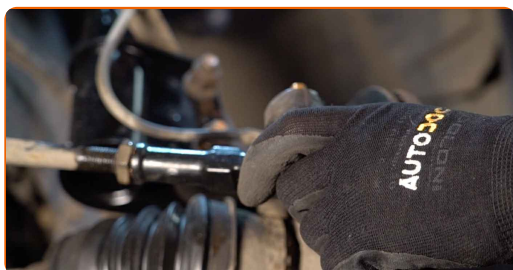

18 Screw on the fastening nut that connects the tie rod end to the steering knuckle. Use a drive socket #17.

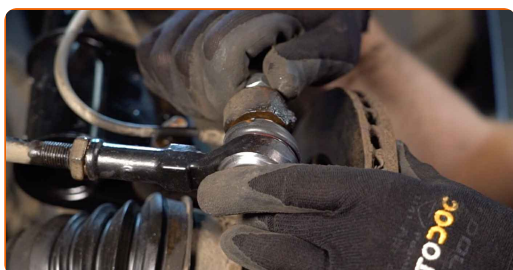


19

When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.




20

Screw on the tie rod end jam nut. Use a combination spanner #20. Use a combination spanner #22.

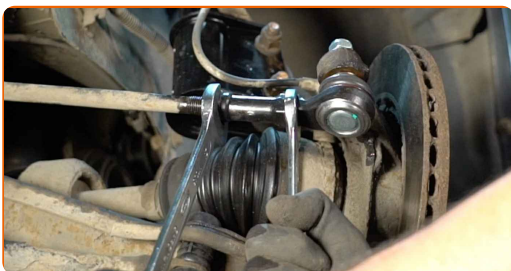


21

When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.

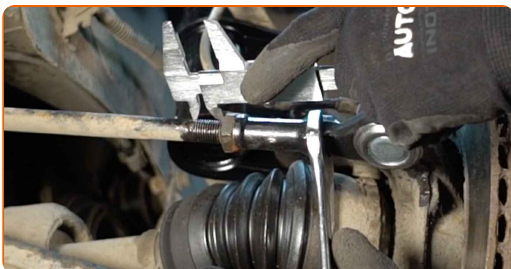

22


Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #17. Use a torque wrench. Tighten it to 37 nm torque.

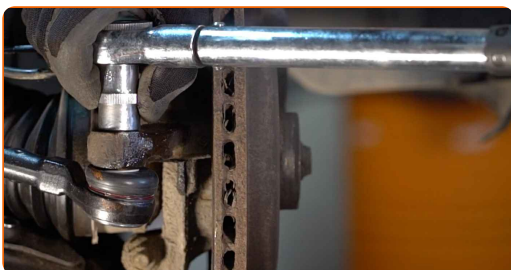


- 23** Tighten the tie rod end locknut. Use a combination spanner #20. Use a combination spanner #22. Use a torque wrench. Tighten it to 55 nm torque.



- 24** Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.

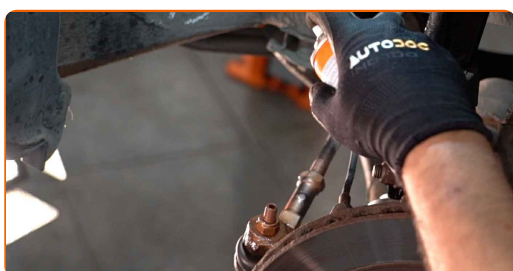

- 25** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

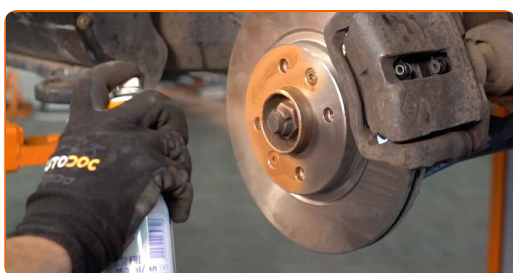

- 26** Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: track rod end – Renault Clio 2. After applying the spray, wait a few minutes.

27

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Renault Clio 2

28

Screw in the wheel bolts. Use wheel impact socket #19.



29

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 90 nm torque.



Replacement: track rod end – Renault Clio 2. Professionals recommend:

- Check and adjust wheel alignment if necessary.

30

Remove the jacks and chocks.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR RENAULT

TRACK ROD END: A WIDE SELECTION

CHOOSE CAR PARTS FOR RENAULT CLIO 2

TRACK ROD END FOR RENAULT: BUY NOW

TRACK ROD END FOR RENAULT CLIO 2: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.