



How to change rear
brake pads on **VW Caddy**
3 van – replacement
guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

VW Passat Saloon (362) 1.4 TSI, VW Passat Saloon (362) 1.8 TSI, VW Passat Saloon (362) 2.0 TSI, VW Passat Saloon (362) 1.6 TDI, VW Passat Saloon (362) 2.0 TDI, VW Passat Saloon (362) 2.0 TDI 4motion, VW Passat Saloon (362) 1.4 TSI EcoFuel, VW Passat Variant (365) 1.4 TSI, VW Passat Variant (365) 1.8 TSI, VW Passat Variant (365) 1.6 TDI, VW Passat Variant (365) 2.0 TSI, VW Passat Variant (365) 2.0 TDI, VW Passat Variant (365) 2.0 TDI 4motion, VW Passat Variant (365) 1.4 TSI EcoFuel, VW Caddy III Van (2KA, 2KH, 2CA, 2CH) 1.9 TDI 4motion, (+ 142)

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE PADS – VW CADDY 3 VAN.
TOOLS YOU NEED:



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Copper grease
- Torque wrench
- Combination spanner #15
- Drive socket # 13
- Wheel impact socket #17
- Ratchet wrench
- Brake caliper wind back tool
- Crow bar
- Wheel chock


BUY TOOLS

Replacement: brake pads – VW Caddy 3 van. AUTODOC experts recommend:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: BRAKE PADS – VW CADDY 3 VAN. RECOMMENDED SEQUENCE OF STEPS:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.

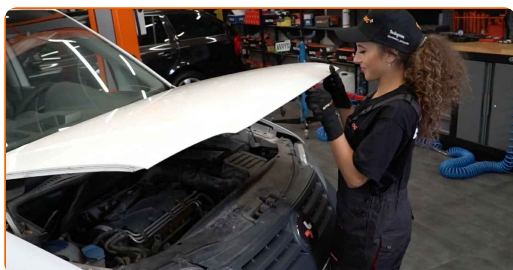


2 Secure the wheels with chocks.


3 Loosen the wheel mounting bolts. Use wheel impact socket #17.



4 Raise the rear of the car and secure on supports.

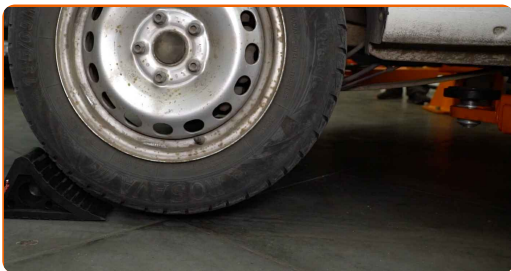

5 Unscrew the wheel bolts.

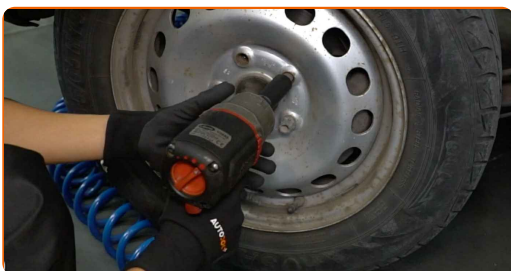


AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. VW Caddy 3 van

6 Remove the wheel.




7 Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.

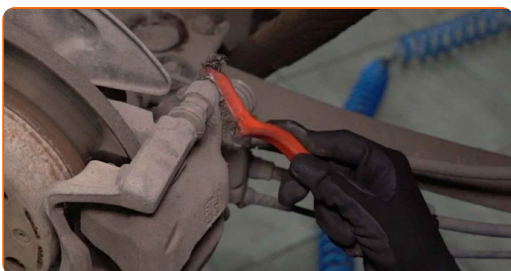

- 8** Unscrew the brake caliper fastening. Use a combination spanner #15. Use a drive socket #13. Use a ratchet wrench.



- 9** Remove the brake caliper. Use a crowbar.

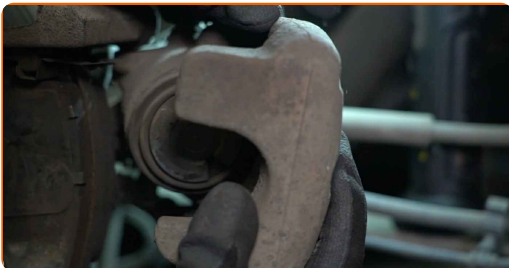

Replacement: brake pads – VW Caddy 3 van. AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

10

Remove the brake pads. Use a crowbar.



Replacement: brake pads – VW Caddy 3 van. Tip:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

11

Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.



Replacement: brake pads – VW Caddy 3 van. AUTODOC experts recommend:

- Make sure the disc surface is clean before installing the pads.

12

Install new brake pads.




Replacement: brake pads – VW Caddy 3 van. Professionals recommend:

- Make sure the pads are installed with the linings facing the disc.

13

Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.

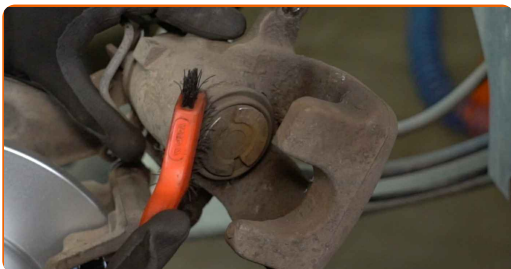


AUTODOC recommends:


- Replacement: brake pads – VW Caddy 3 van. After applying the spray, wait a few minutes.

14


Press in the brake caliper piston. Use brake caliper wind back tool.

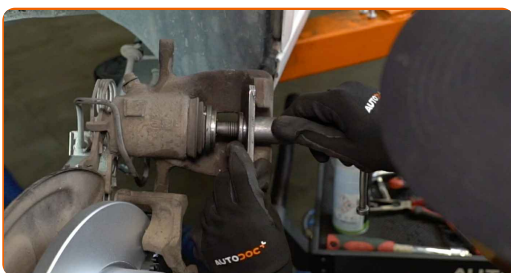


- 15** Install the brake caliper and fix it. Use a combination spanner #15. Use a drive socket #13. Use a torque wrench. Tighten it to 35 Nm torque.

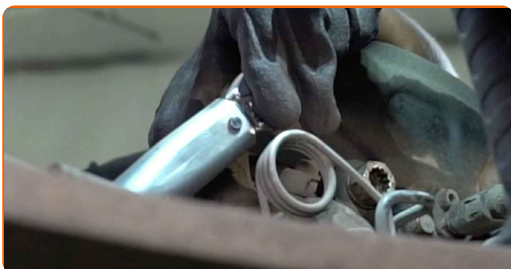

- 16** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

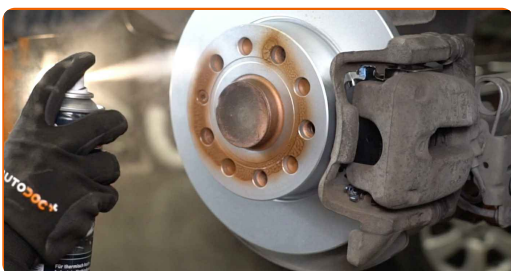


- 17** Clean the brake disk surface. Use a brake cleaner.

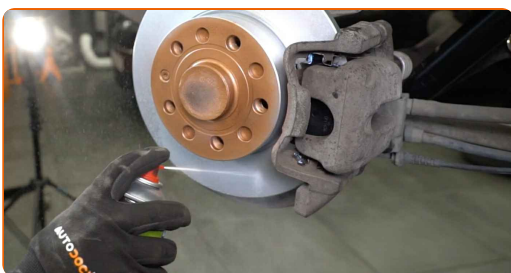

Replacement: brake pads – VW Caddy 3 van. Tip:

- After applying the spray, wait a few minutes.

- 18** Install the wheel.

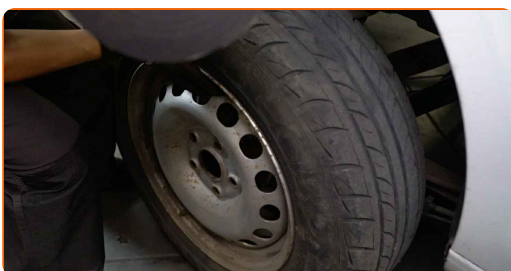

AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. VW Caddy 3 van

19

Screw in the wheel bolts. Use wheel impact socket #17.



20

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



21

Remove the jacks and chocks.




Replacement: brake pads – VW Caddy 3 van. Tip from AUTODOC experts:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.
- Check the brake fluid level in the expansion tank and refill if necessary.

22

Tighten the brake fluid reservoir cap. Close the hood.

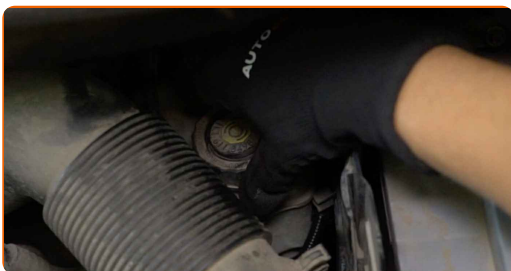

Replacement: brake pads – VW Caddy 3 van. AUTODOC experts recommend:

- Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unnecessary and sharp braking to a stop.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

BRAKE PADS: A WIDE SELECTION

CHOOSE CAR PARTS FOR VW CADDY 3 VAN

BRAKE PADS FOR VW: BUY NOW

BRAKE PADS FOR VW CADDY 3 VAN: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.