- AUTODOC CLUB

How to change track rod end on **Peugeot 307 SW** – replacement guide



VIDEO TUTORIAL



(i) Important!

This replacement procedure can be used for:

PEUGEOT 205 I Hatchback 1.6 GTI, PEUGEOT 104 Hatchback 1.0, PEUGEOT 104 Hatchback 0.9, PEUGEOT 104 Hatchback 1.1, PEUGEOT 104 Coupe 0.9, PEUGEOT 104 Coupe 1.1, PEUGEOT 104 Hatchback 1.2, PEUGEOT 104 Hatchback 1.4, PEUGEOT 104 Coupe 1.4, PEUGEOT 205 I Hatchback 1.0, PEUGEOT 205 I Hatchback 1.1, PEUGEOT 205 II Hatchback 1.1, PEUGEOT 205 II Hatchback 1.4, PEUGEOT 205 Convertible 1.4 CJ, PEUGEOT 205 I Hatchback 1.4, (+ 208)

The steps may slightly vary depending on the car design.



REPLACEMENT: TRACK ROD END – PEUGEOT 307 SW. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #16
- Combination spanner #22
- Drive socket # 16

- Drive socket # 17
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Ball joint puller
- Vernier caliper
- Wheel chock

BUY TOOLS



Replacement: track rod end – Peugeot 307 SW. AUTODOC experts recommend:

- Replace tie rod ends in pairs.
- The replacement procedure is identical for the right and left tie rod ends.
- All work should be done with the engine stopped.

REPLACEMENT: TRACK ROD END – PEUGEOT 307 SW. TAKE THE FOLLOWING STEPS:



Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



+ AUTODOC CLUB





Raise the front of the car and secure on supports.



4

Unscrew the wheel bolts.



Replacement: track rod end – Peugeot 307 SW. Tip from AUTODOC experts:

• To avoid injury, hold up the wheel when unscrewing the bolts.



Remove the wheel.



6

Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.





When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.



8

Loosen the lock nut securing the tie rod end to the tie rod. Use a combination spanner #16. Use a combination spanner #22.



9

Unscrew the end fastening nut to the steering knuckle. Use a drive socket #16. Use a tap wrench.



10

Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.





Screw the end out of the tie rod.



12

Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.



13

Screw on a new tie rod end.



Replacement: track rod end – Peugeot 307 SW. AUTODOC experts recommend:

• While installing the steering rod end remember to make the same number of turns or to leave the same length of thread showing as per your measurements.



When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.



15

Connect the tie rod end to the steering knuckle.



16

Screw on the fastening nut that connects the tie rod end to the steering knuckle. Use a drive socket #17. Use a ratchet wrench.



17

Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #17. Use a torque wrench. Tighten it to 35 nm torque.





Tighten the tie rod end locknut. Use a combination spanner #16. Use a combination spanner #22. Use a torque wrench. Tighten it to 60 nm torque.



19

When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.



20

Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.



21

Clean the wheel rim mounting seat. Use a wire brush.





Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



23

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

 Replacement: track rod end – Peugeot 307 SW. After applying the spray, wait a few minutes.

24

Install the wheel.



Replacement: track rod end – Peugeot 307 SW. Tip from AUTODOC experts:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.

+ AUTODOC CLUB



25

Screw in the wheel bolts. Use wheel impact socket #17.



26

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 100 nm torque.



Replacement: track rod end – Peugeot 307 SW. AUTODOC experts recommend:

• Check and adjust wheel alignment if necessary.



Remove the jacks and chocks.






VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

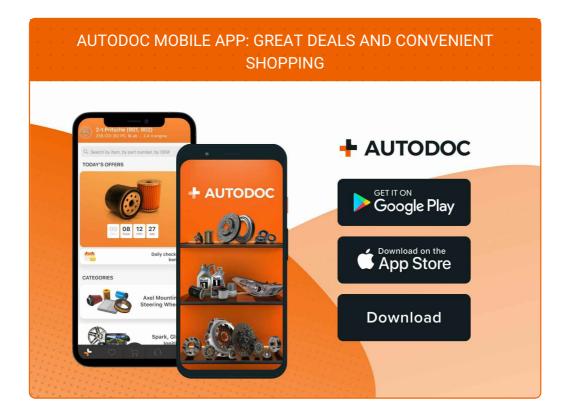

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR PEUGEOT

TRACK ROD END: A WIDE SELECTION



CHOOSE CAR PARTS FOR PEUGEOT 307 SW

TRACK ROD END FOR PEUGEOT: BUY NOW

TRACK ROD END FOR PEUGEOT 307 SW: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.