



How to change front anti
roll bar links on **Renault**
Clio 3 – replacement
guide

VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

RENAULT Trafic II Minibus (JL) 2.5 dCi 115, RENAULT Vel Satis 2.2 dCi (BJ0M), RENAULT Laguna II Hatchback (BG) 1.6 16V, RENAULT Laguna II Hatchback (BG) 1.8 16V, RENAULT Laguna II Hatchback (BG) 3.0 V6 24V, RENAULT Laguna II Hatchback (BG) 1.9 dCi, RENAULT Laguna II Sport Tourer (KG) 1.6 16V, RENAULT Laguna II Sport Tourer (KG) 1.8 16V, RENAULT Laguna II Sport Tourer (KG) 3.0 V6 24V, RENAULT Laguna II Sport Tourer (KG) 1.9 dCi, RENAULT Trafic II Minibus (JL) 1.9 dCi 80, RENAULT Trafic II Minibus (JL) 1.9 dCi 100, RENAULT Trafic II Minibus (JL) 2.0, RENAULT Trafic II Van (FL) 2.0, RENAULT Trafic II Van (FL) 1.9 dCi 80, (+ 62)

The steps may slightly vary depending on the car design.

REPLACEMENT: ANTI ROLL BAR LINKS – RENAULT CLIO 3. TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #16
- Drive socket # 16
- Drive socket # 17
- HEX bit No.H6.
- Wheel impact socket #17
- Ratchet wrench
- Wheel chock

BUY TOOLS

Replacement: anti roll bar links – Renault Clio 3. Tip from AUTODOC:

- Replace the stabiliser links on Renault Clio 3 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Warning! Shut down the engine before starting any work – Renault Clio 3

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Secure the wheels with chocks.



2


Loosen the wheel mounting bolts. Use wheel impact socket #17.



3 Raise the front of the car and secure on supports.




4 Unscrew the wheel bolts.

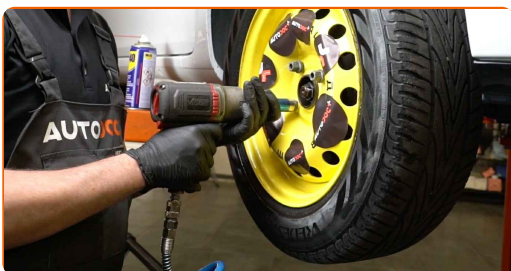


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Renault Clio 3

5 Remove the wheel.

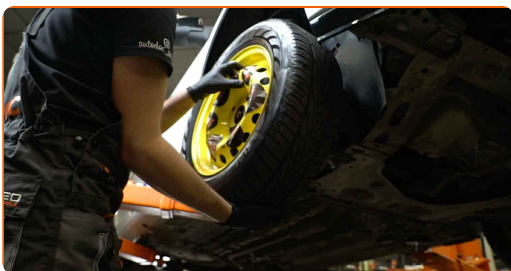

6 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

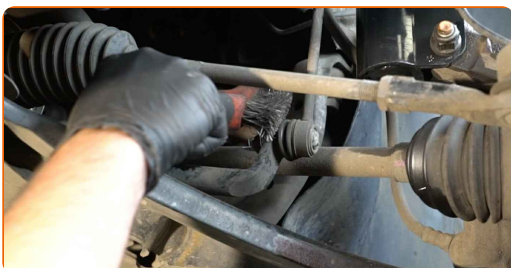

- 7** Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #16. Use HEX No.H6. Use a ratchet wrench.



- 8** Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #16. Use a ratchet wrench.



- 9** Remove the stabilizer rod.



Replacement: anti roll bar links – Renault Clio 3. Tip:

- Examine stabiliser bushes. Replace them if needed.

10 Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



11 Install the transverse stabilizer link.




12 Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #17. Use a torque wrench. Tighten it to 44 Nm torque.



13 Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 44 Nm torque.




14 Treat all joints of the stabiliser link. Use copper grease.

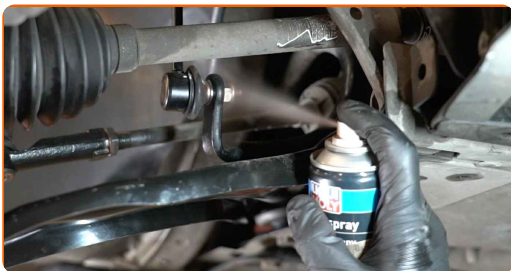

15 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.




16 Clean the brake disk surface. Use a brake cleaner.

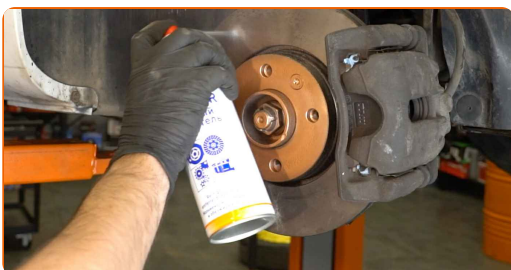

Replacement: anti roll bar links – Renault Clio 3. Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.

17 Install the wheel.

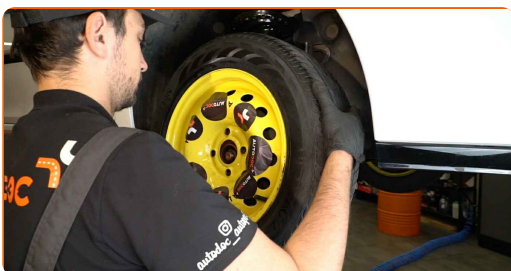

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Renault Clio 3


18

Screw in the wheel bolts. Use wheel impact socket #17.




19

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 105 nm torque.

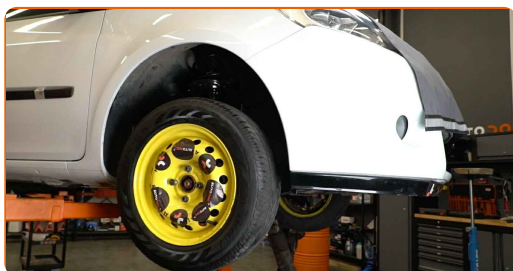

20

Remove the jacks and chocks.

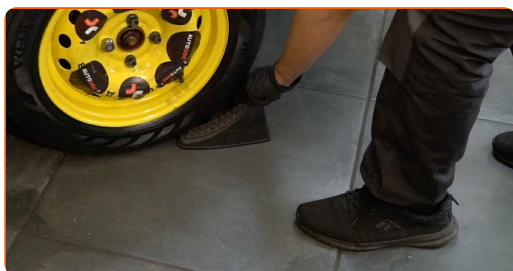

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR RENAULT

ANTI ROLL BAR LINKS: A WIDE SELECTION

CHOOSE CAR PARTS FOR RENAULT CLIO 3

ANTI ROLL BAR LINKS FOR RENAULT: BUY NOW

ANTI ROLL BAR LINKS FOR RENAULT CLIO 3: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.