



How to change track rod
end on **Peugeot 407**
saloon – replacement
guide

VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

PEUGEOT 407 Saloon 2.0, PEUGEOT 407 Saloon 2.2, PEUGEOT 407 Saloon 3.0, PEUGEOT 407 Saloon 2.0 HDi 135, PEUGEOT 407 Saloon 1.8, PEUGEOT 407 SW 1.8, PEUGEOT 407 SW 2.0, PEUGEOT 407 SW 2.2, PEUGEOT 407 SW 3.0, PEUGEOT 407 SW 1.6 HDi 110, PEUGEOT 407 SW 2.0 HDi 135, PEUGEOT 407 Coupe 2.2 16V, PEUGEOT 407 Coupe 3.0 V6, PEUGEOT 407 SW 1.8 16V, PEUGEOT 407 SW 2.0 16V, (+ 10)

The steps may slightly vary depending on the car design.

REPLACEMENT: TRACK ROD END – PEUGEOT 407 SALOON. TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #19
- Combination spanner #24
- Drive socket # 19
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Vernier caliper
- Ball joint puller
- Wheel chock

BUY TOOLS

Replacement: track rod end – Peugeot 407 saloon. Tip from AUTODOC experts:

- Replace tie rod ends in pairs.
- The replacement procedure is identical for the right and left tie rod ends.
- All work should be done with the engine stopped.

REPLACEMENT: TRACK ROD END – PEUGEOT 407 SALOON. USE THE FOLLOWING PROCEDURE:


1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #19.

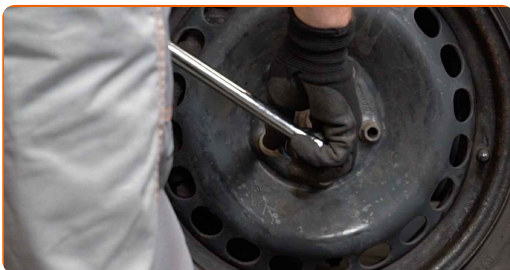


3

Raise the front of the car and secure on supports.

4

Unscrew the wheel bolts.

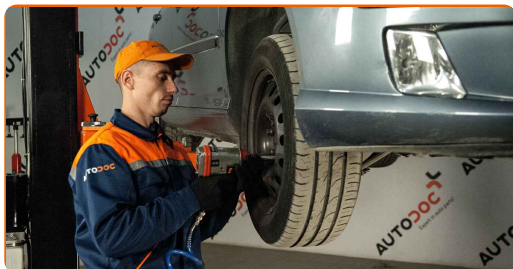


AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Peugeot 407 saloon


5

Remove the wheel.

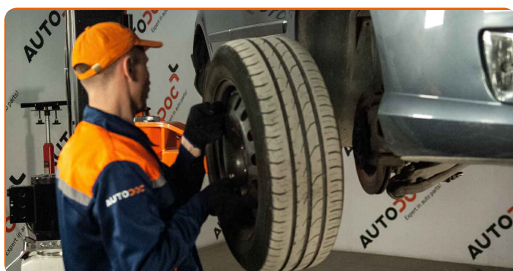

6


When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.

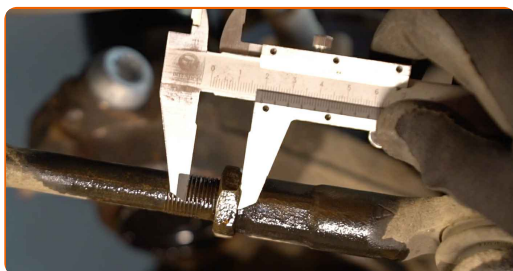


- 7 Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.



- 8 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #19. Use a ratchet wrench.

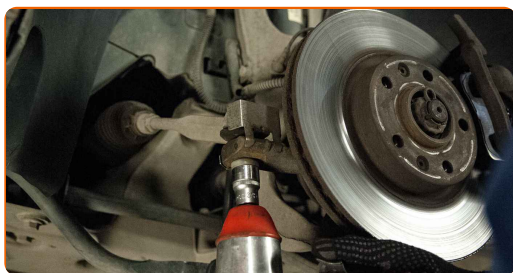


- 9 Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.

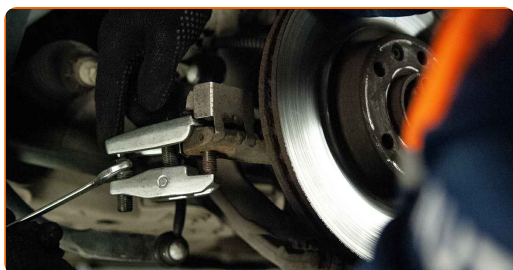


- 10 Clean the lock nut that connects the tie rod to the tie rod end. Use a wire brush. Use WD-40 spray.


- 11 Loosen the lock nut securing the tie rod end to the tie rod. Use a combination spanner #19. Use a combination spanner #24.

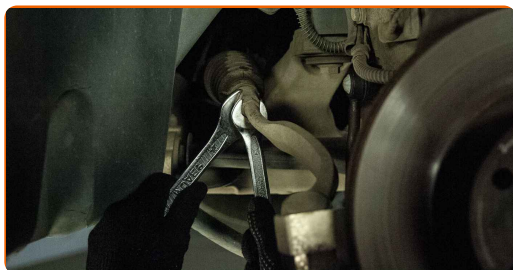


12 Screw the end out of the tie rod.

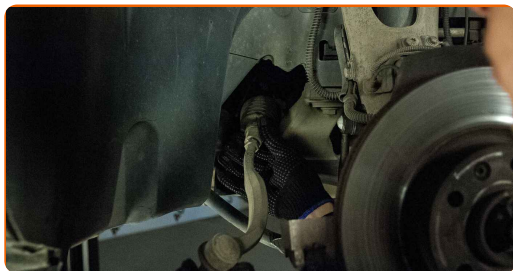

13 Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.

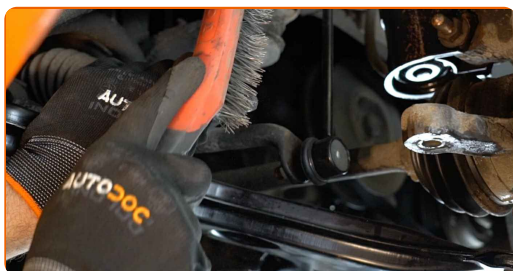


14 Screw on a new tie rod end.

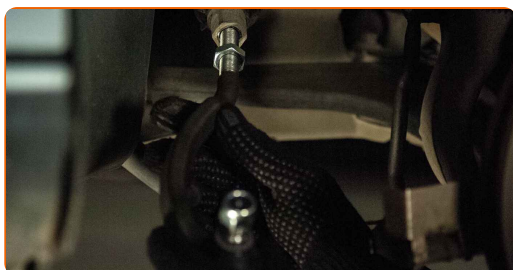


Replacement: track rod end – Peugeot 407 saloon. AUTODOC recommends:

- While installing the steering rod end remember to make the same number of turns or to leave the same length of thread showing as per your measurements.


15 Connect the tie rod end to the steering knuckle.

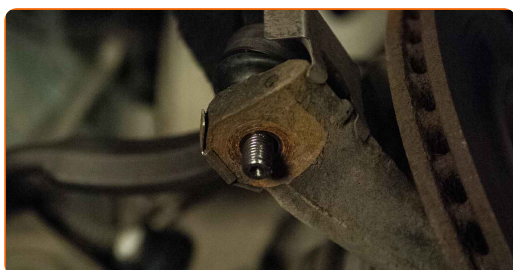


- 16 Tighten the tie rod end locknut. Use a combination spanner #19. Use a combination spanner #24. Use a torque wrench. Tighten it to 60 nm torque.

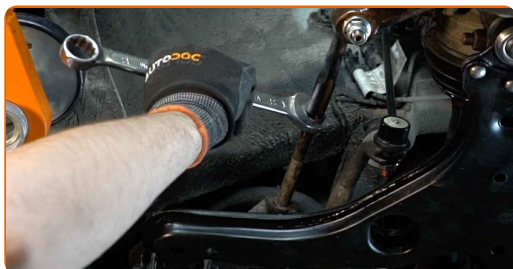

- 17 Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #19. Use a torque wrench. Tighten it to 48 nm torque.

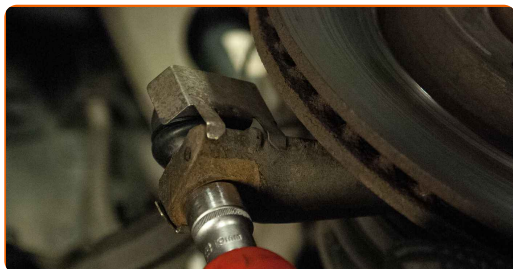

- 18 Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.

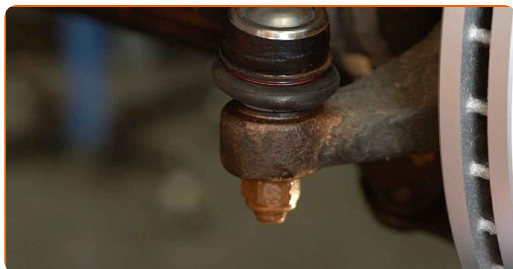


- 19 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



20

Clean the brake disk surface. Use a brake cleaner.

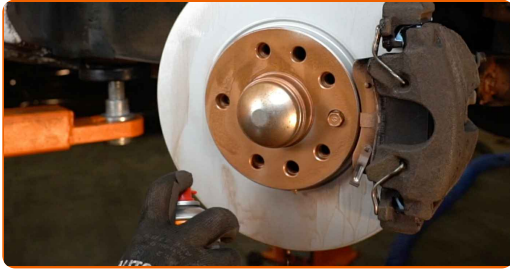

AUTODOC recommends:

- Replacement: track rod end – Peugeot 407 saloon. After applying the spray, wait a few minutes.

21

Install the wheel.



Replacement: track rod end – Peugeot 407 saloon. Tip:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

22

Screw in the wheel bolts. Use wheel impact socket #19.



23

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 100 nm torque.




Replacement: track rod end – Peugeot 407 saloon. Professionals recommend:

- Check and adjust wheel alignment if necessary.

24

Remove the jacks and chocks.

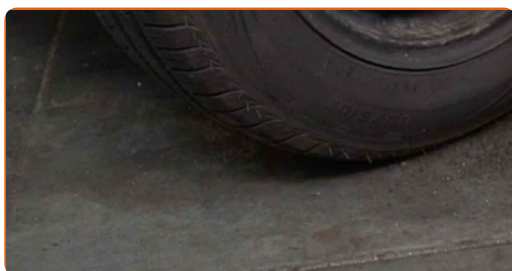

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR PEUGEOT

TRACK ROD END: A WIDE SELECTION

CHOOSE CAR PARTS FOR PEUGEOT 407 SALOON

TRACK ROD END FOR PEUGEOT: BUY NOW

**TRACK ROD END FOR PEUGEOT 407 SALOON: THE BEST
DEALS & OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.