



How to change front
lower arm on **VW Polo**
9N – replacement guide

VIDEO TUTORIAL



ⓘ Important!

This replacement procedure can be used for:

VW Polo IV Hatchback (9N) 1.9 TDI, VW Polo IV Hatchback (9N) 1.4 TDI, VW Polo IV Hatchback (9N) 1.4 16V, VW Polo IV Hatchback (9N) 1.2 12V, VW Polo IV Hatchback (9N) 1.9 SDI, VW Polo IV Hatchback (9N) 1.2, VW Polo IV Hatchback (9N) 1.4 FSI, VW Polo IV Saloon (9A4, 9A2, 9N2, 9A6) 1.4, VW Polo IV Saloon (9A4, 9A2, 9N2, 9A6) 1.9 SDI, VW Polo IV Saloon (9A4, 9A2, 9N2, 9A6) 1.4 TDI, VW Fox Hatchback (5Z1, 5Z3, 5Z4) 1.2, VW Fox Hatchback (5Z1, 5Z3, 5Z4) 1.4, VW Fox Hatchback (5Z1, 5Z3, 5Z4) 1.4 TDI, VW Polo IV Hatchback (9N) 1.8 GTI, VW Polo IV Hatchback (9N) 1.6 16V, (+ 3)

The steps may slightly vary depending on the car design.

REPLACEMENT: FRONT LOWER ARM – VW POLO 9N.
TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 13
- Drive socket # 18
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

Replacement: front lower arm – VW Polo 9N. AUTODOC experts recommend:

- The replacement procedure is identical for the left and right lower control arms.
- All work should be done with the engine stopped.

REPLACEMENT: FRONT LOWER ARM – VW POLO 9N. TAKE THE FOLLOWING STEPS:

1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the front of the car and secure on supports.

4

Unscrew the wheel bolts.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. VW Polo 9N


5

Remove the wheel.

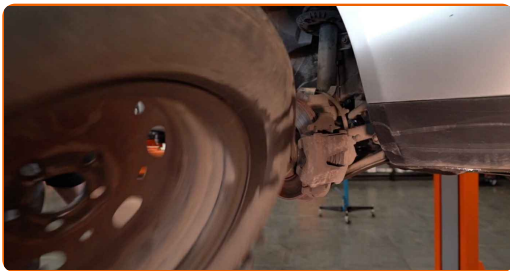

6

Clean all joints of the arm. Use a wire brush. Use WD-40 spray.

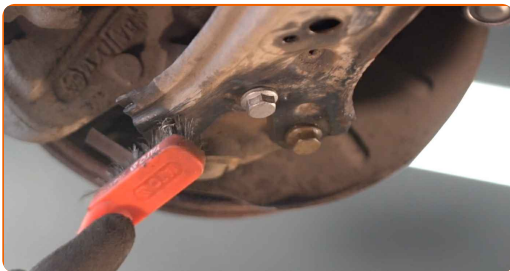

Replacement: front lower arm – VW Polo 9N. Tip from AUTODOC:

- After applying the spray, wait a few minutes.
- Wear protective goggles.


7

Unscrew the front arm fastener. Use a drive socket #18. Use a tap wrench.



8

Unscrew the fastener connecting the ball joint to the suspension control arm. Use a drive socket #13. Use a tap wrench.

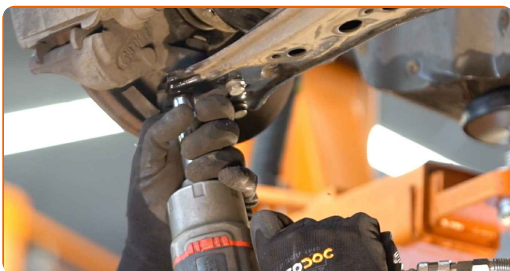


9

Disconnect the spherical joint from the arm.



10

Remove the front fastener of the control arm. Use a drive socket #18.

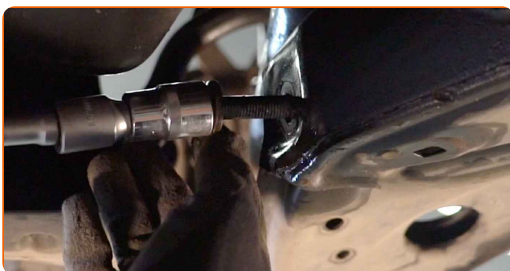

11 Clean all joints of the arm. Use WD-40 spray.



12 Remove the arm. Use a crowbar.



13 Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.



14 Install a new arm. Use a crowbar.



Replacement: front lower arm – VW Polo 9N. AUTODOC experts recommend:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.

15

Install the front fastener of the arm. Use a drive socket #18.




16

Attach the ball joint to the control arm.




17

Screw the fasteners of the ball joint. Use a drive socket #13. Use a ratchet wrench.

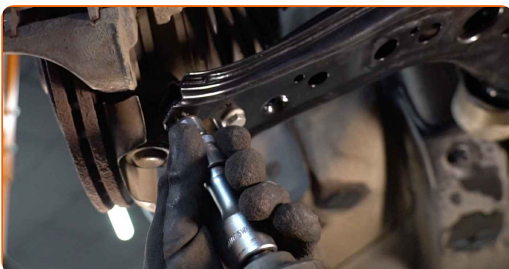

18 Support the arm. Use a hydraulic transmission jack.

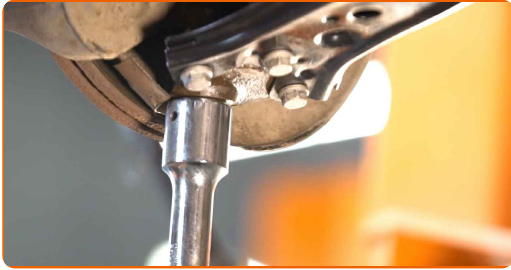


19 Tighten the front fastener connecting the control arm to the subframe. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque. +90°



AUTODOC recommends:

- Important! Be sure to use new fasteners.

20 Remove the support from under the arm.

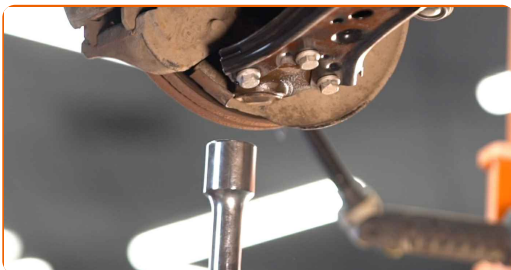


AUTODOC recommends:

- Replacement: front lower arm – VW Polo 9N. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

21

Tighten the fasteners of the ball joint. Use a drive socket #13. Use a torque wrench. Tighten it to 20 Nm torque. +90°

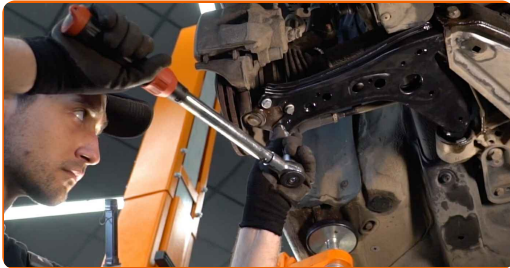

AUTODOC recommends:

- Important! Be sure to use new fasteners.

22

Treat all joints of the arm. Use copper grease.



23

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



24

Clean the brake disc surface. Use a brake cleaner.



Replacement: front lower arm – VW Polo 9N. Tip:

- After applying the spray, wait a few minutes.

25

Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. VW Polo 9N


26

Screw in the wheel bolts. Use wheel impact socket #17.

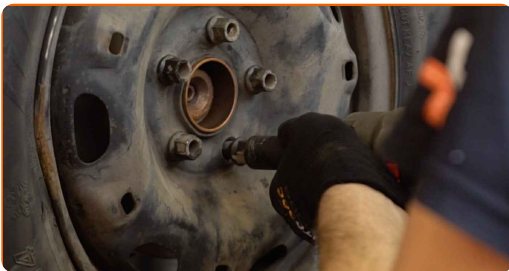


27

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 nm torque.

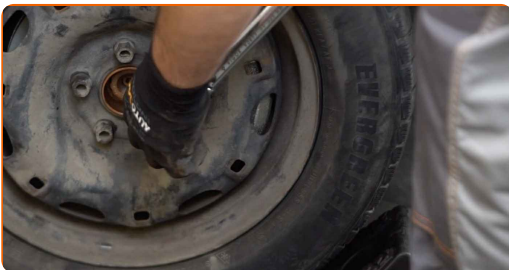

28

Remove the jacks and chocks.

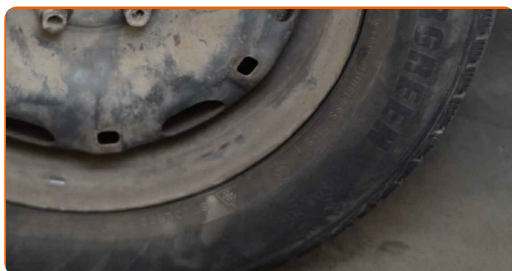**WELL DONE!** 👍[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

AUTODOC⁺

GET IT ON
 Google Play

Download on the
 App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

CONTROL ARM: A WIDE SELECTION

CHOOSE CAR PARTS FOR VW POLO 9N

CONTROL ARM FOR VW: BUY NOW

**CONTROL ARM FOR VW POLO 9N: THE BEST DEALS &
OFFERS**

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.