



How to change
serpentine belt on **Audi**
A6 C5 Avant –
replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

AUDI A4 B5 Saloon (8D2) 2.6, AUDI A4 B5 Saloon (8D2) 2.8, AUDI A4 B5 Saloon (8D2) 2.6 quattro, AUDI A4 B5 Saloon (8D2) 2.8 quattro, AUDI A4 B5 Avant (8D5) 2.6, AUDI A4 B5 Avant (8D5) 2.8, AUDI A4 B5 Avant (8D5) 2.6 quattro, AUDI A4 B5 Avant (8D5) 2.8 quattro, AUDI A6 C4 Saloon (4A2) 2.8, AUDI A6 C4 Avant (4A5) 2.8, AUDI A6 C4 Saloon (4A2) 2.8 quattro, AUDI A6 C4 Avant (4A5) 2.8 quattro, AUDI A8 D2 (4D2, 4D8) 2.8, AUDI A8 D2 (4D2, 4D8) 2.8 quattro, AUDI A4 B5 Saloon (8D2) 2.8 (ACK,ALG,AMX,APR,AQD,AHA), (+ 26)

The steps may slightly vary depending on the car design.

REPLACEMENT: SERPENTINE BELT – AUDI A6 C5
AVANT. TOOLS YOU MIGHT NEED:



- Combination spanner #17
- Flat screwdriver
- Phillips screwdriver
- Fender cover

BUY TOOLS

Replacement: serpentine belt – Audi A6 C5 Avant. AUTODOC recommends:


- All work should be done with the engine stopped.

REPLACEMENT: SERPENTINE BELT – AUDI A6 C5 AVANT. USE THE FOLLOWING PROCEDURE:

1 Open the hood.



2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

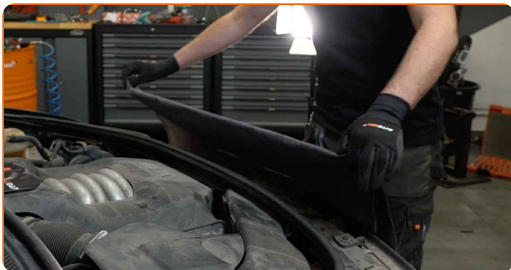

3 Unscrew the fasteners of the air distribution housing assembly. Use a Phillips screwdriver.



4

Remove the air distribution housing assembly.



5

Unscrew the engine cover fastener. Use a flat screwdriver.



6

Remove the engine cover.




AUTODOC recommends:

- Replacement: serpentine belt – Audi A6 C5 Avant. Do not use excessive force when removing the part as this may damage it.

7 Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #17.



8 Remove the V-ribbed belt.

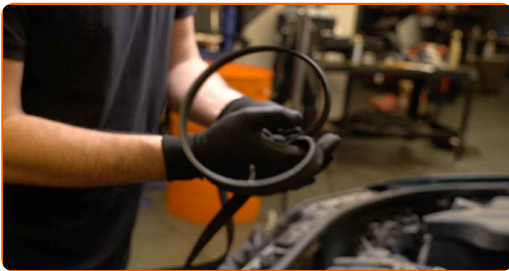


Replacement: serpentine belt – Audi A6 C5 Avant. Tip from AUTODOC:

- Check the condition of the tensioner pulley and idler pulley. Replace them if necessary.

9 Return the tensioner pulley to its initial position.

10 Install the V-ribbed belt.

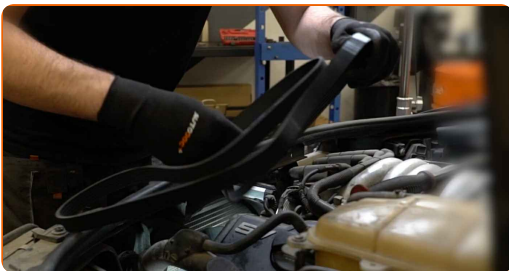

11 Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #17.



12 Place the serpentine belt on the crankshaft pulley.




Replacement: serpentine belt – Audi A6 C5 Avant. Tip:

- Make sure that the V-ribbed belt fits all pulleys snugly.
- Make sure that the V-ribbed belt is properly tensioned.


13 Return the tensioner pulley to its initial position. Use a combination spanner #17.

14 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

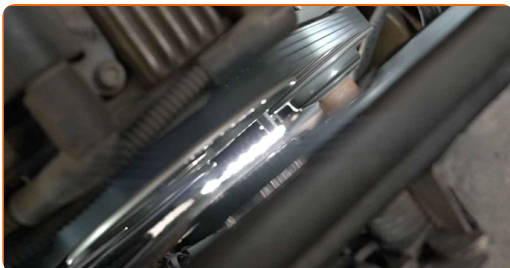

15 Shut off the engine.

16 Reinstall the air distribution housing assembly.

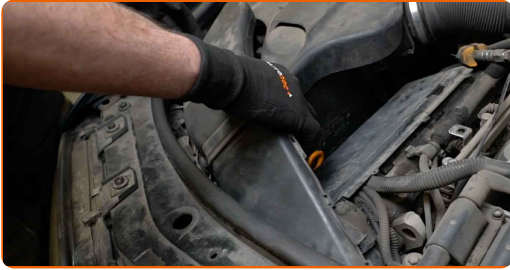

17 Screw in the fasteners of the air distribution housing assembly. Use a Phillips screwdriver.




18 Install the engine cover and secure it.




AUTODOC recommends:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Replacement: serpentine belt – Audi A6 C5 Avant. Do not use excessive force during installation. This may damage the part.


19 Screw in the engine cover fasteners. Use a flat screwdriver.

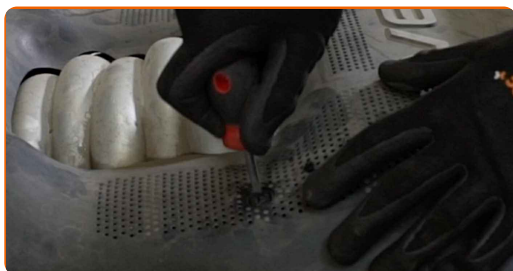

20 Remove the fender protection cover.

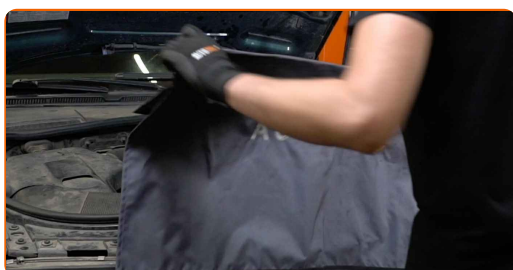

21 Close the hood.

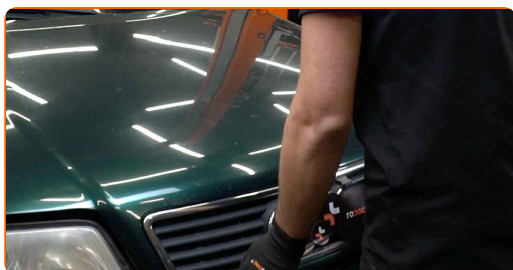

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

AUTODOC+

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

SERPENTINE BELT: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A6 C5 AVANT

SERPENTINE BELT FOR AUDI: BUY NOW

**SERPENTINE BELT FOR AUDI A6 C5 AVANT: THE BEST
DEALS & OFFERS**

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.