



How to change front
suspension strut on **Audi**
A4 B7 – replacement
guide

VIDEO TUTORIAL




Important!

This replacement procedure can be used for:

AUDI A4 B7 Saloon (8EC) 2.0 TFSI quattro, AUDI A4 B7 Saloon (8EC) 3.2 FSI, AUDI A4 B7 Saloon (8EC) 3.2 FSI quattro, AUDI A4 B7 Saloon (8EC) 2.0 TDI, AUDI A4 B7 Saloon (8EC) 2.0 TDI 16V, AUDI A4 B7 Saloon (8EC) 3.0 TDI quattro, AUDI A4 B7 Saloon (8EC) 1.8 T, AUDI A4 B7 Saloon (8EC) 1.8 T quattro, AUDI A4 B7 Saloon (8EC) 2.0, AUDI A4 B7 Saloon (8EC) 1.6, AUDI A4 B7 Saloon (8EC) 1.9 TDI, AUDI A4 B7 Saloon (8EC) 2.5 TDI, AUDI A4 B7 Avant (8ED) 1.6, AUDI A4 B7 Avant (8ED) 2.0, AUDI A4 B7 Avant (8ED) 1.8 T, (+ 20)

The steps may slightly vary depending on the car design.

**REPLACEMENT: SUSPENSION STRUT – AUDI A4 B7.
LIST OF THE TOOLS YOU'LL NEED:**

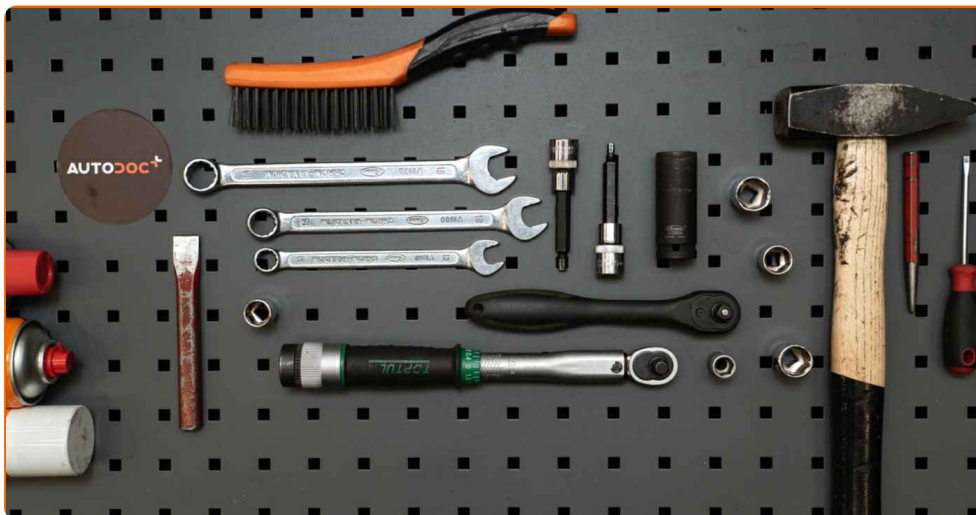

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #13
- Combination spanner #16
- Combination spanner #18
- Drive socket # 13
- Drive socket # 15
- Drive socket # 16
- Drive socket # 18
- Drive socket # 19
- HEX bit No.H5.
- HEX bit No.H6.
- Wheel impact socket #17
- Ratchet wrench
- Hammer
- Pin punch
- Flat chisel
- Flat Screwdriver
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

BUY TOOLS


Replacement: suspension strut – Audi A4 B7. AUTODOC recommends:

- Both shock struts of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock struts of the front suspension.
- All work should be done with the engine stopped.

**REPLACEMENT: SUSPENSION STRUT – AUDI A4 B7.
RECOMMENDED SEQUENCE OF STEPS:**


1

Open the bonnet.

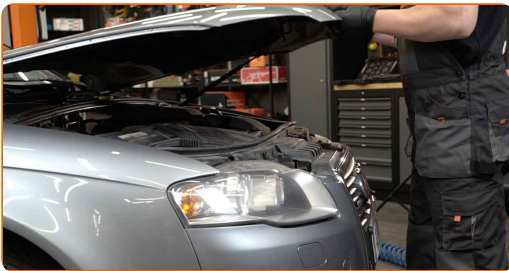

2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

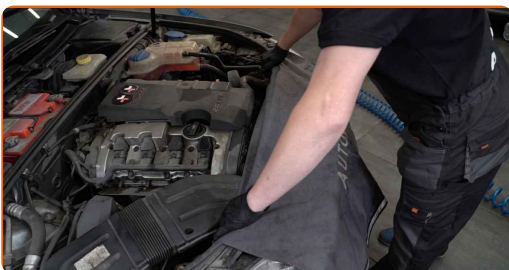


3


Raise up and remove the cowl grille.




4 Remove the shock strut mount cap. Use a flat screwdriver.

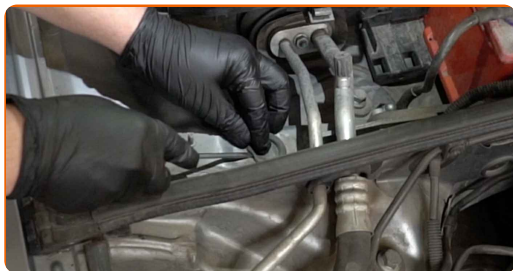

5 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.

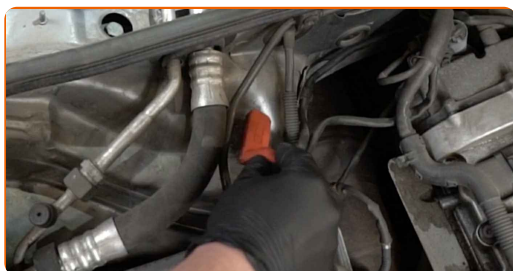

6 Loosen the upper fastener of the shock strut mount. Use a drive socket #16. Use a ratchet wrench.

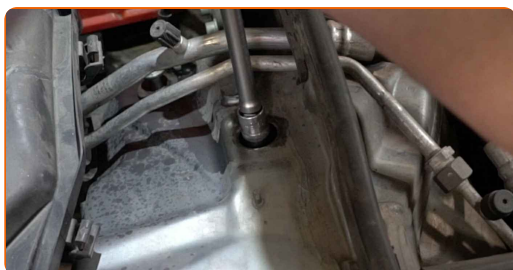


7 Secure the wheels with chocks.




8 Loosen the wheel mounting bolts. Use wheel impact socket #17.



9 Raise the front of the car and secure on supports.

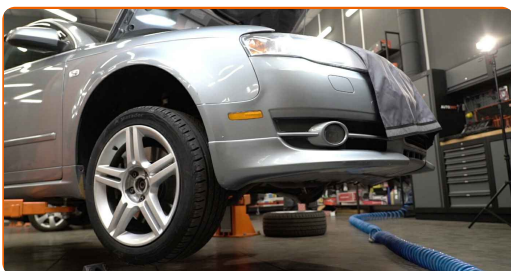

10 Unscrew the wheel bolts.

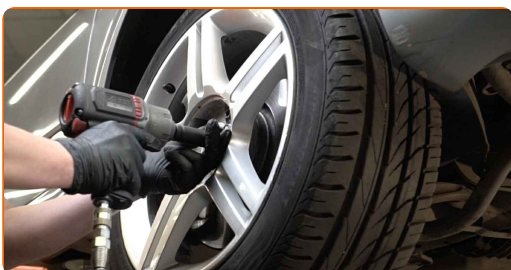


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Audi A4 B7


11 Remove the wheel.




- 12** Clean all joints of the arm. Clean the fastener connecting the tie rod end to the steering knuckle. Clean the shock strut fasteners. Use a wire brush. Use WD-40 spray.

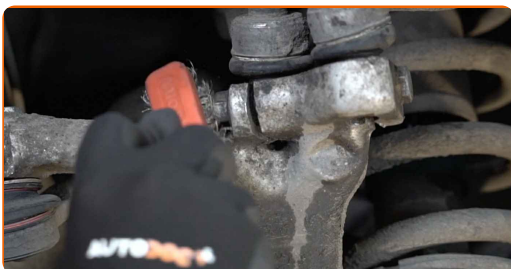


- 13** Unscrew the upper arm fastenings. Use a combination spanner #16.

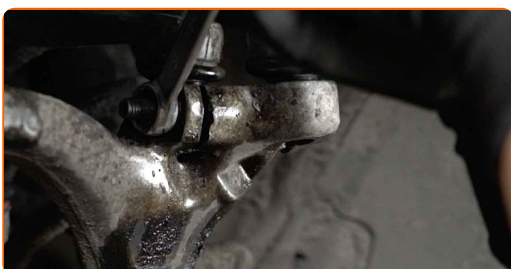


- 14** Remove the fastening bolt.

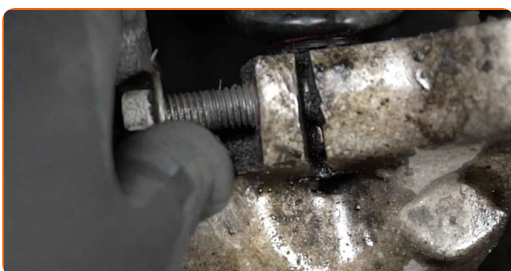


- 15** Loosen the tie rod end fastening bolt. Use a combination spanner #13.

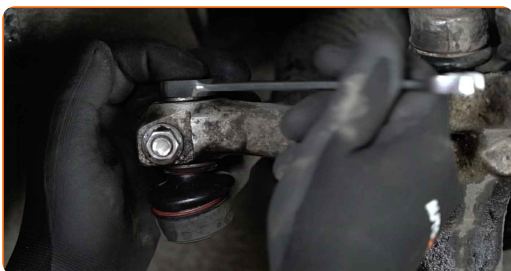


16 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #15. Use a ratchet wrench.

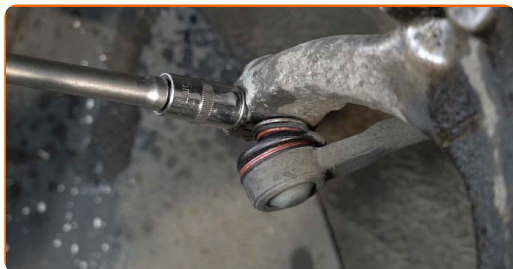


17 Remove the fastening bolt. Use a pin punch. Use a hammer.

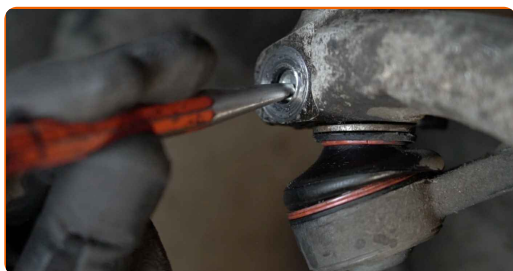

18 Disconnect the tie rod end from the steering knuckle. Use a flat metal-working chisel. Use a hammer.

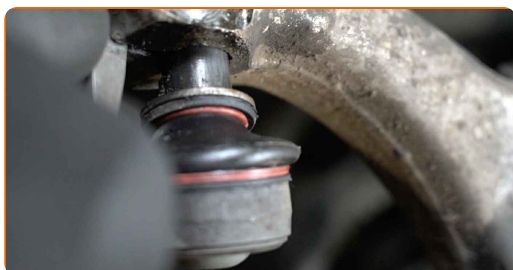


19 Remove the control arms. Use a flat metal-working chisel. Use a hammer.

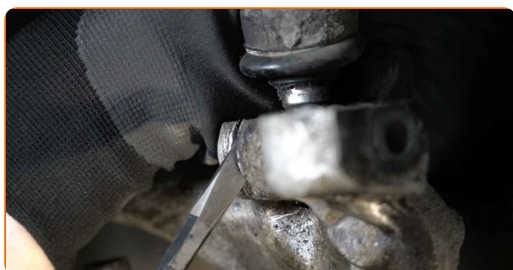


20

Prop up the steering knuckle. Use a hydraulic transmission jack.

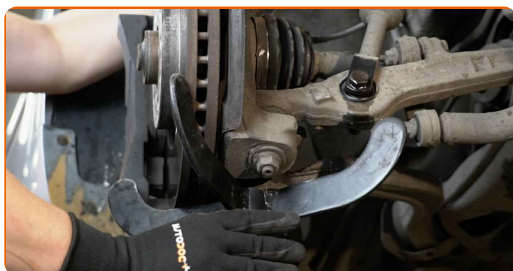


21

Unscrew the fastener connecting the shock strut to the suspension control arm. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.

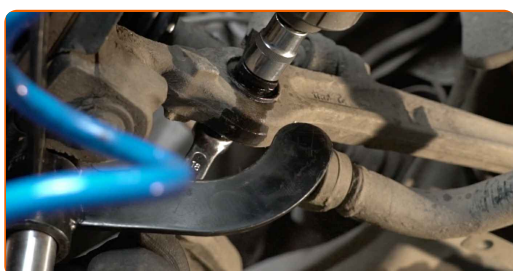

22

Unscrew the top fastening of the shock strut mount. Use a drive socket #16. Use a ratchet wrench.

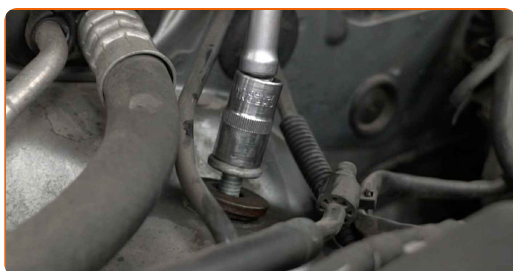


Replacement: suspension strut – Audi A4 B7. AUTODOC recommends:

- To avoid injuries, hold the shock strut when undoing the fastening bolts.

23 Clean all joints of the arm. Use a wire brush. Use WD-40 spray.




24 Unscrew the rear fastener connecting the control arm to the subframe. Use a combination spanner #18 (2 pieces).

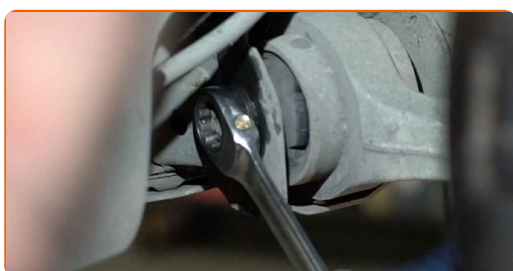

25 Unscrew the front arm fastener. Use a combination spanner #18 (2 pieces).

26 Lower the hydraulic transmission jack by 10-15 cm.

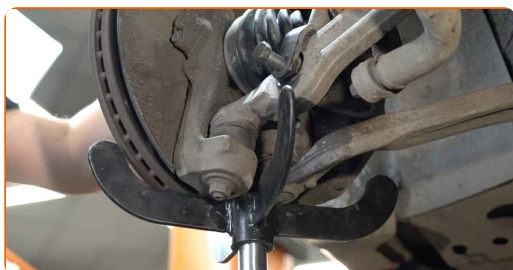


Replacement: suspension strut – Audi A4 B7. Tip:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.


27

Remove the fastening bolt.

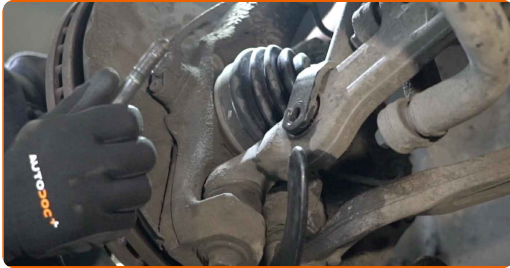


28

Remove the suspension strut.

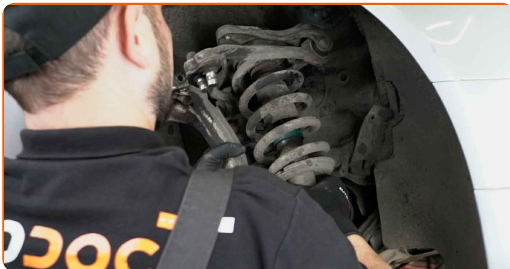

29


Set the shock absorber strut on the spring compressor tool.

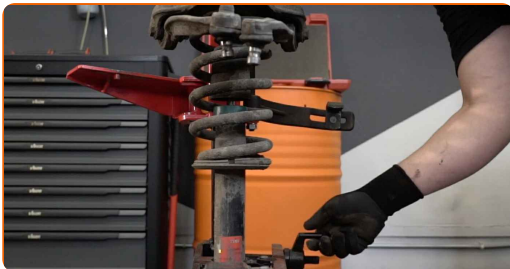

Replacement: suspension strut – Audi A4 B7. Tip from AUTODOC experts:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

30 Treat the shock strut rod. Use WD-40 spray.

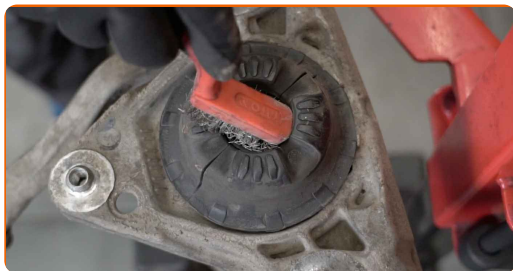


31 Compress the spring.




32 Remove the strut piston rod nut. Use a drive socket #18. Use HEX No.H5. Use a ratchet wrench.



33 Remove the top strut mount. Use a crowbar.

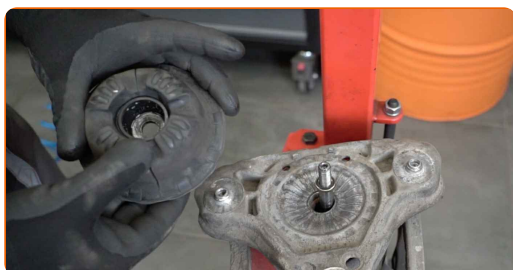


34 Release the coil spring.

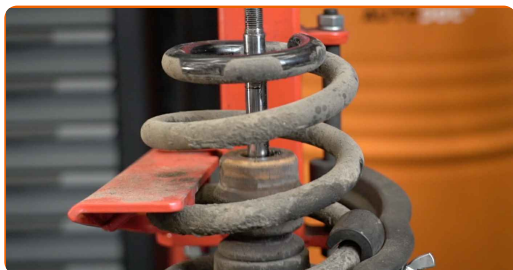

35

Remove the spring.

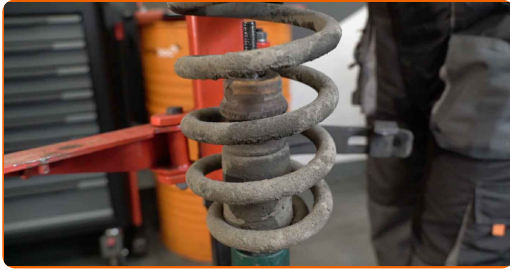

36

Remove the shock absorber dust cap and the bump stop.




AUTODOC recommends:

- Replacement: suspension strut – Audi A4 B7. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

37


Remove the old shock absorber from the hydraulic coil spring compressor.

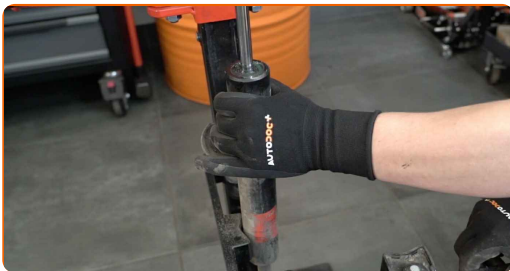

Replacement: suspension strut – Audi A4 B7. Tip:

- Before installing a new shock absorber you should pump it manually 3-5 times.


38 Install the new shock absorber on the hydraulic coil spring compressor.

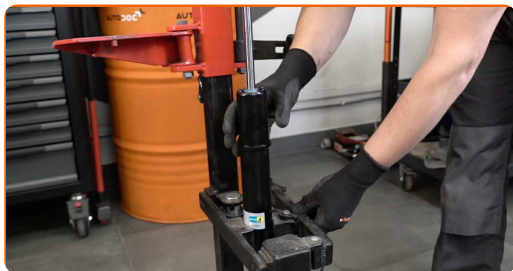


39 Install the spring on the shock absorber.




40 Compress the spring.

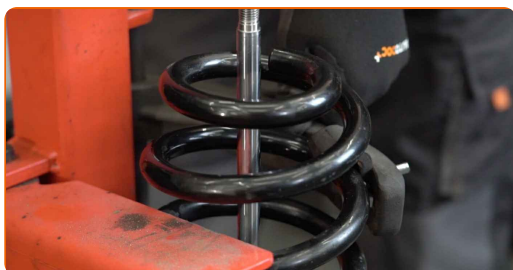

41 Install the dust sleeve and the bump stop on the new shock absorber.

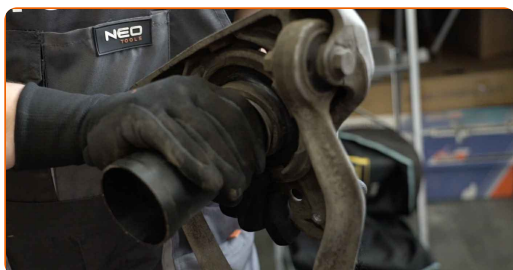

42 Install the upper strut mount and the strut mount bearing.

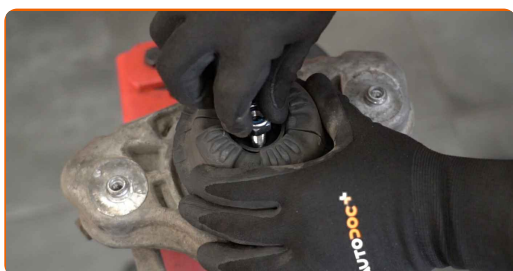

- 43** Tighten the shock strut piston rod nut. Use a drive socket #19. Use HEX No.H6. Use a torque wrench. Tighten it to 50 Nm torque.



Replacement: suspension strut – Audi A4 B7. AUTODOC recommends:


- Check to make sure the spring is positioned correctly. Avoid its misalignment.

- 44** Decompress the spring.


- 45** Treat the shock strut rod. Use copper grease.




- 46** Remove the assembled shock strut.

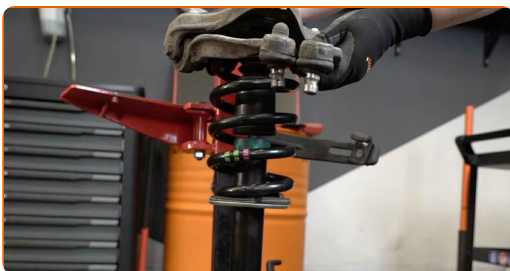


47 Treat the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.

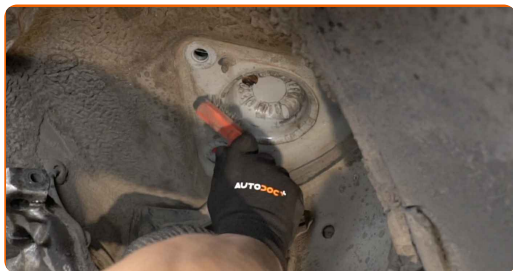

48 Install the shock strut into the wheel arch.

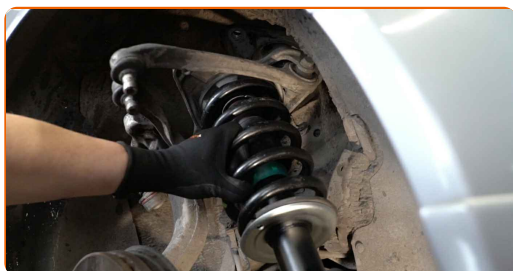


49 Screw the top fastening of the shock strut mount. Use a drive socket #16. Use a ratchet wrench. Do not tighten it.

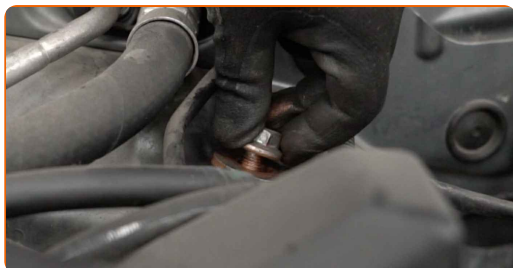

AUTODOC recommends:

- Important! Hold the suspension strut while screwing in the fastening bolts. Audi A4 B7

50 Install the fastener connecting the shock strut to the suspension control arm.

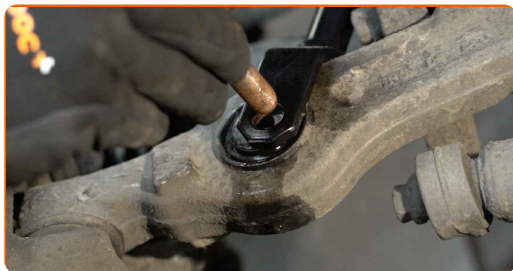


51 Screw in the fastener connecting the suspension strut to the control arm. Use a combination spanner #18 (2 pieces).

52 Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.




53 Raise the hydraulic transmission jack by 10-15 cm.


54 Install the control arms.

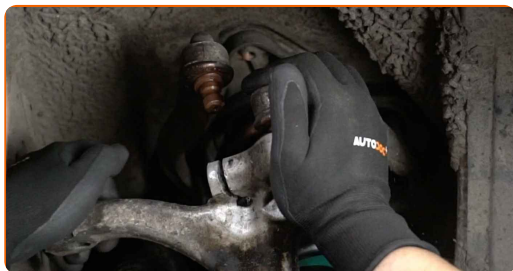

55 Install the fastening bolt.

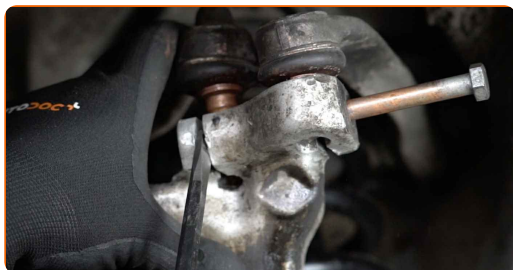


56 Remove the support from under the steering knuckle.

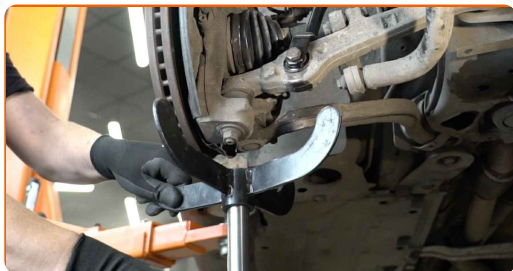


AUTODOC recommends:

- Audi A4 B7 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

57 Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.

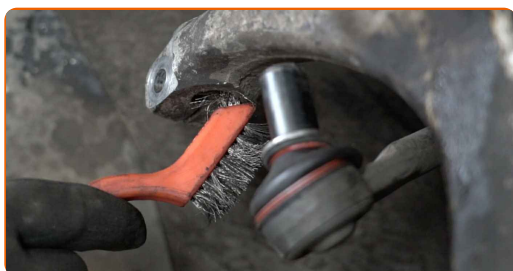


58 Connect the tie rod end to the steering knuckle.

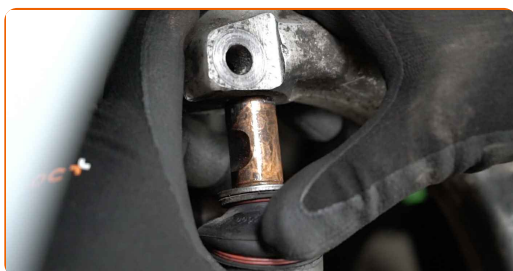

59 Install the fastening bolt.


60 Screw in the tie rod end fastening bolt. Use a combination spanner #13.

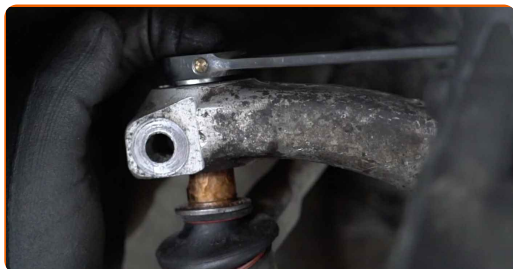

61 Screw on the fastening nut that connects the tie rod end to the steering knuckle. Use a drive socket #15. Use a ratchet wrench.



62 Tighten the tie rod end fastening bolt. Use a drive socket #13. Use a torque wrench. Tighten it to 7 nm torque.

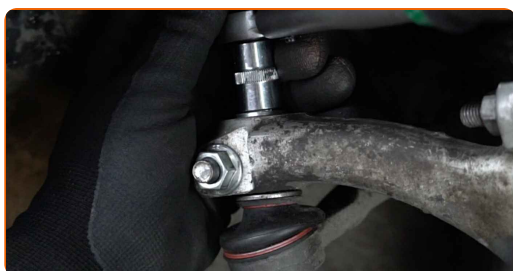

63 Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #15. Use a torque wrench. Tighten it to 45 nm torque.




64

Tighten the upper arm fastenings. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 40 nm torque.



65

Prop up the steering knuckle. Use a hydraulic transmission jack.

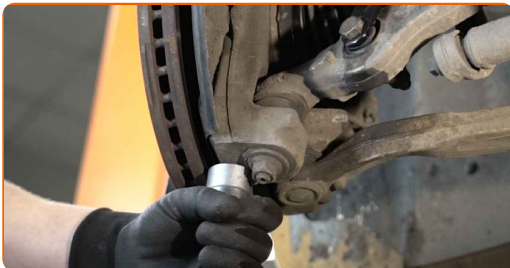


66

Tighten the fastener connecting the shock strut to the suspension control arm. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 90 Nm torque.



67


Tighten the front fastener connecting the control arm to the subframe. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.+180°

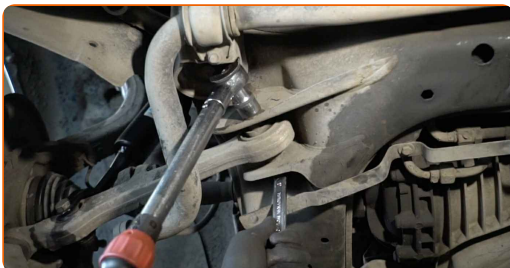

AUTODOC recommends:

- Important! Be sure to use new fasteners.


68 Tighten the rear fastener connecting the arm to the body subframe. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.+180°

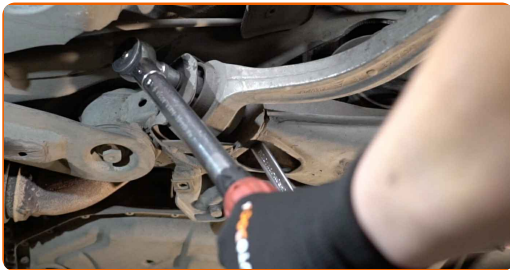

AUTODOC recommends:

- Important! Be sure to use new fasteners.


69 Remove the support from under the steering knuckle.

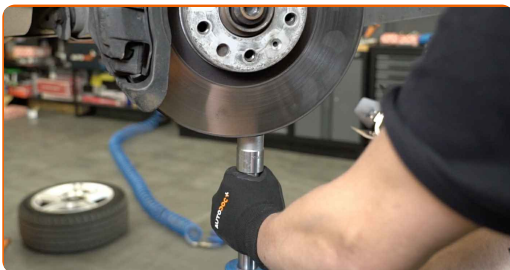


AUTODOC recommends:

- Replacement: suspension strut – Audi A4 B7. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

- 70** Treat the shock strut fasteners. Treat the fastener connecting the tie rod end to the steering knuckle. Treat all joints of the arm. Use copper grease.

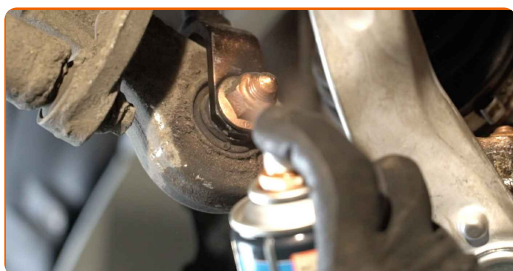

- 71** Clean the wheel rim mounting seat. Use a wire brush.

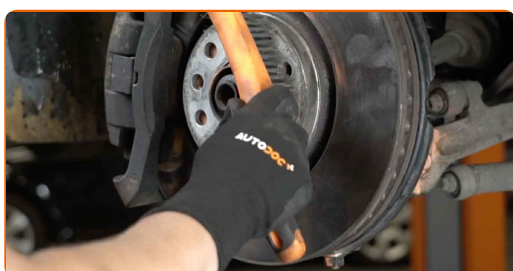

- 72** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



- 73** Clean the brake disk surface. Use a brake cleaner.



Replacement: suspension strut – Audi A4 B7. Tip:

- After applying the spray, wait a few minutes.

74 Install the wheel.




AUTODOC recommends:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


75 Screw in the wheel bolts. Use wheel impact socket #17.




76 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.

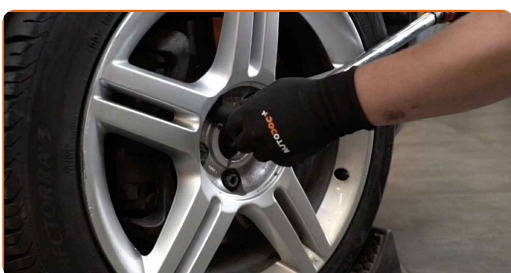


77 Remove the jacks and chocks.

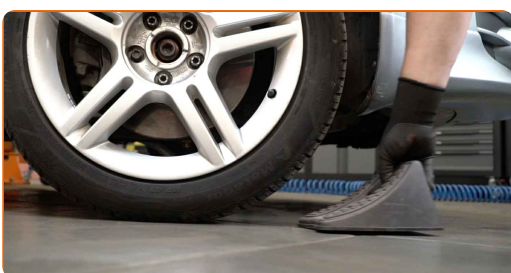


- 78 Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #16. Use a torque wrench. Tighten it to 50 Nm torque.

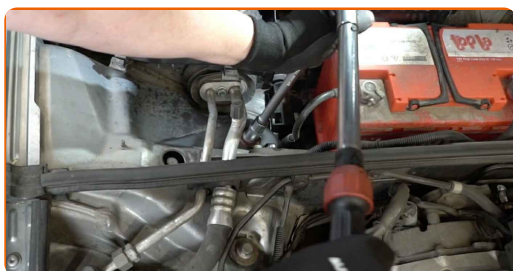


- 79 Treat the fasteners of the shock strut mount. Use copper grease.

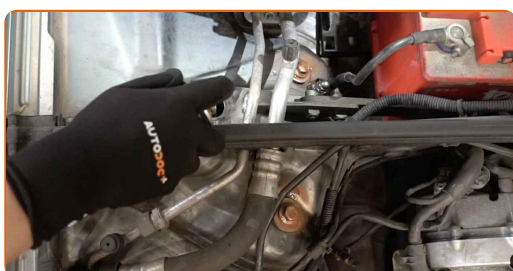


- 80 Install the shock strut mount cap.

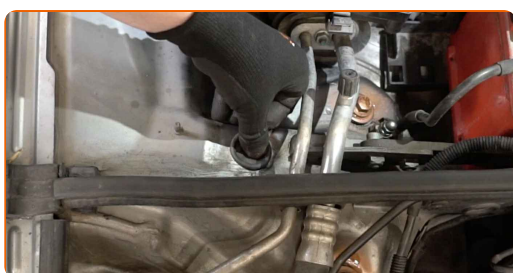

- 81 Install and secure the cowl grille.

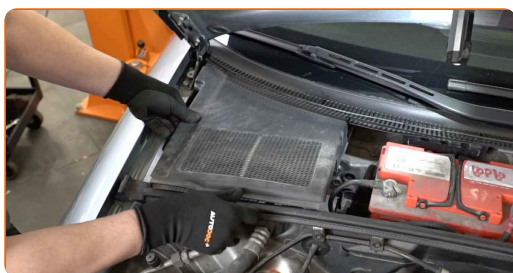

- 82 Remove the fender protection cover.

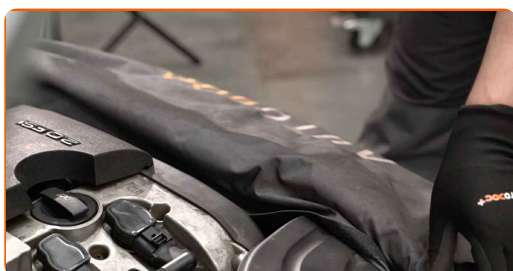

83

Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

SHOCK ABSORBERS: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A4 B7

SHOCK ABSORBERS FOR AUDI: BUY NOW

SHOCK ABSORBERS FOR AUDI A4 B7: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.