



How to change rear  
shock absorbers on **Audi**  
**A4 B8** – replacement  
guide

## VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

AUDI Q5 (8RB) 2.0 TFSI hybrid quattro, AUDI Q5 (8RB) 2.0 TDI, AUDI A5 Coupe (8T3) 2.0 TDI, AUDI A5 Coupe (8T3) 3.0 TDI, AUDI A5 Coupe (8T3) 3.0 TDI quattro, AUDI A5 Sportback (8TA) 2.0 TDI, AUDI A5 Sportback (8TA) 3.0 TDI, AUDI A5 Sportback (8TA) 3.0 TDI quattro, AUDI A5 Convertible (8F7) 2.0 TDI, AUDI A5 Convertible (8F7) 3.0 TDI, AUDI A5 Convertible (8F7) 3.0 TDI quattro, AUDI A5 Sportback (8TA) 1.8 TFSI, AUDI A5 Convertible (8F7) 1.8 TFSI, AUDI A5 Sportback (8TA) 3.0 TFSI quattro, AUDI A5 Sportback (8TA) 2.0 TDI quattro, (+ 60)

The steps may slightly vary depending on the car design.

**REPLACEMENT: SHOCK ABSORBERS – AUDI A4 B8.  
TOOLS YOU'LL NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 16
- Drive socket # 21
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Shock absorber socket #DD6
- Crow bar
- Clip removal tool
- Vice
- Wheel chock

**BUY TOOLS**

Replacement: shock absorbers – Audi A4 B8. Tip from AUTODOC experts:

- Both shock absorbers of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock absorbers of the rear suspension.
- All work should be done with the engine stopped.

**REPLACEMENT: SHOCK ABSORBERS – AUDI A4 B8. TAKE THE FOLLOWING STEPS:**


1

Secure the wheels with chocks.




2

Loosen the wheel mounting bolts. Use wheel impact socket #17.

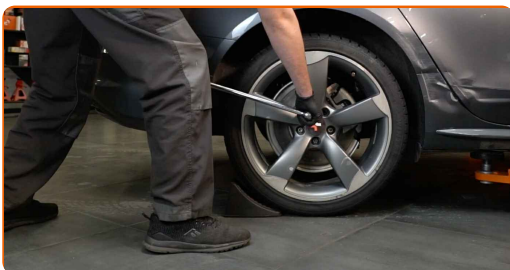

3

Raise the rear of the car and secure on supports.

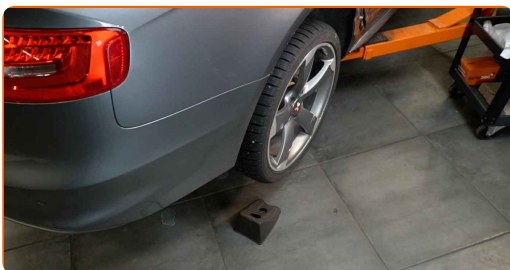


**4** Unscrew the wheel bolts.




**AUTODOC recommends:**

- Important! Hold the wheel while unscrewing the fastening bolts. Audi A4 B8


**5** Remove the wheel.

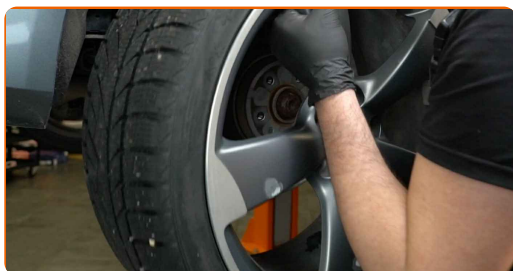


**6** Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.

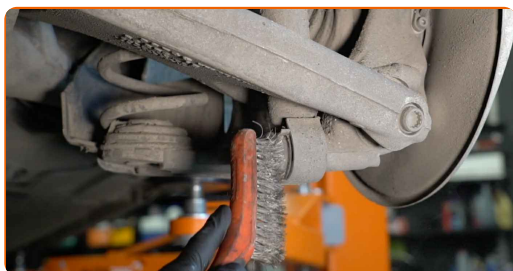

**7** Unscrew and remove the wheel arch cover fasteners. Use a clip removal tool.

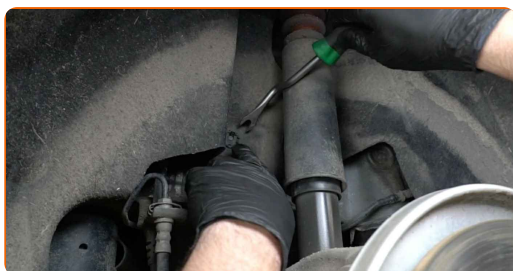

**8** Move the part aside.

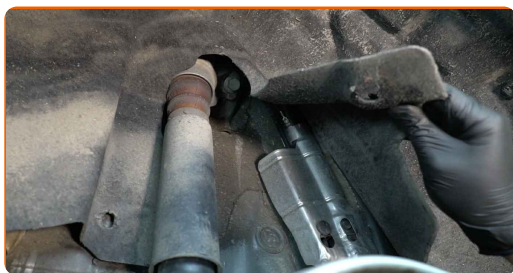

**9** Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.



**10** Unscrew the lower fastener of the shock absorber. Use a drive socket #21. Use a ratchet wrench.




**11** Remove the fastening bolt.






**12**

Unscrew the upper fastener of the shock absorber. Use a drive socket #16. Use a ratchet wrench.

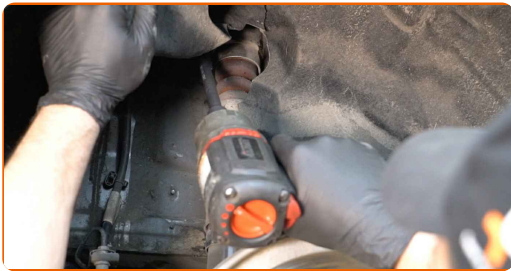

**13**

Remove the fastening bolt.

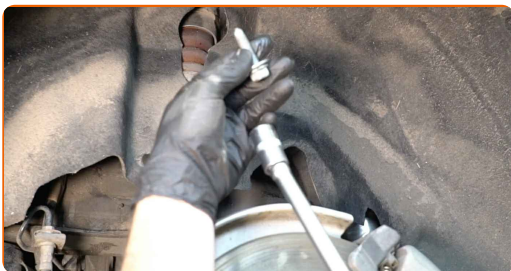


Replacement: shock absorbers – Audi A4 B8. AUTODOC recommends:

- To avoid injuries, hold the shock absorber when undoing the fastening bolts.

**14**

Remove the shock absorber.

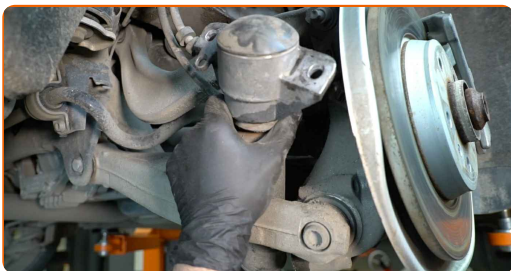

**15**

Grip the shock absorber in a vice.



**16**

Remove the protective cap of the shock absorber mount. Use a crowbar.




**17**

Clean the shock absorber rod fastener. Use a wire brush. Use WD-40 spray.




**18**

Remove the shock absorber piston rod fastening. Use a shock absorber socket DDN<sup>o</sup>6. Use a drive socket #16. Use a ratchet wrench.

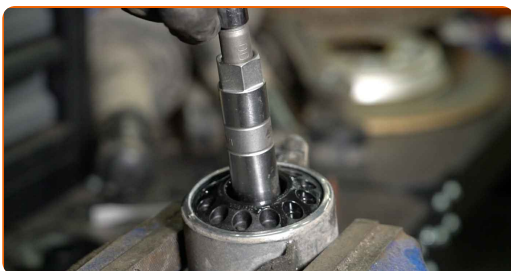

**19**

Remove the shock absorber mount, boot and bump stop.

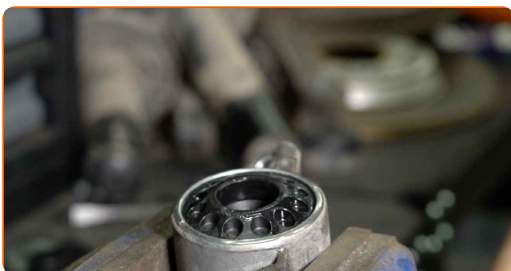




**AUTODOC recommends:**

- Replacement: shock absorbers – Audi A4 B8. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.
- Before installing a new shock absorber you should pump it manually 3-5 times.


**20**

Install the mount, boot and bump stop onto a new shock absorber.

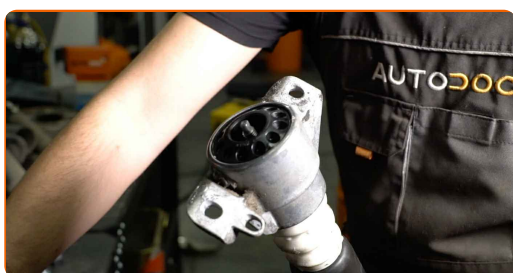


**21**

Screw the shock strut piston rod upper fastening. Use a shock absorber socket DDN<sup>6</sup>. Use a drive socket #16. Use a torque wrench. Tighten it to 35 nm torque.

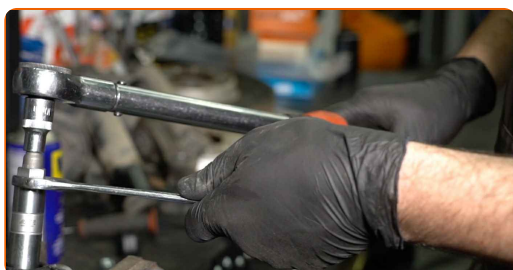

**22**

Treat the shock absorber rod fastener. Use copper grease.

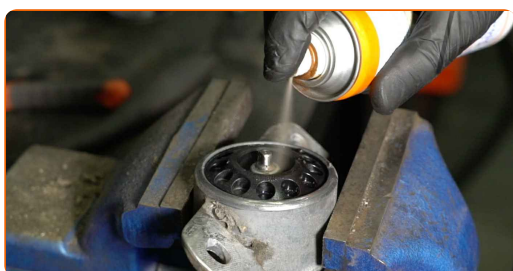

**23** Install the protective cap of the shock absorber mount.



**24** Release the vice and take out the shock absorber.




**25** Place the shock absorber in the wheel arch and secure it.



**Replacement: shock absorbers – Audi A4 B8. Tip:**


- To avoid injury, hold the shock absorber cautiously tight when screwing in the fastening bolts.

**26** Install the fastening bolt.

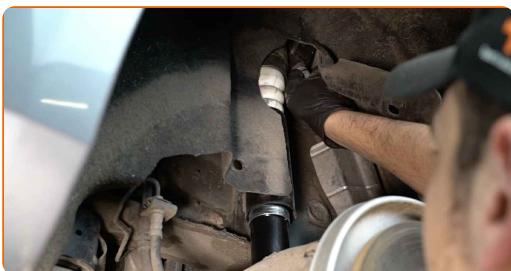

27

Screw the upper fastener of the shock absorber. Use a drive socket #16. Use a ratchet wrench.

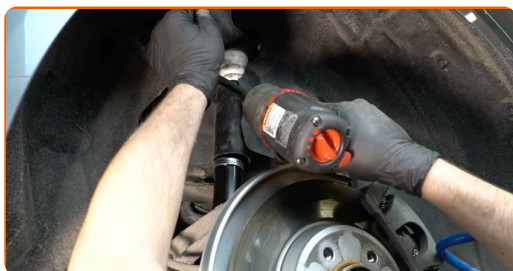

28

Install the fastening bolt.



29

Screw in the lower fastener of the shock absorber. Use a drive socket #21. Use a ratchet wrench.



30

Support the arm. Use a hydraulic transmission jack.



- 31** Tighten the lower fastener of the shock absorber. Use a drive socket #21. Use a torque wrench. Tighten it to 150 Nm torque.+180°



**AUTODOC recommends:**

- Important! Be sure to use new fasteners.

- 32** Remove the support from under the arm.



**Replacement: shock absorbers – Audi A4 B8. Professionals recommend:**

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.

- 33** Tighten the top shock absorber fastening. Use a drive socket #16. Use a torque wrench. Tighten it to 50 Nm torque.+45°



**AUTODOC recommends:**

- Important! Be sure to use new fasteners.

- 34** Treat the shock absorber fasteners. Use copper grease.




- 35** Install the wheel arch cover to its mounting seat.



- 36** Install and tighten the wheel arch cover fasteners.



**37** Treat the shock absorber fasteners. Use copper grease.

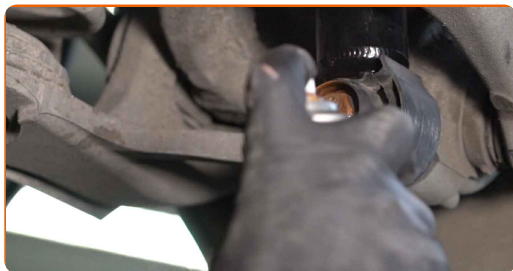

**38** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



**39** Clean the brake disk surface. Use a brake cleaner.



**AUTODOC recommends:**

- Replacement: shock absorbers – Audi A4 B8. After applying the spray, wait a few minutes.

**40** Install the wheel.





## Replacement: shock absorbers – Audi A4 B8. Tip from AUTODOC:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


41

Screw in the wheel bolts. Use wheel impact socket #17.



42

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.

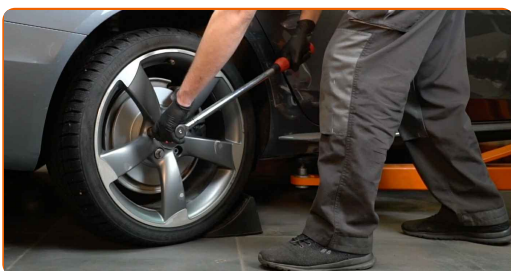

43

Remove the jacks and chocks.



**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR AUDI**

**SHOCK ABSORBERS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR AUDI A4 B8**

**SHOCK ABSORBERS FOR AUDI: BUY NOW**

**SHOCK ABSORBERS FOR AUDI A4 B8: THE BEST DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.