



How to change rear  
suspension strut on **ALFA  
ROMEO 159 Saloon (939)**  
– replacement guide

**SIMILAR VIDEO TUTORIAL**



This video shows the replacement procedure of a similar car part on another vehicle

** Important!**


This replacement procedure can be used for:

ALFA ROMEO 159 Saloon (939) 2.0 JTDM, ALFA ROMEO 159 Saloon (939) 1.9 JTS, ALFA ROMEO 159 Saloon (939) 2.2 JTS, ALFA ROMEO 159 Saloon (939) 1.9 JTDM 8V, ALFA ROMEO 159 Saloon (939) 1.9 JTDM 16V, ALFA ROMEO 159 Saloon (939) 2.4 JTDM, ALFA ROMEO 159 Saloon (939) 1.8 MPI, ALFA ROMEO 159 Saloon (939) 3.2 JTS, ALFA ROMEO 159 Saloon (939) 1.8 TBi (939.AXN1B)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: ALFA ROMEO 159 Sportwagon (939) 2.2 JTS

**REPLACEMENT: SUSPENSION STRUT – ALFA ROMEO  
159 SALOON (939). TOOLS YOU NEED:**

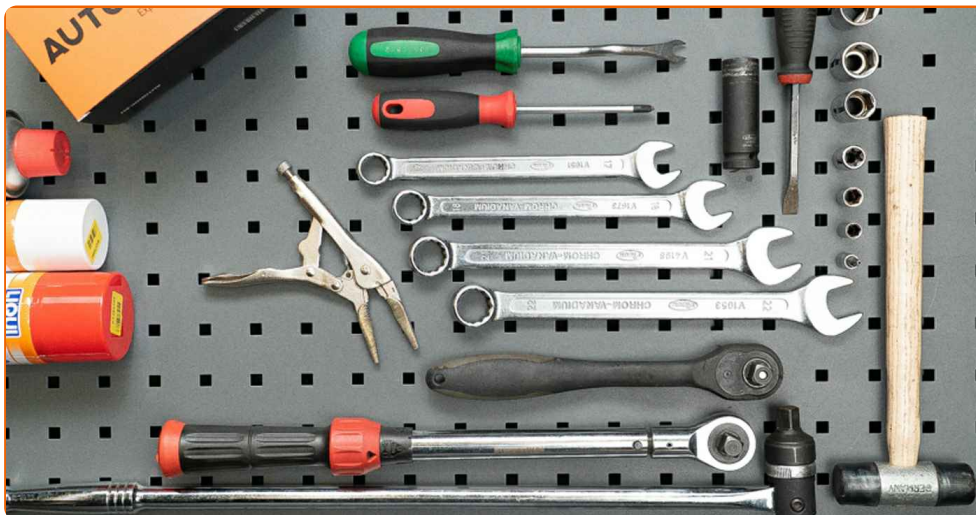

- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #17
- Combination spanner #18
- Combination spanner #21
- Combination spanner #22
- Drive socket # 8
- Drive socket # 10
- Drive socket # E14
- Drive socket # 16
- Drive socket # 18
- Drive socket # 21
- Torx bit T25
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Phillips screwdriver
- Clip removal tool
- Locking pliers
- Rubber mallet
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Wheel chock

**Buy tools**

Replacement: suspension strut – ALFA ROMEO 159 Saloon (939). AUTODOC recommends:


- Both shock struts of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock struts of the rear suspension.
- All work should be done with the engine stopped.

**REPLACEMENT: SUSPENSION STRUT – ALFA ROMEO 159 SALOON (939). RECOMMENDED SEQUENCE OF STEPS:**

**1** Secure the wheels with chocks.



**2** Loosen the wheel mounting bolts. Use wheel impact socket #17.

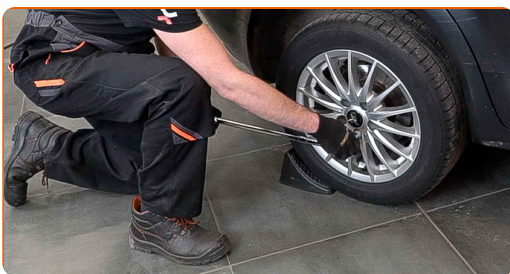

**3** Open the boot lid.

**4** Move the folding shelf and detach it from the retainers. By doing this, you will get access to the side trim plastic panels.


5 Fold down the backrests of the rear seats.




6 Raise the lower lining of the boot.




7 Remove the clips of the boot front lower lining. Use a clip removal tool.

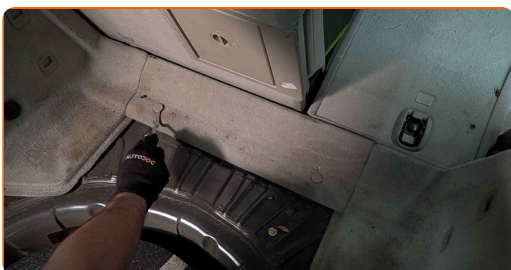

8 Remove the boot front lower lining.

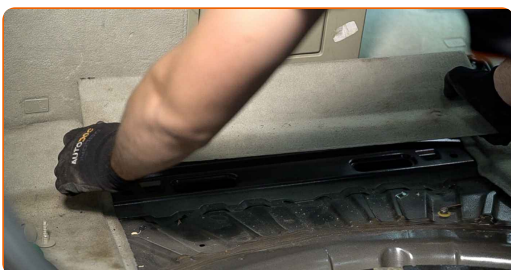


9 Remove the clips of the boot side lining. Use a clip removal tool.

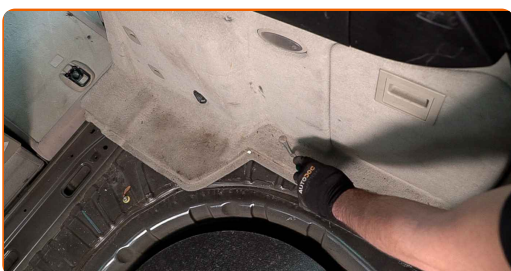


**10**

Unscrew the fastener of the boot side lining. Use Torx T25. Use a ratchet wrench.

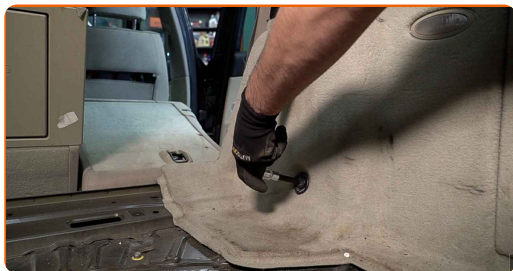


**11**

Unscrew the fastener of the central protective plastic panel. Use Torx T25. Use a ratchet wrench. Use a Phillips screwdriver.

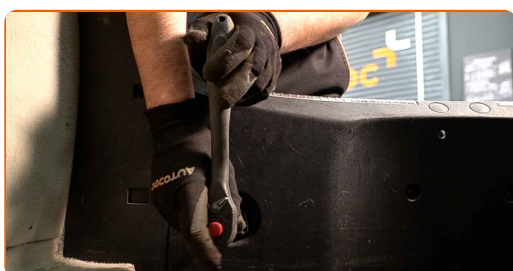


**12**

Unscrew the fasteners of the side plastic trim panel. Use a Phillips screwdriver.

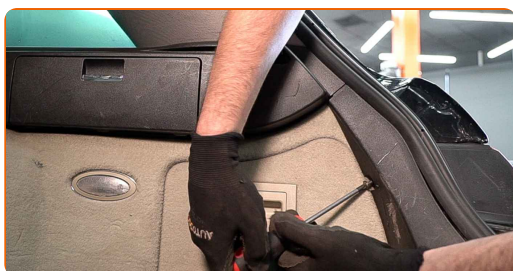


**13**


Remove the central protective plastic panel.

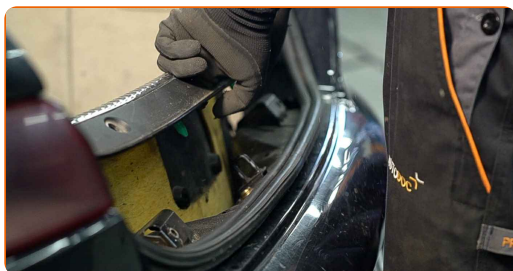


**14** Remove the side plastic cover.

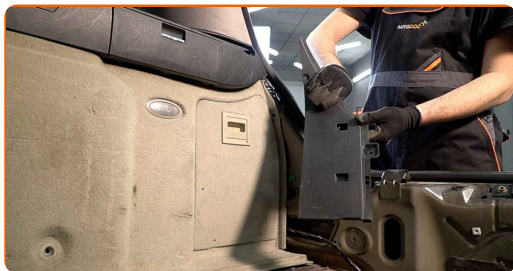


**15** Remove the cover of the boot side lining.

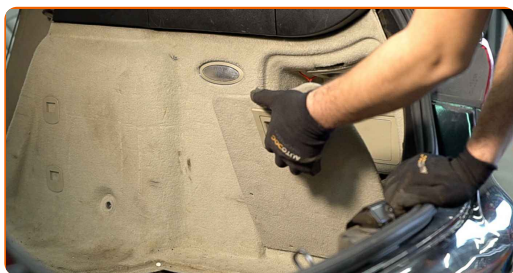


**16** Detach the boot side lining.

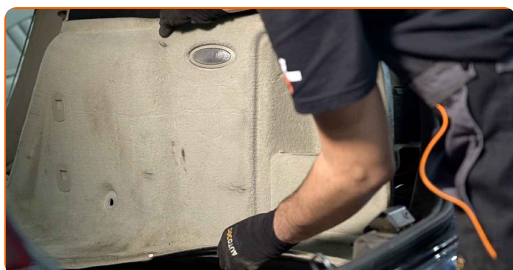


**17** Remove the seat belt trim cover. Use a drive socket #10. Use a ratchet wrench.

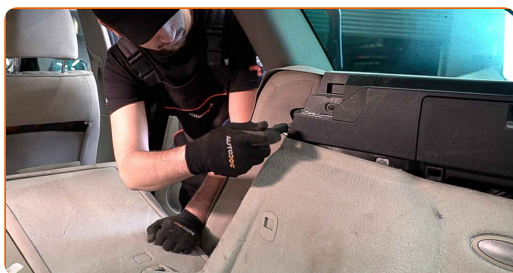

**18** Remove the boot side lining.

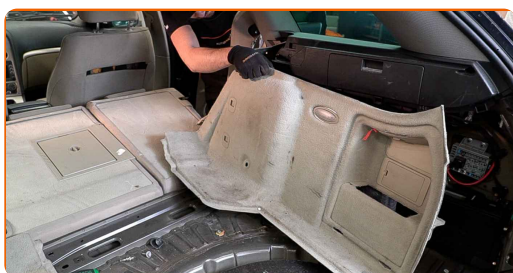


**19** Detach the bulb connector.

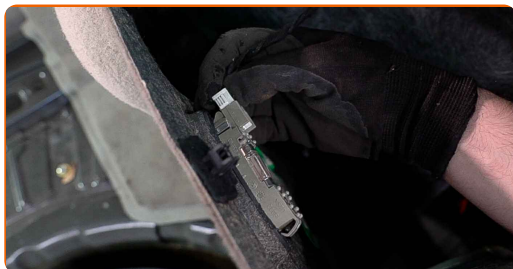

**20** Unscrew the fastener and remove the boot side sound insulation.



**21** Clean the fasteners of the shock absorber upper mount. Use WD-40 spray.

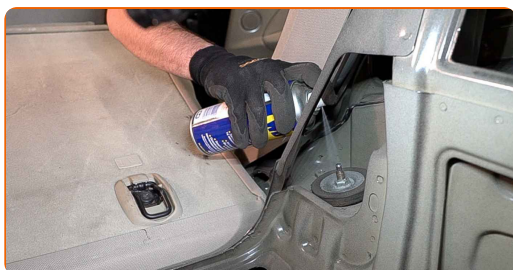

**22** Raise the rear of the car and secure on supports.

**23** Unscrew the wheel bolts.





**AUTODOC recommends:**

- Important! Hold the wheel while unscrewing the fastening bolts. ALFA ROMEO 159 Saloon (939)


**24**

Remove the wheel.




**25**

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

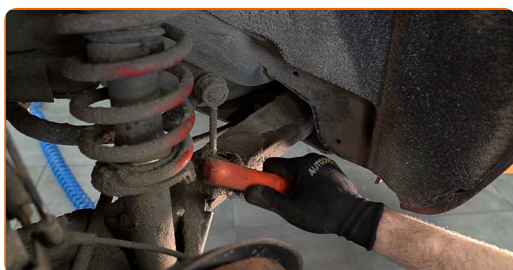


**26**

Unscrew the fastener connecting the stabilizer bar with the control arm. Use a drive socket #18.

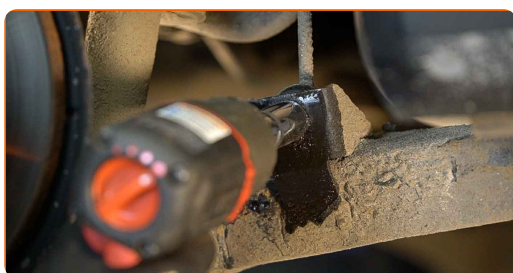


**27**


Clean the shock strut fasteners. Use a wire brush. Use WD-40 spray.

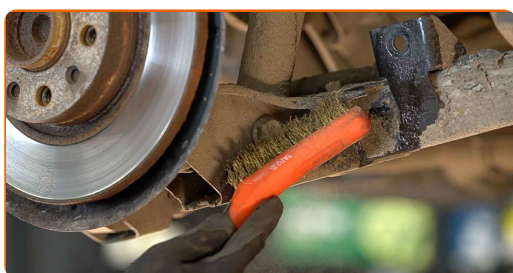


- 28** Unscrew the fastener connecting the shock strut to the suspension control arm. Use a combination spanner #21. Use a drive socket #21. Use a ratchet wrench.

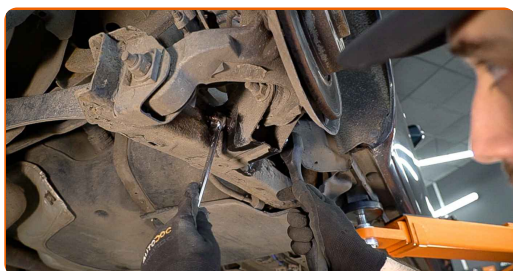


- 29** Remove the fastening bolt.

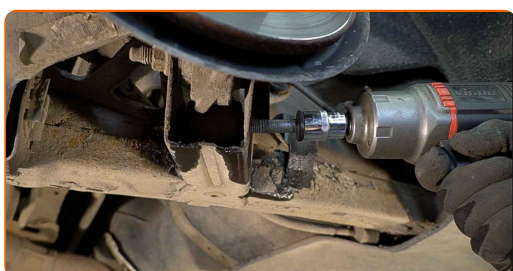


- 30** Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.

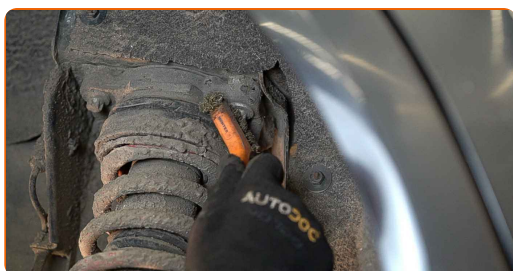


- 31** Unscrew the top fastening of the shock strut mount. Use a drive socket #E14. Use a ratchet wrench.

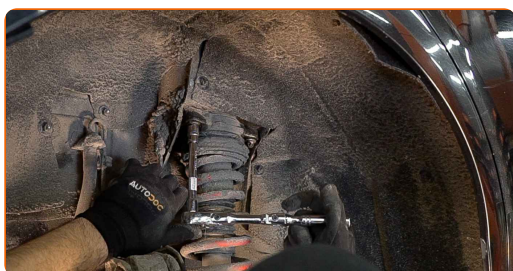


**32** Clean the fastener connecting the rear knuckle to the suspension control arm. Use a wire brush. Use WD-40 spray.

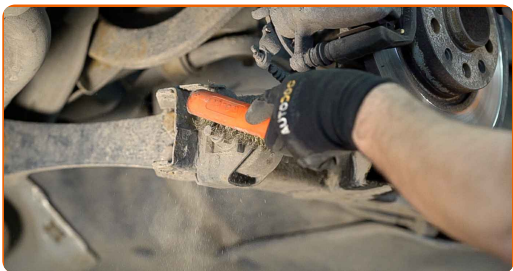


**33** Make a mark on the camber adjustment bolt.

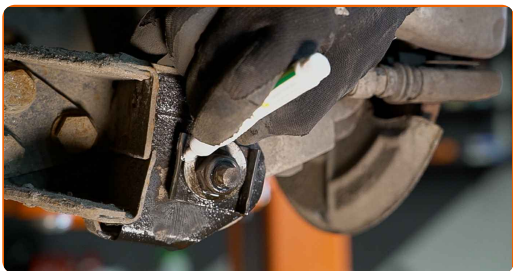


**34** Unscrew the rear fastener connecting the rear knuckle to the suspension control arm. Use a combination spanner #22.

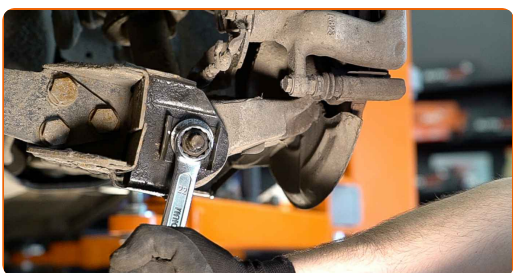


**35** Remove the fastening bolt. Use a crowbar. Use a rubber mallet.

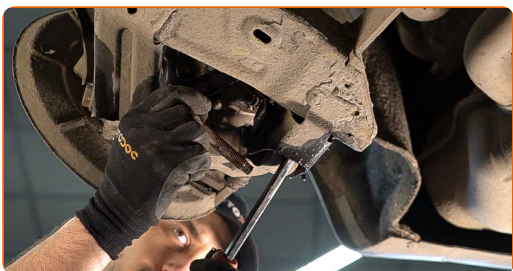

- 36 Unscrew the front fastener connecting the rear knuckle to the suspension control arm. Use a combination spanner #21.

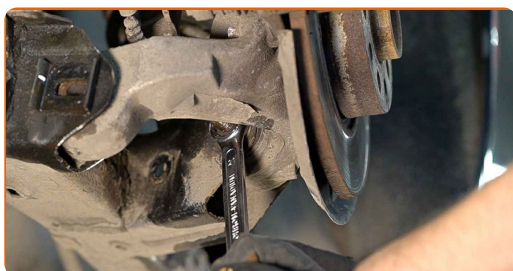

- 37 Remove the fastening bolt.

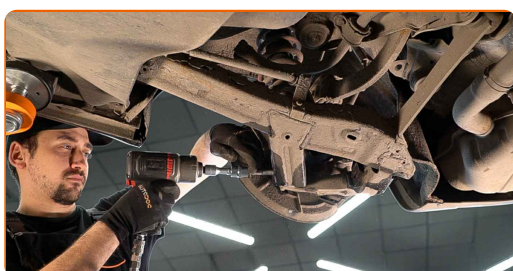

- 38 Detach the rear knuckle from the suspension control arm.

- 39 Support the stub axle. Use a hydraulic transmission jack.




- 40 Remove the strut piston rod nut. Use a drive socket #16.




41

Pull down the suspension control arm. Use a crowbar.

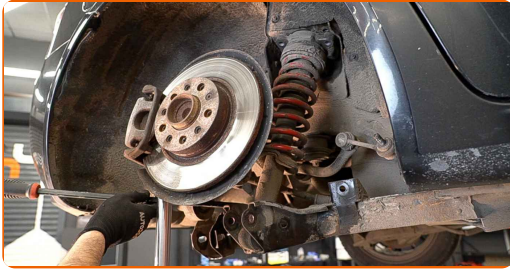

42

Remove the suspension strut.

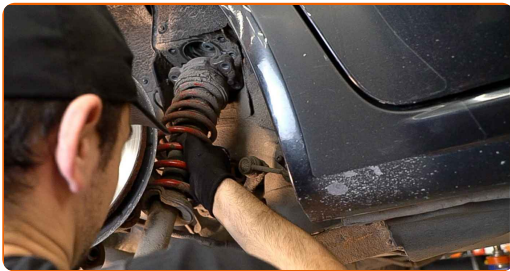

43


Set the shock absorber strut on the spring compressor tool.




Replacement: suspension strut – ALFA ROMEO 159 Saloon (939). Tip from AUTODOC experts:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

**44** Compress the spring.

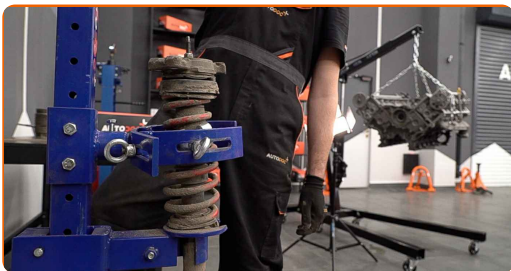

**45** Remove the strut piston rod nut. Use a combination spanner #17. Use a drive socket #8. Use a ratchet wrench.

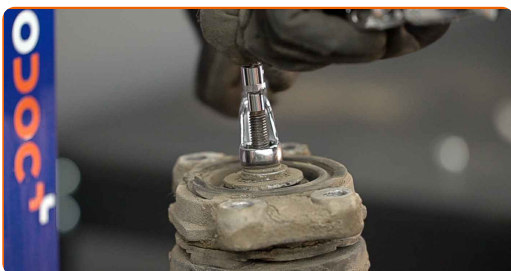


**46** Remove the top strut mount. Use a crowbar.



**47** Release the coil spring.



**48** Remove the spring.

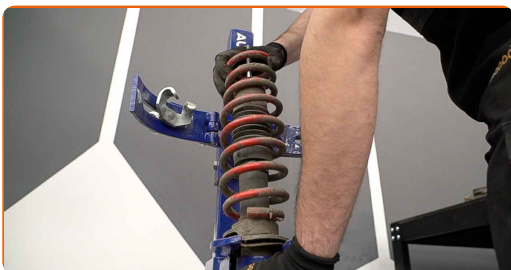

**49**

Remove the shock absorber dust cap and the bump stop.



**50**

Remove the old shock absorber from the hydraulic coil spring compressor.



**Replacement: suspension strut – ALFA ROMEO 159 Saloon (939). Tip:**

- Thoroughly examine the shock absorber mount, dust boot, bump stop. Replace them if necessary.
- Before installing a new shock absorber you should pump it manually 3-5 times.

**51**


Install the new shock absorber on the hydraulic coil spring compressor.




**52** Install the dust sleeve and the bump stop on the new shock absorber.




**53** Install the spring on the shock absorber.

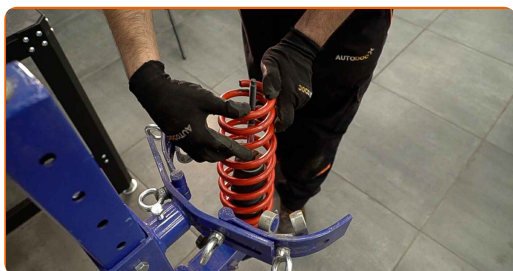

**54** Compress the spring.

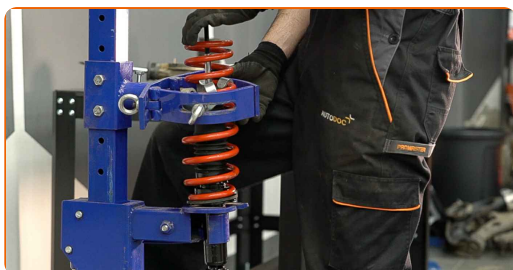

**55** Install the upper strut mount and the strut mount bearing.

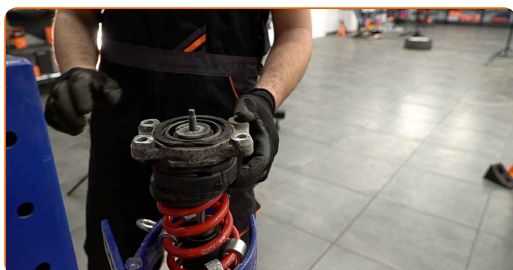



**AUTODOC recommends:**

- Adjust the position of the upper strut mount and the spring according to the marks.


**56** Tighten the shock strut piston rod nut. Use a combination spanner #17. Use locking pliers. Use a torque wrench. Tighten it to 37 Nm torque.



**Replacement: suspension strut – ALFA ROMEO 159 Saloon (939). AUTODOC experts recommend:**

- Important! Be sure to use new fasteners.
- Check to make sure the spring is positioned correctly. Avoid its misalignment.


**57** Decompress the spring.

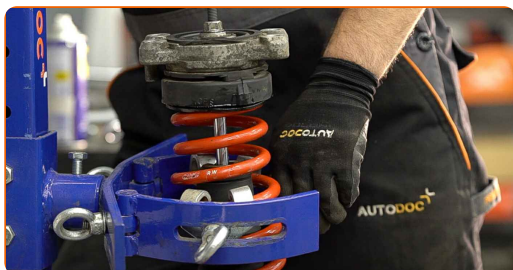


**58** Remove the assembled shock strut.




**59** Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.

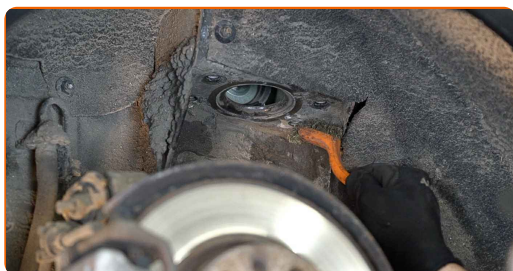

**60** Install the shock strut into the wheel arch.

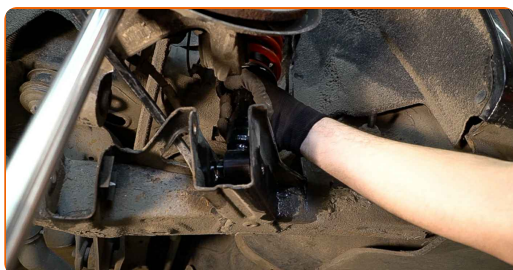


**61** Screw the top fastening of the shock strut mount. Do not tighten it.

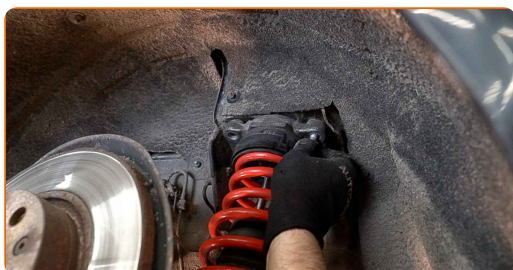


**AUTODOC recommends:**

- Important! Hold the suspension strut while screwing in the fastening bolts. ALFA ROMEO 159 Saloon (939)


**62** Install the fastening bolt.

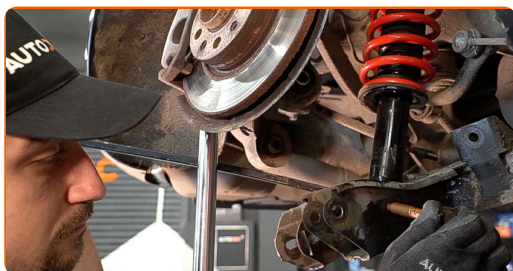

**63** Clean the mounting seats of the rear knuckle. Use a wire brush. Use WD-40 spray.

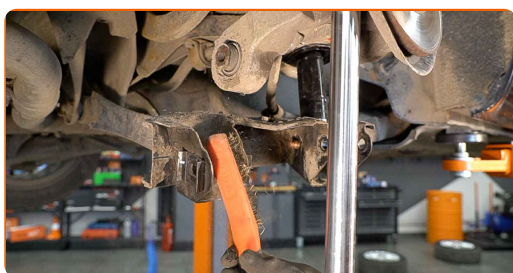

**64** Lower the hydraulic transmission jack by 10-15 cm.

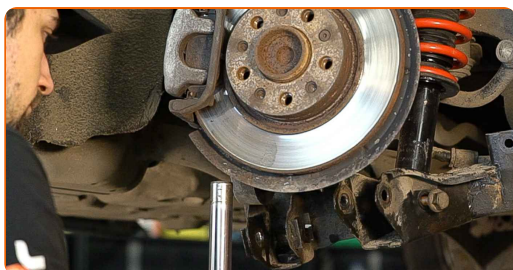

Replacement: suspension strut – ALFA ROMEO 159 Saloon (939). Tip from AUTODOC:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.


**65** Attach the rear knuckle to the suspension control arm.



**66** Support the arm. Use a hydraulic transmission jack.




**67** Install the fastening bolt. Use a crowbar.

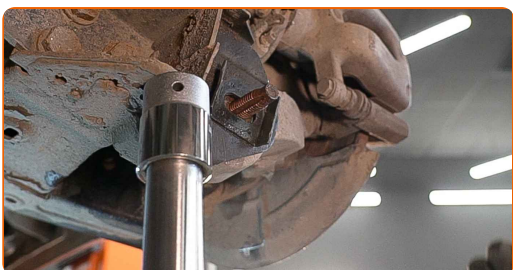


**68** Screw in the rear fastener connecting the rear knuckle to the suspension control arm. Use a combination spanner #22.




**69** Install the fastening bolt. Use a crowbar.

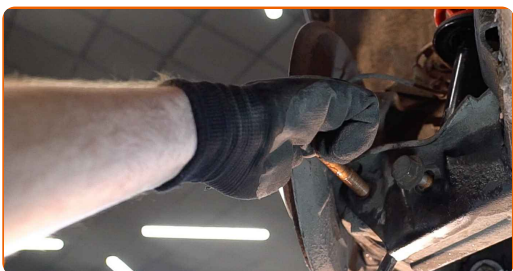


- 70** Screw in the front fastener connecting the rear knuckle to the suspension control arm. Use a combination spanner #21.

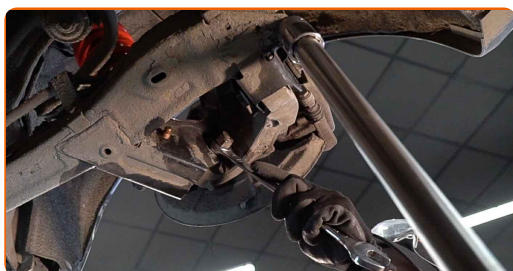

- 71** Raise the hydraulic transmission jack by 10-15 cm.

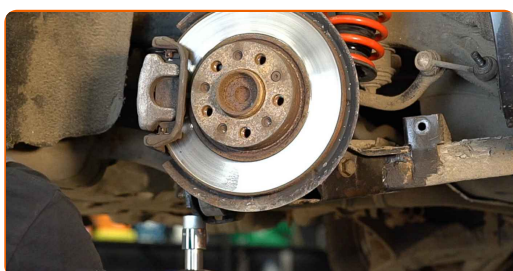

- 72** Tighten the rear fastener connecting the rear knuckle to the suspension control arm. Use a combination spanner #22. Use a torque wrench. Tighten it to 105 Nm torque.+45°

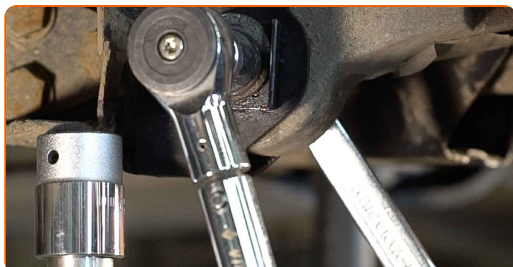

**AUTODOC recommends:**

- Important! Be sure to use new fasteners.


- 73** Tighten the front fastener connecting the rear knuckle to the suspension control arm. Use a combination spanner #22. Use a torque wrench. Tighten it to 105 Nm torque.+90°

AUTODOC recommends:

- Important! Be sure to use new fasteners.


74

Tighten the fastener connecting the shock strut to the suspension control arm. Use a combination spanner #21. Use a drive socket #21. Use a torque wrench. Tighten it to 130 Nm torque.

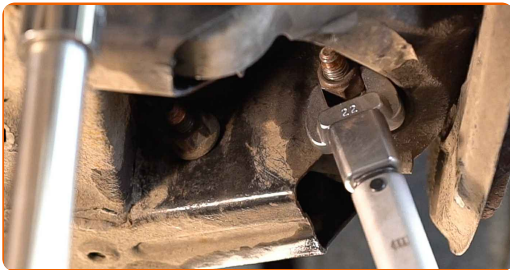


75

Treat the rear knuckle fasteners. Use copper grease.

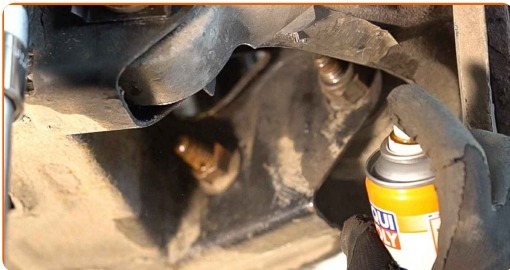

76


Remove the support from under the arm.

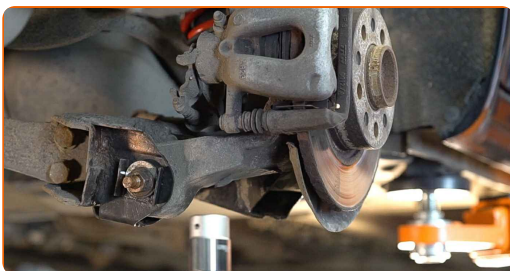

**AUTODOC recommends:**

- Replacement: suspension strut – ALFA ROMEO 159 Saloon (939). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

**77** Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #E14. Use a torque wrench. Tighten it to 30 Nm torque.

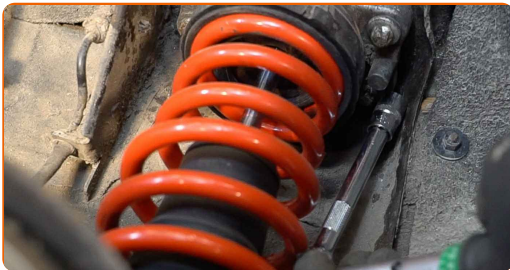


**78** Tighten the fastener connecting the stabilizer bar with the control arm. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 55 Nm torque.



**79** Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.




**80** Install the wheel.

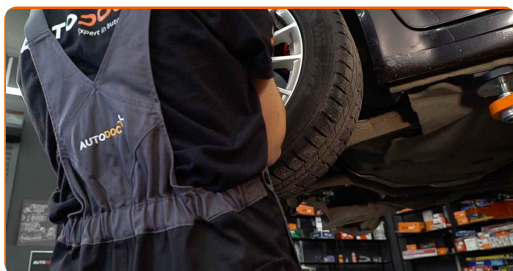


Replacement: suspension strut – ALFA ROMEO 159 Saloon (939). AUTODOC recommends:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


**81** Screw in the wheel bolts. Use wheel impact socket #17.

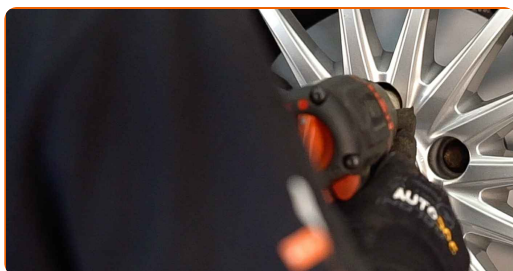

**82** Lower the car.

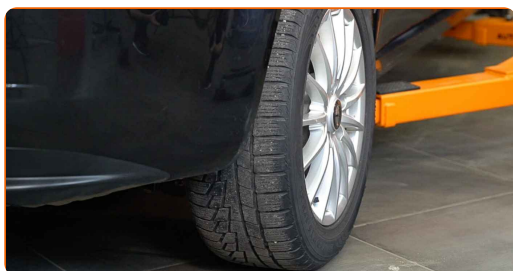

**83** Tighten the shock strut piston rod nut. Use a drive socket #16. Use a torque wrench. Tighten it to 37 Nm torque.

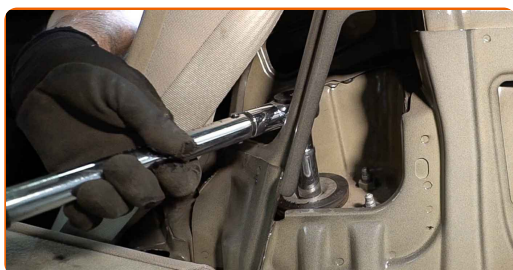



AUTODOC recommends:

- Important! Be sure to use new fasteners.


84

Install the boot side sound insulation and screw in its fasteners.




85

Attach the side lining of the boot.

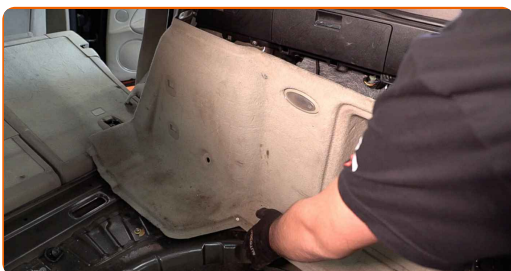


86

Attach the bulb connector.

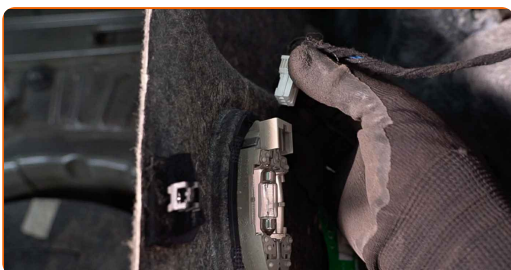

87

Install the clips of the boot side lining.

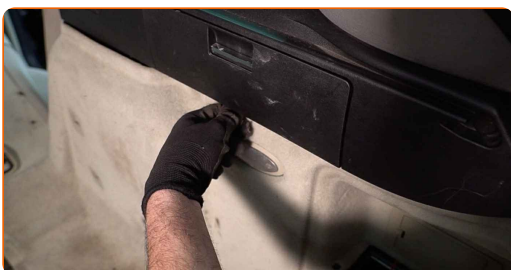

**88** Screw in the fastener of the boot side lining. Use Torx T25. Use a ratchet wrench.




**89** Install the cover of the boot side lining.




**90** Install the side plastic panel.


**91** Screw the fasteners of the side plastic trim panel. Use a Phillips screwdriver.

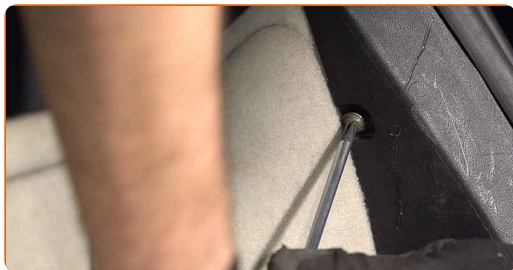

**92** Install the central protective plastic panel.

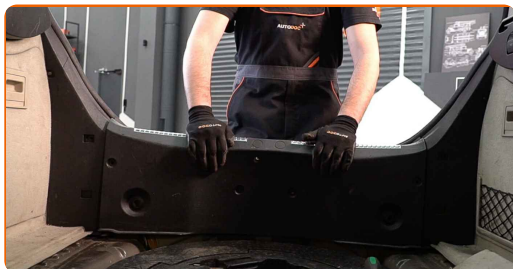


- 93 Screw in the fastener of the central protective plastic panel. Use Torx T25. Use a ratchet wrench. Use a Phillips screwdriver.

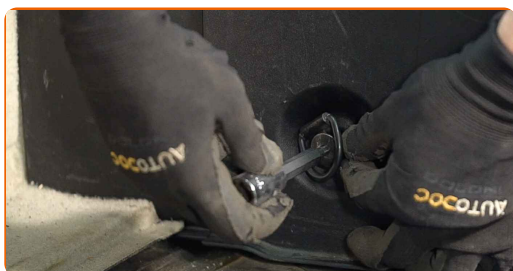


- 94 Install the boot front lower lining.



- 95 Install the clips of the boot front lower lining.

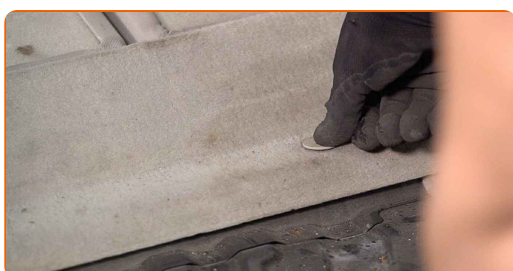


- 96 Install the seat belt trim cover. Use a drive socket #10.

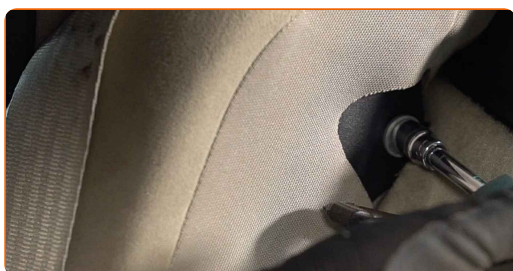


**97** Return the seat to its original position.



**98** Put down the lower lining of the boot.

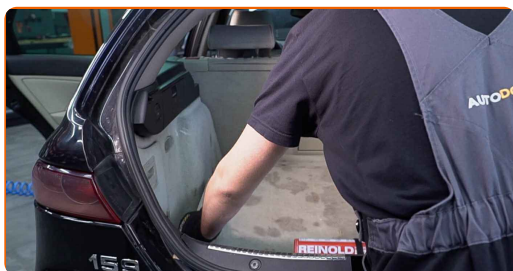

**99** Install the folding shelf to its mounting seat.

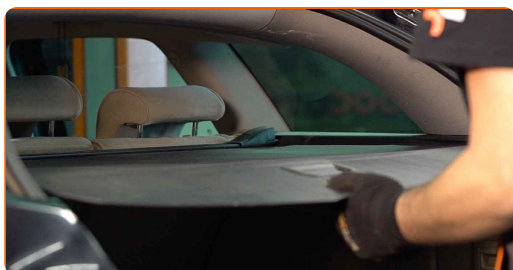

**100** Close the lid of the luggage compartment.

**101** Tighten the wheel bolts using a criss-cross pattern. Use a torque wrench. Tighten it to 120 Nm torque.



102

Remove the jacks and chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

 Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**SHOCK ABSORBERS: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.