



How to change tailgate
struts on **Opel Astra H**
saloon – replacement
guide

VIDEO TUTORIAL




ⓘ Important!

This replacement procedure can be used for:

OPEL Astra H Caravan (A04) 1.6 LPG (L35), OPEL Astra H Caravan (A04) 1.4 LPG (L35), OPEL Astra H Caravan (A04) 1.4 (L35), OPEL Astra H Caravan (A04) 1.6 (L35), OPEL Astra H Caravan (A04) 1.8 (L35), OPEL Astra H Caravan (A04) 2.0 Turbo (L35), OPEL Astra H Caravan (A04) 1.7 CDTI (L35), OPEL Astra H Caravan (A04) 1.9 CDTI (L35), OPEL Astra H Caravan (A04) 1.9 CDTI 16V (L35), OPEL Astra H Caravan (A04) 1.3 CDTI (L35), OPEL Astra H Caravan (A04) 1.6 Turbo (L35), OPEL Astra H Saloon (A04) 1.8 (L69), OPEL Astra H Saloon (A04) 1.3 CDTi (L69), OPEL Astra H Saloon (A04) 1.7 CDTi (L69), OPEL Astra Classic Saloon (A04) 1.7 CDTi, (+ 10)

The steps may slightly vary depending on the car design.

REPLACEMENT: TAILGATE STRUTS – OPEL ASTRA H
SALOON. TOOLS YOU MIGHT NEED:

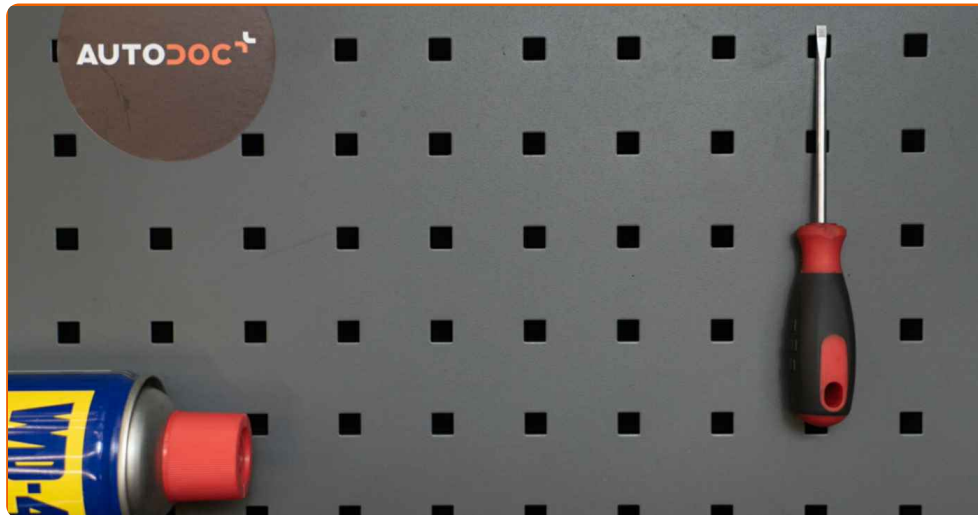

• WD-40 spray

• Flat screwdriver


BUY TOOLS

Replacement: tailgate struts – Opel Astra H saloon. Tip from AUTODOC:


- Right and left gas struts of the boot lid should be replaced simultaneously.
- The replacement procedure is identical for the right and left gas struts of the boot lid.
- Please note: all work on the car – Opel Astra H saloon – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the boot lid.

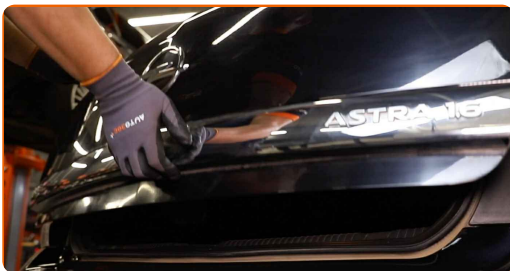

2 Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.

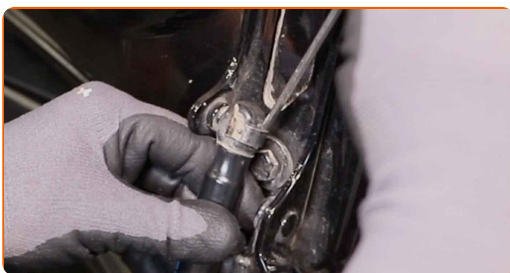

3

Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.



Replacement: tailgate struts – Opel Astra H saloon. Tip from AUTODOC experts:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.

4

Remove the boot lid gas strut.

5

Clean the mounting seats of the boot strut. Use WD-40 spray.



6

Install the new boot lid gas strut.



Replacement: tailgate struts – Opel Astra H saloon. Tip:

- To avoid any injuries, be sure to hold the boot lid while installing the gas strut.

7

Snap on the circlip connecting the gas strut to the car body.




8

Snap on the circlip connecting the gas strut to the boot lid.



9

Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.

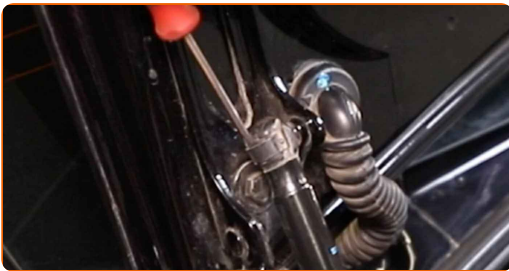

10

Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.




Replacement: tailgate struts – Opel Astra H saloon. Professionals recommend:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.


11

Remove the boot lid gas strut.

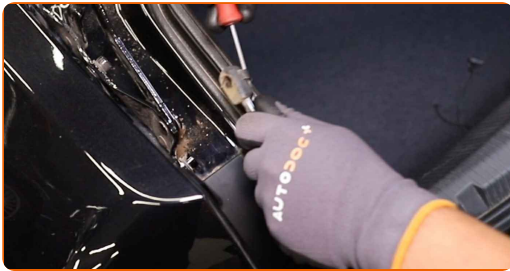

12

Clean the mounting seats of the boot strut. Use WD-40 spray.

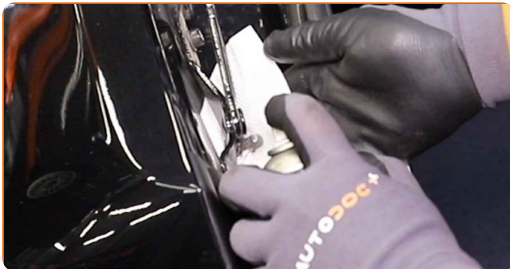


13

Install the new boot lid gas strut.


Replacement: tailgate struts – Opel Astra H saloon. AUTODOC recommends:

- To avoid any injuries, be sure to hold the boot lid while installing the gas strut.

14 Snap on the circlip connecting the gas strut to the car body.

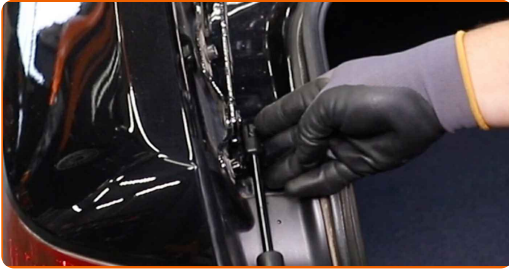

15 Snap on the circlip connecting the gas strut to the boot lid.

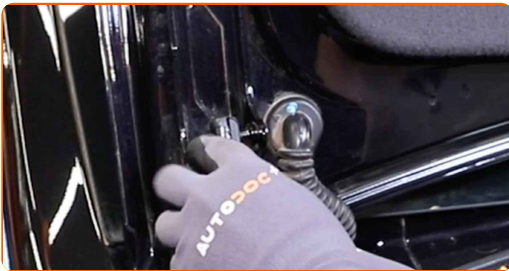

Replacement: tailgate struts – Opel Astra H saloon. Tip:

- Check the working condition of the boot lid gas springs after they are installed.

16 Close the lid of the luggage compartment.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

AUTODOC+

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR OPEL

TAILGATE STRUTS: A WIDE SELECTION

CHOOSE CAR PARTS FOR OPEL ASTRA H SALOON

TAILGATE STRUTS FOR OPEL: BUY NOW

**TAILGATE STRUTS FOR OPEL ASTRA H SALOON: THE BEST
DEALS & OFFERS**

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.