



How to change rear strut
mount on **AUDI A6**
Saloon (4F2, C6) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

AUDI A6 Saloon (4F2, C6) 3.0 TFSI quattro, AUDI A6 Saloon (4F2, C6) 3.2 FSI, AUDI A6 Saloon (4F2, C6) 2.4, AUDI A6 Saloon (4F2, C6) 3.2 FSI quattro, AUDI A6 Saloon (4F2, C6) 2.0 TDI, AUDI A6 Saloon (4F2, C6) 4.2 quattro, AUDI A6 Saloon (4F2, C6) 3.0 TDI quattro, AUDI A6 Saloon (4F2, C6) 2.7 TDI, AUDI A6 Saloon (4F2, C6) 2.4 quattro, AUDI A6 Saloon (4F2, C6) 2.7 TDI quattro, AUDI A6 Saloon (4F2, C6) 2.0 TFSI, AUDI A6 Saloon (4F2, C6) S6 quattro, AUDI A6 Saloon (4F2, C6) 4.2 FSI quattro, AUDI A6 Saloon (4F2, C6) 2.8 FSI, AUDI A6 Saloon (4F2, C6) 3.0 quattro, (+ 2)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A4 Saloon (8E2, B6) 1.8 T quattro

REPLACEMENT: STRUT MOUNT – AUDI A6 SALOON (4F2, C6). TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #17
- Combination spanner #21
- Drive socket # 21
- Torx bit T25
- HEX bit No.H6.
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Adjustable wrench
- Hydraulic transmission jack
- Wheel chock

Buy tools

Replacement: strut mount – AUDI A6 Saloon (4F2, C6). AUTODOC experts recommend:

- The replacement procedure is identical for the mounts of the right and left shock absorbers of the rear suspension.
- Both mounts of the rear shock struts should be replaced simultaneously.
- Be sure to replace all self-locking nuts and bolts during installation.
- All work should be done with the engine stopped.

REPLACEMENT: STRUT MOUNT – AUDI A6 SALOON (4F2, C6). TAKE THE FOLLOWING STEPS:

1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the rear of the car and secure on supports.

4

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
AUDI A6 Saloon (4F2, C6)

5

Remove the wheel.



6


Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.

7

Unscrew the lower fastener of the shock absorber. Use a combination spanner #21. Use a drive socket #21. Use a ratchet wrench.




8 Support the arm. Use a hydraulic transmission jack.

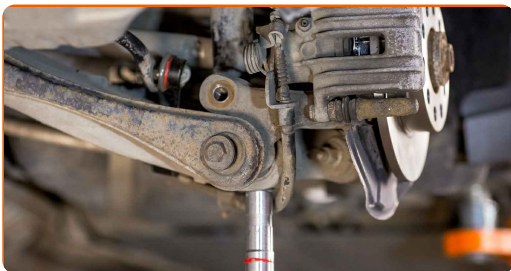

9 Remove the fastening bolt.


10 Unscrew and remove the wheel arch cover fasteners. Use Torx T25. Use a ratchet wrench.

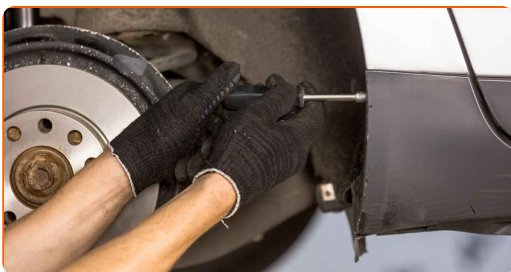

11 Remove the wheel arch cover.



12 Unscrew the upper fastener of the shock absorber. Use HEX No.H6. Use a ratchet wrench.

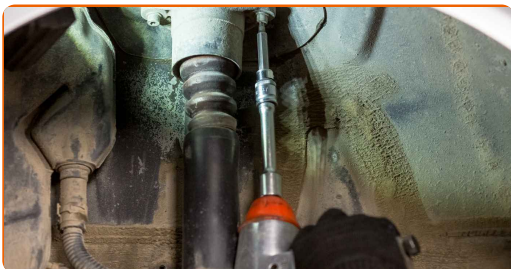


AUTODOC recommends:

- Important! Hold the shock absorber while unscrewing the fastening bolts. AUDI A6 Saloon (4F2, C6)

13

Remove the shock absorber.

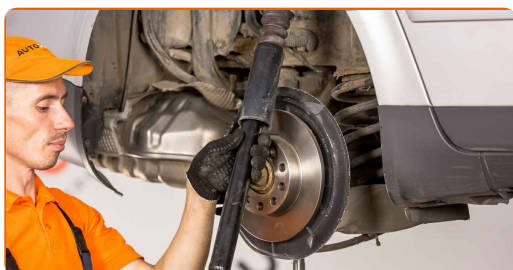

14

Clean the shock absorber rod fastener. Use a wire brush. Use WD-40 spray.

15

Remove the shock absorber piston rod fastening. Use a combination spanner #17. Use an adjustable wrench.



16

Remove the top mount.




17

Remove the shock absorber dust cap and the bump stop.

18

Install the new mount, boot, and bump stop on the shock absorber.

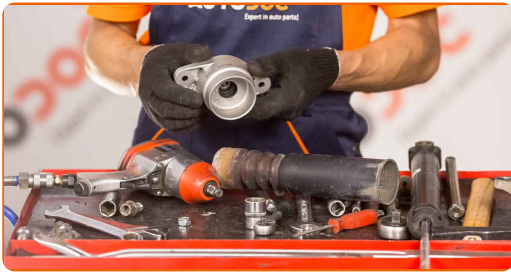


19

Screw the shock strut piston rod upper fastening. Use a combination spanner #17. Use an adjustable wrench. Use a torque wrench. Tighten it to 25 Nm torque.




20

Clean the shock absorber mounting seats. Use a wire brush. Use WD-40 spray.

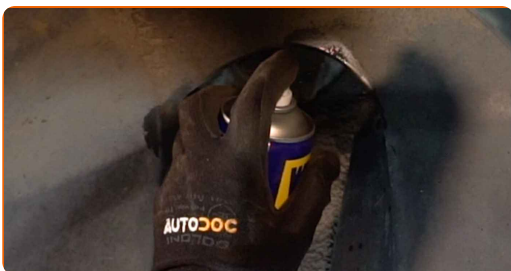

21

Place the shock absorber in the wheel arch and secure it.

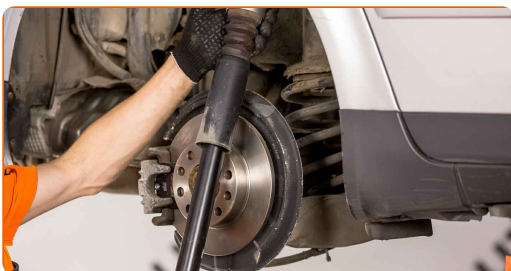


AUTODOC recommends:

- AUDI A6 Saloon (4F2, C6) – To avoid injury, hold the shock absorber while screwing in the fastening bolts.


22

Tighten the top shock absorber fastening. Use HEX No.H6. Use a torque wrench. Tighten it to 36 Nm torque.

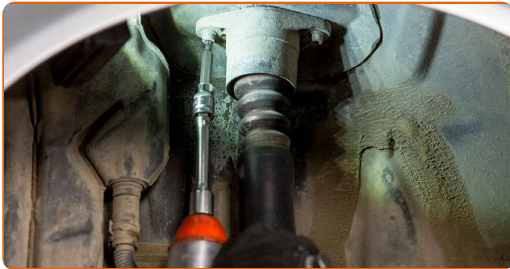

23

Install the fastening bolt.

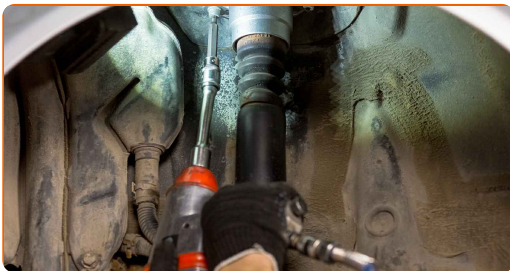

24

Screw in the lower fastener of the shock absorber. Use a combination spanner #21. Use a drive socket #21. Use a ratchet wrench.



25

Tighten the lower fastener of the shock absorber. Use a drive socket #21. Use a torque wrench. Tighten it to 150 Nm torque.+90°

AUTODOC recommends:

- Important! Be sure to use new fasteners.

26

Remove the support from under the arm.




AUTODOC recommends:

- Replacement: strut mount – AUDI A6 Saloon (4F2, C6). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


27

Install the wheel arch cover to its mounting seat.

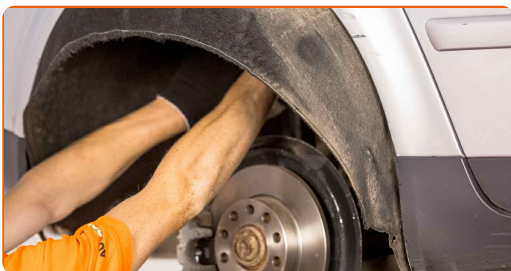

28

Install and tighten the wheel arch cover fasteners. Use Torx T25. Use a ratchet wrench.

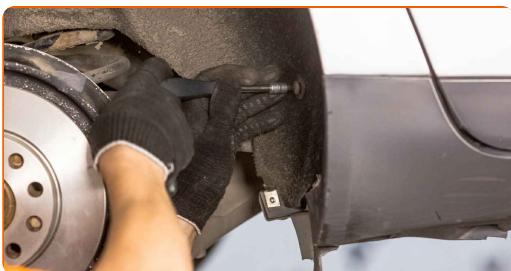

29

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



30

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: strut mount – AUDI A6 Saloon (4F2, C6). After applying the spray, wait a few minutes.

31

Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. AUDI A6 Saloon (4F2, C6)

32 Screw in the wheel bolts. Use wheel impact socket #17.



33 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.

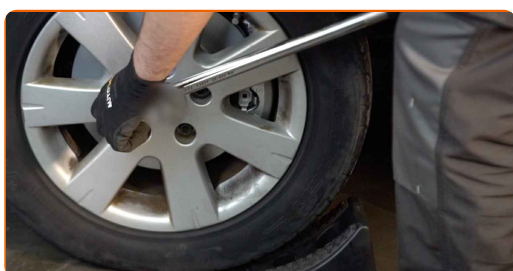

34 Remove the jacks and chocks.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

STRUT MOUNT: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.