



How to change front
strut mount on **Fiat**
Bravo 2 – replacement
guide

VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

FIAT Bravo II Hatchback (198) 1.4 16V, FIAT Bravo II Hatchback (198) 1.6 D Multijet, FIAT Bravo II Hatchback (198) 1.9 D Multijet, FIAT Bravo II Hatchback (198) 1.4 LPG, FIAT Stilo Multi Wagon (192) 2.4 20V, FIAT Bravo II Hatchback (198) 1.4 T-Jet, FIAT Bravo II Hatchback (198) 2.0 D Multijet, FIAT Stilo Hatchback (192) 1.2 16V, FIAT Stilo Hatchback (192) 1.6 16V, FIAT Stilo Hatchback (192) 1.8 16V, FIAT Stilo Hatchback (192) 1.9 JTD, FIAT Stilo Hatchback (192) 2.4 20V, FIAT Stilo Multi Wagon (192) 1.6 16V, FIAT Stilo Multi Wagon (192) 1.8 16V, FIAT Stilo Multi Wagon (192) 1.9 JTD, (+ 8)

The steps may slightly vary depending on the car design.

REPLACEMENT: STRUT MOUNT – FIAT BRAVO 2.
TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- HEX bit No.H6.
- Combination spanner #15
- Combination spanner #17
- Combination spanner #19
- Drive socket # 15
- Drive socket # 17
- Drive socket # 19
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

BUY TOOLS

Replacement: strut mount – Fiat Bravo 2. AUTODOC recommends:

- All mounts of the front shock struts should be replaced simultaneously.
- The replacement procedure is identical for the mounts of the left and right shock struts of the front suspension.
- Be sure to replace all self-locking nuts and bolts during installation.
- All work should be done with the engine stopped.


REPLACEMENT: STRUT MOUNT – FIAT BRAVO 2. RECOMMENDED SEQUENCE OF STEPS:

1

Open the bonnet.

**2**

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

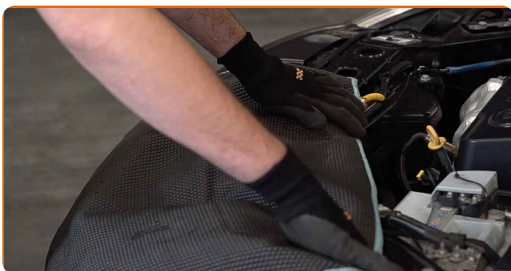


3

Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.




4

Remove the rubber strip.

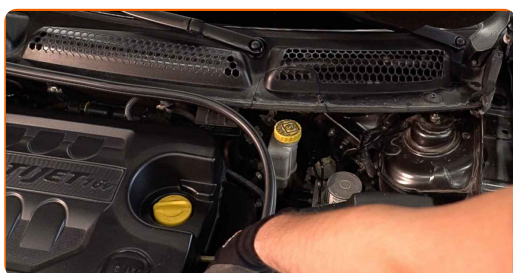

5

Loosen the upper fastener of the shock strut mount. Use a combination spanner #19.

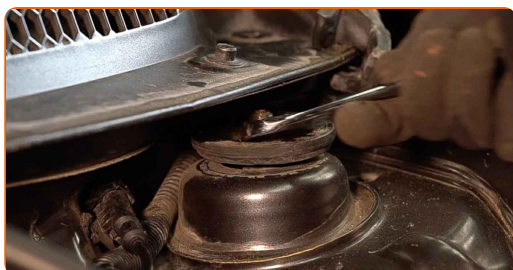


6

Secure the wheels with chocks.



7 Loosen the wheel mounting bolts. Use wheel impact socket #17.

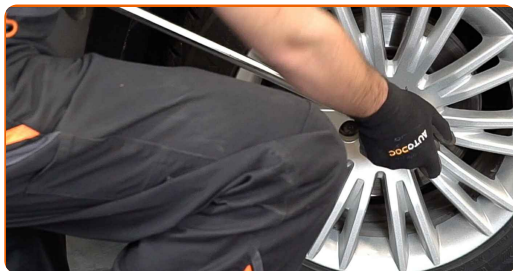

8 Raise the front of the car and secure on supports.




9 Unscrew the wheel bolts.



Replacement: strut mount – Fiat Bravo 2. Tip:


- To avoid injury, hold up the wheel when unscrewing the bolts.

10 Remove the wheel.

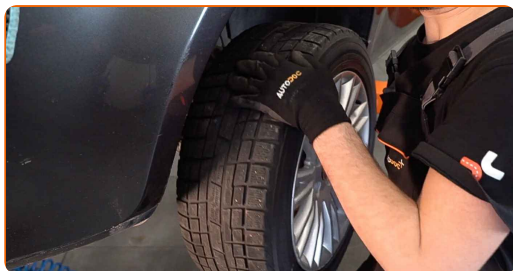


11

Disconnect the wiring and the brake hose from the bracket on the shock strut. Use a crowbar.

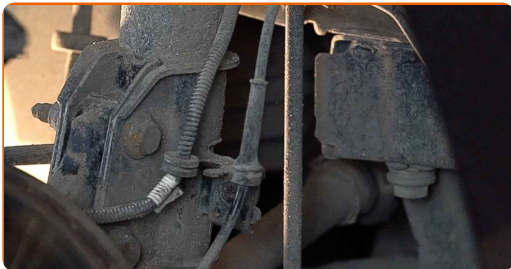


12.1

Clean the fasteners connecting the stabiliser link to the shock strut, and those connecting the shock strut to the steering knuckle.

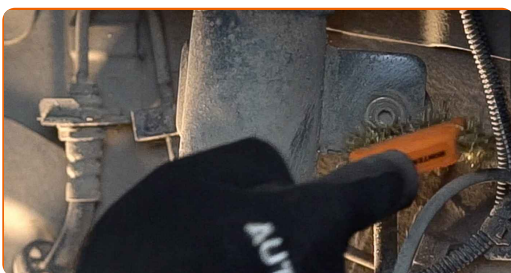


12.2

Use a wire brush. Use WD-40 spray.

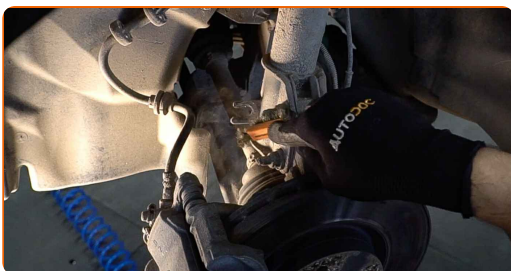


13

Unscrew the nut and remove the stabilizer rod from the shock strut. Use a combination spanner #17. Use a ratchet wrench.

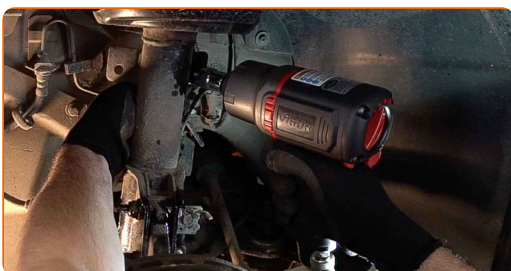


14

Prop up the steering knuckle. Use a hydraulic transmission jack.

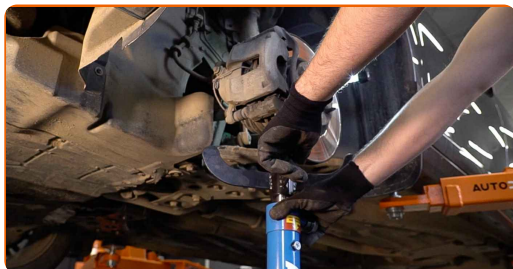

15

Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a combination spanner #15. Use a drive socket #17. Use a tap wrench.

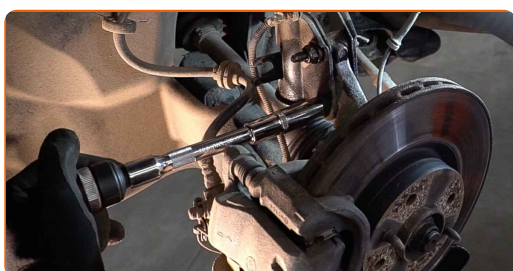


16

Remove the fastening bolts.



17

Disconnect the steering knuckle from the shock absorber strut.

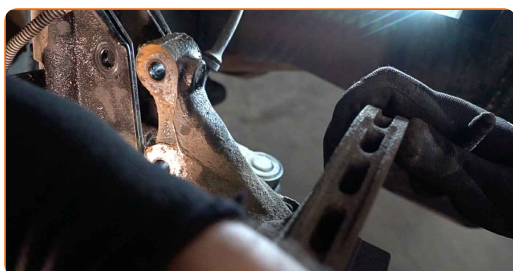

18

Unscrew the top fastening of the shock strut mount. Use a drive socket #19. Use a ratchet wrench.




AUTODOC recommends:

- Important! Hold the suspension strut while unscrewing the fastening bolts. Fiat Bravo 2

19

Remove the suspension strut.

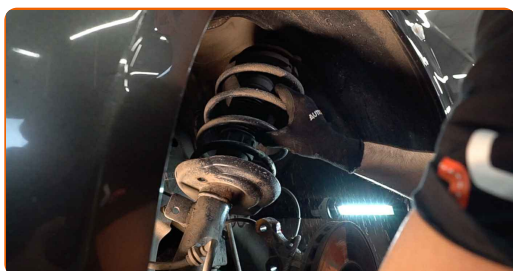

20

Set the shock absorber strut on the spring compressor tool.




Replacement: strut mount – Fiat Bravo 2. AUTODOC experts recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

21

Compress the spring.

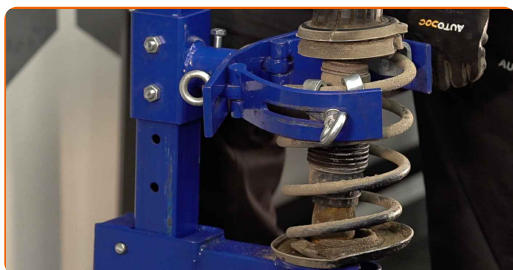

22

Treat the shock strut rod. Use a wire brush. Use WD-40 spray.




23

Remove the strut piston rod nut. Use a combination spanner #19. Use HEX No.H6. Use a ratchet wrench.



24

Remove the top strut mount.

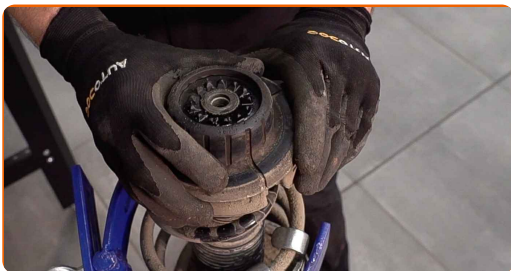


Replacement: strut mount – Fiat Bravo 2. Tip from AUTODOC:

- Examine the shock absorber dust cap and the bump stop. Replace them if necessary.


25

Install the upper strut mount and the strut mount bearing.

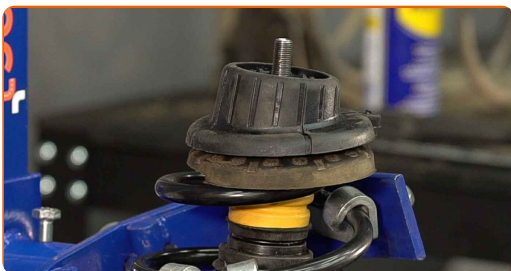

26

Tighten the shock strut piston rod nut. Use a combination spanner #19. Use HEX No.H6. Use a torque wrench. Tighten it to 60 Nm torque.

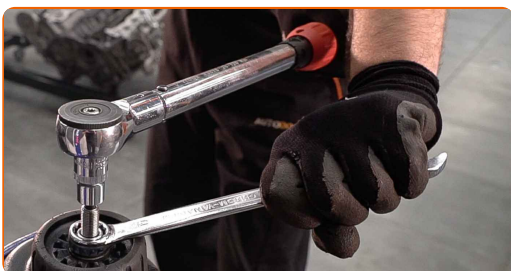

AUTODOC recommends:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.


27 Decompress the spring.




28 Remove the assembled shock strut.



29 Install the shock strut into the wheel arch.

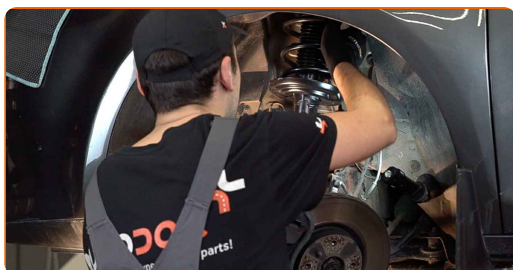

30 Screw the top fastening of the shock strut mount. Do not tighten it.

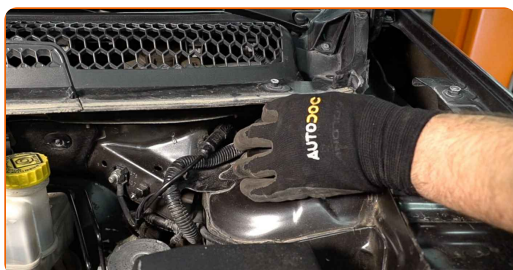


AUTODOC recommends:


- Fiat Bravo 2 – To avoid injury, hold the suspension strut while screwing in the fastening bolts.

31


Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.

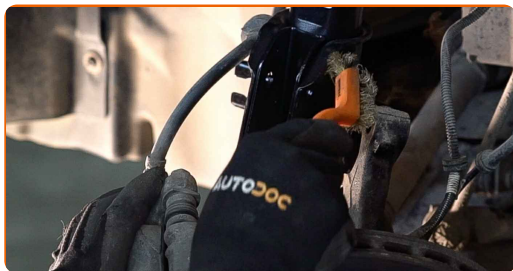**32**


Fix the shock absorber strut on the steering knuckle.

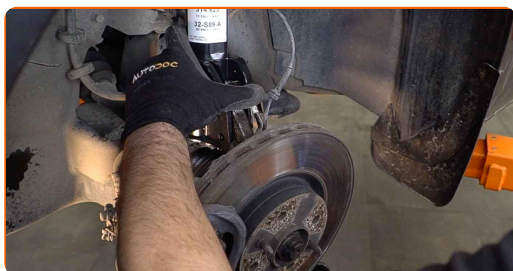**33**


Raise the hydraulic transmission jack by 10-15 cm.

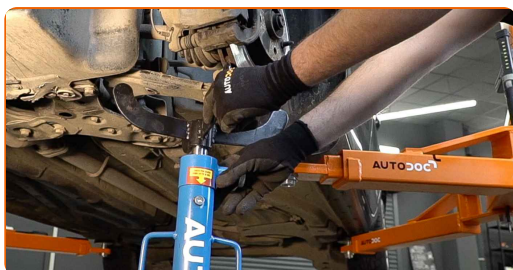**34**


Install the fastening bolts.

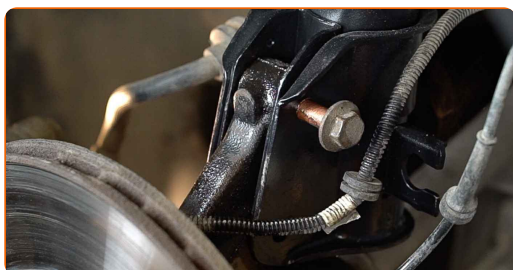


- 35** Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a drive socket #15. Use a drive socket #17. Use a combination spanner #15. Use a torque wrench. Tighten it to 70 Nm torque.

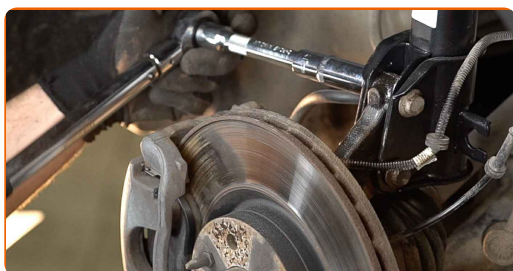


- 36** Treat all joints of the stabiliser link. Use WD-40 spray.

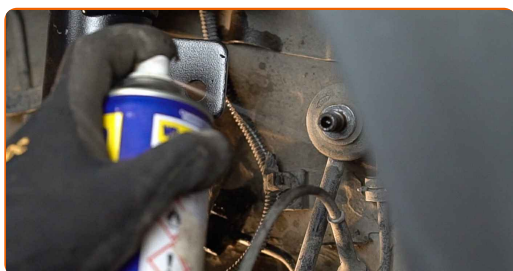

- 37** Install the transverse stabilizer link.

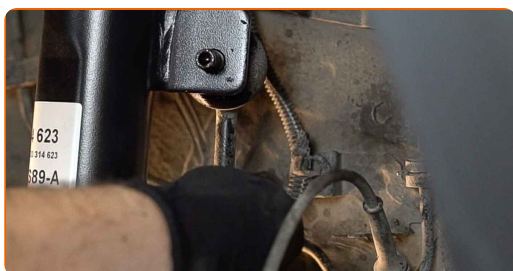


- 38** Tighten the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #17. Use a torque wrench. Tighten it to 55 Nm torque.

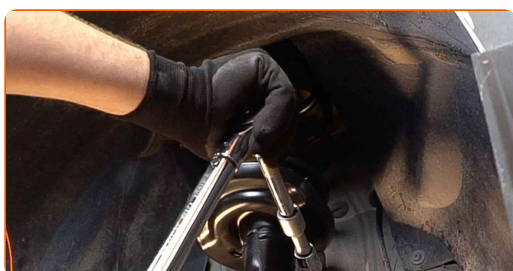

39 Connect the fastener of the ABS sensor cable to the shock absorber strut. Fasten the brake hose on the strut.



40 Remove the support from under the steering knuckle.

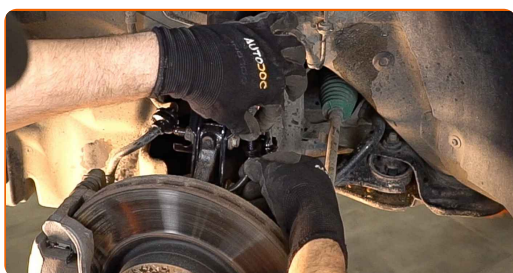

AUTODOC recommends:

- Replacement: strut mount – Fiat Bravo 2. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

41 Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.

42 Install the wheel.



Replacement: strut mount – Fiat Bravo 2. Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


43

Screw in the wheel bolts. Use wheel impact socket #17.




44

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 Nm torque.

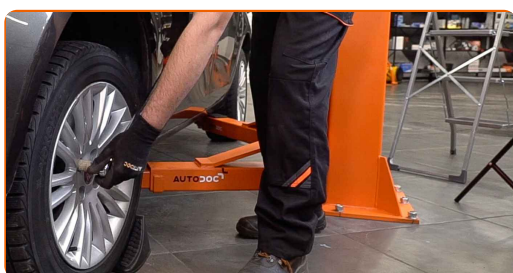


45

Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #19. Use a torque wrench. Tighten it to 44 Nm torque.

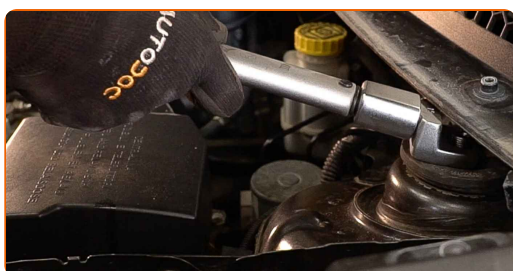

46

Install the rubber strip.

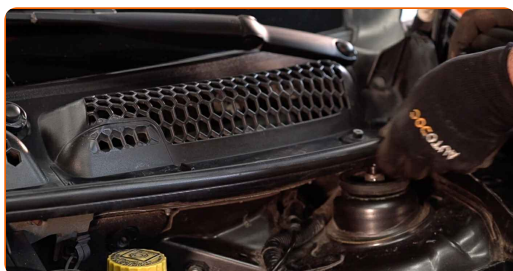


47

Treat the fasteners of the shock strut mount. Use copper grease.




48

Remove the fender protection cover.

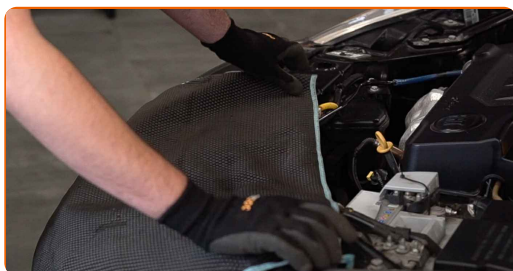

49

Close the hood.

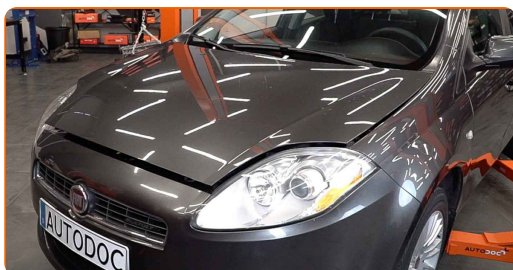

50

Remove the jacks and chocks.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FIAT

STRUT MOUNT: A WIDE SELECTION

CHOOSE CAR PARTS FOR FIAT BRAVO 2

STRUT MOUNT FOR FIAT: BUY NOW

STRUT MOUNT FOR FIAT BRAVO 2: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.