# - AUTODOC CLUB

How to change pollen filter on **CITROËN C3 III Box Body / Hatchback** (SX, SY) – replacement guide



# SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle


# (i) Important!

This replacement procedure can be used for: CITROËN C3 III Box Body / Hatchback (SX, SY) PureTech 82, CITROËN C3 III Box Body / Hatchback (SX, SY) PureTech 110, CITROËN C3 III Box Body / Hatchback (SX, SY) BlueHDi 100


The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 207 Hatchback 1.6 16V VTi



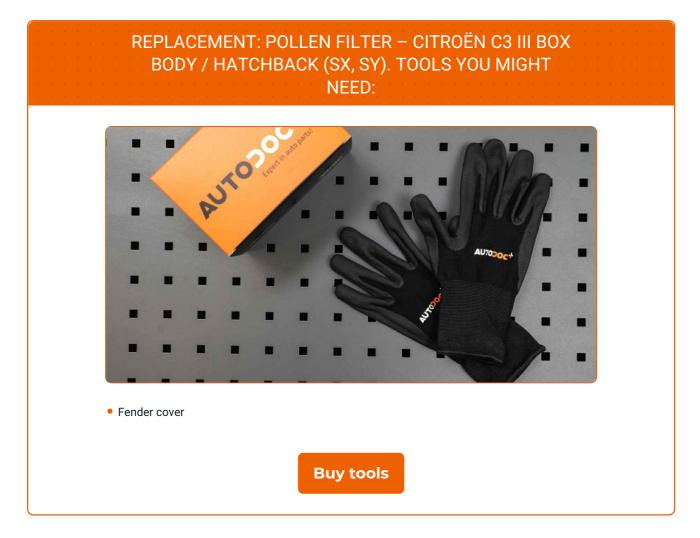



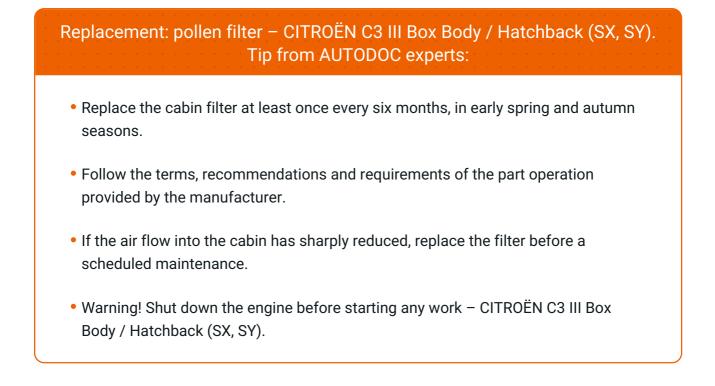

# CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3

Remove the cabin filter housing cover.

Open the bonnet.



#### AUTODOC recommends:

• Do not apply excessive force when removing the part. Otherwise you may damage it.

# + AUTODOC CLUB



4

Press the pollen filter retaining clips to release them.



5

Take all filter cartridges out.



6

Switch on the ignition.

Close the heater flap.



8

Switch off the ignition.

9

Clean the cabin filter housing and cover.





### Replacement: pollen filter – CITROËN C3 III Box Body / Hatchback (SX, SY). Tip:

• Remove any debris from the cabin filter housing carefully to prevent contamination of the ventilation duct.

#### 10

Install new filter cartridges.



#### AUTODOC recommends:

- Follow the air flow direction arrow on the filter.
- Check out the correct location of the filter element. Do not skew.
- CITROËN C3 III Box Body / Hatchback (SX, SY) It's important to only use highquality car parts.



Lock the pollen filter retaining clips in place.





12

Reinstall the cabin filter housing cover. Make sure you hear a click indicating that it is locked in place.



## Replacement: pollen filter – CITROËN C3 III Box Body / Hatchback (SX, SY). Professionals recommend:

• When installing, do not use excessive force to avoid damage to the part.

Remove the fender protection cover.

Close the hood.

Switch on the ignition. The heater flap will automatically return to its normal position.

Switch on the air conditioning system. This is necessary in order to make sure that the component operates properly.

17 Switch off the ignition.



**VIEW MORE TUTORIALS** 



# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



#### A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **POLLEN FILTER: A WIDE SELECTION**

# **i DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.