



How to change front coil
springs on **FIAT Punto II
Van (188)** – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

FIAT Punto II Van (188) 1.2 60

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FIAT Punto II Hatchback (188) 1.2 60

**REPLACEMENT: COIL SPRINGS – FIAT PUNTO II VAN
(188). TOOLS YOU MIGHT NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #17
- Combination spanner #27
- HEX bit no.H6.
- Drive socket # 12
- Drive socket # 15
- Drive socket # 17
- Drive socket # 19
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

Buy tools

Replacement: coil springs – FIAT Punto II Van (188). Tip from AUTODOC experts:


- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- Please note: all work on the car – FIAT Punto II Van (188) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


3 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.

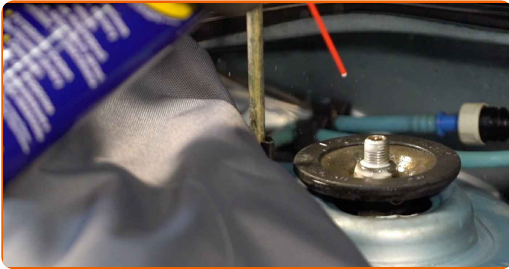


4 Loosen the upper fastener of the shock strut mount. Use HEX No.H6. Use a drive socket #19. Use a ratchet wrench.

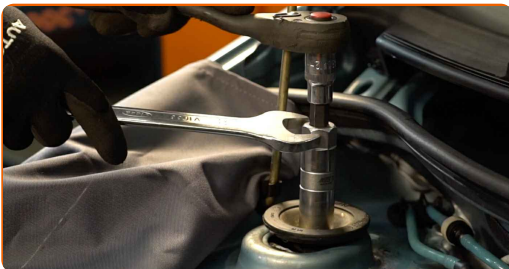

5 Secure the wheels with chocks.

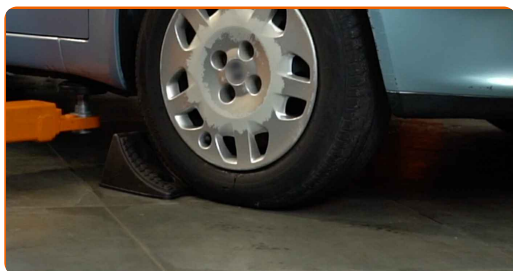

6 Loosen the wheel mounting bolts. Use wheel impact socket #19.

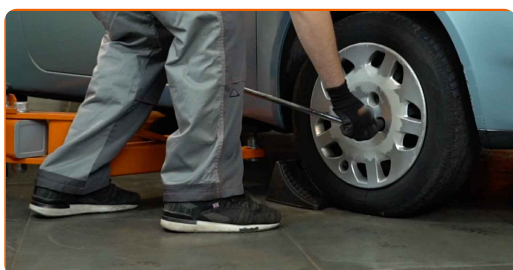

7 Raise the front of the car and secure on supports.


8 Unscrew the wheel bolts.




Replacement: coil springs – FIAT Punto II Van (188). AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.


9 Remove the wheel.

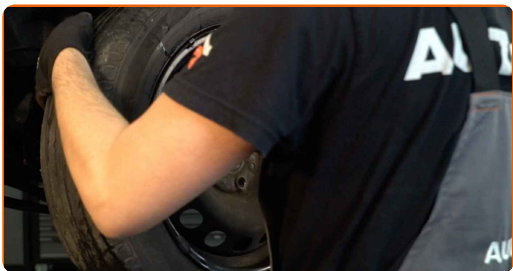


10 Clean the fasteners connecting the brake hose to the shock strut. Use a wire brush. Use WD-40 spray.

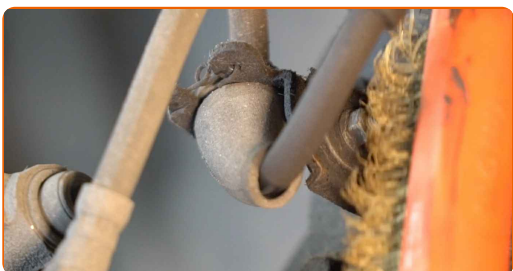


11 Disconnect the brake hose holder from the shock absorber strut. Use a drive socket #12. Use a ratchet wrench.

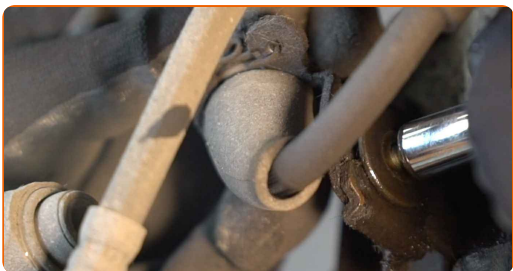


12 Detach the brake hose from the shock strut.

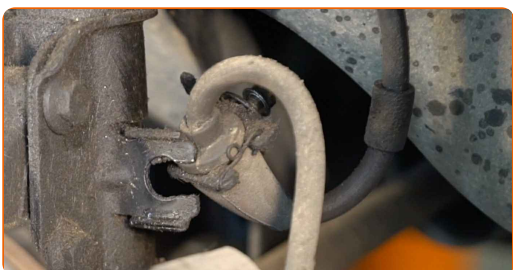

13 Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

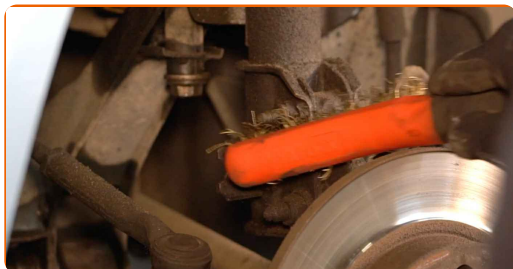


14 Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a drive socket #17. Use a tap wrench.

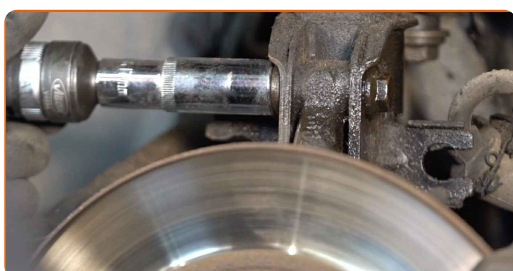

15 Prop up the steering knuckle. Use a hydraulic transmission jack.



16 Remove the fastening bolts. Use a crowbar.

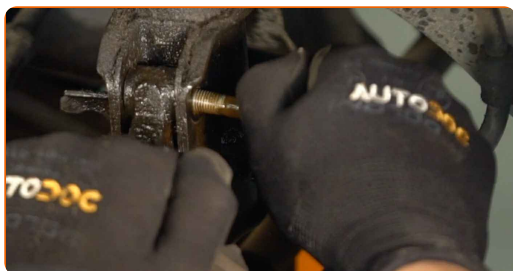

17 Disconnect the steering knuckle from the shock absorber strut. Use a crowbar.



18

Unscrew the top fastening of the shock strut mount. Use a drive socket #19.




AUTODOC recommends:

- Important! Hold the suspension strut while unscrewing the fastening bolts. FIAT Punto II Van (188)

19

Remove the suspension strut.

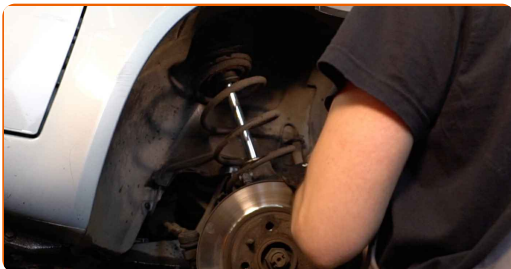

20


Set the shock absorber strut on the spring compressor tool.



Replacement: coil springs – FIAT Punto II Van (188). AUTODOC experts recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.


21 Compress the spring.

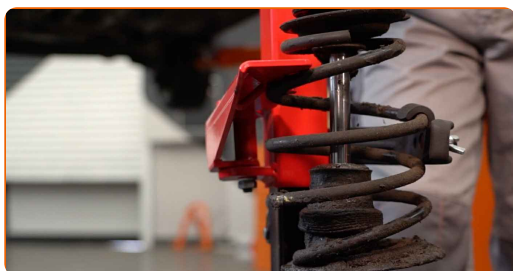


22 Remove the strut piston rod nut. Use HEX No.H6. Use a combination spanner #27. Use a ratchet wrench.



23 Remove the top strut mount.

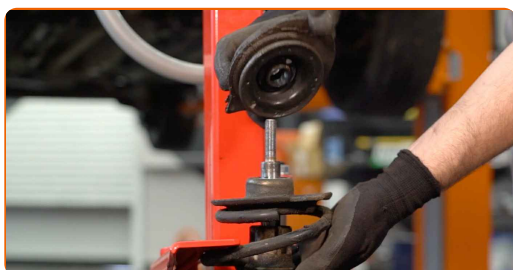

24 Release the coil spring.

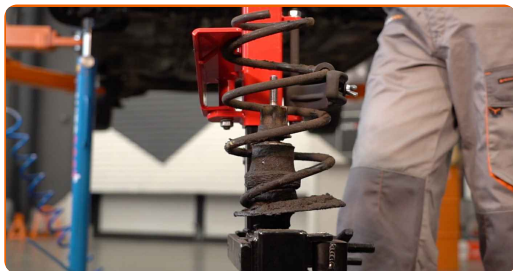

25 Remove the spring.



26 Remove the shock absorber dust cap and the bump stop.




AUTODOC recommends:

- Replacement: coil springs – FIAT Punto II Van (188). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

27 Install the spring on the shock absorber.




28 Compress the spring.

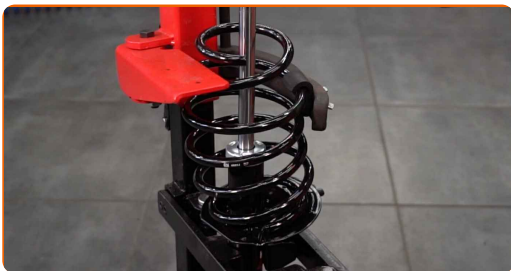


29 Install the dust sleeve and the bump stop on the new shock absorber.



30 Install the upper strut mount and the strut mount bearing.

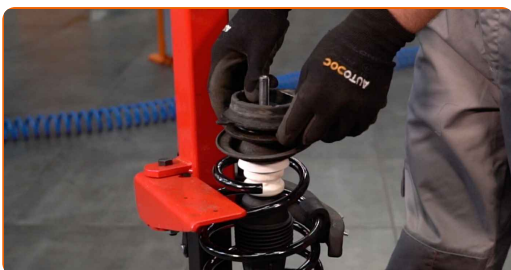


31 Tighten the shock strut piston rod nut. Use HEX No.H6. Use a combination spanner #27. Use a torque wrench. Tighten it to 59 Nm torque.

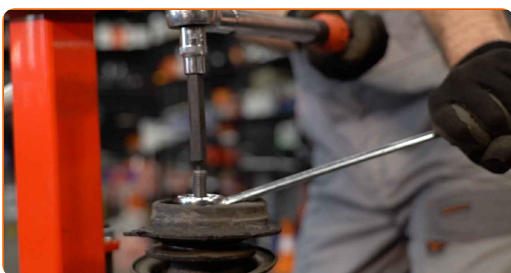


Replacement: coil springs – FIAT Punto II Van (188). Tip:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.


32 Decompress the spring.

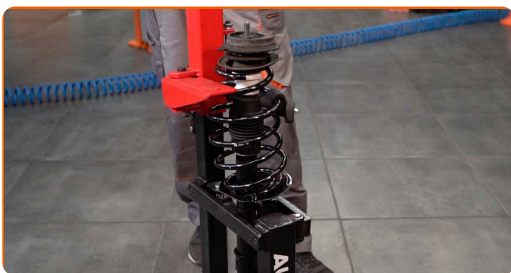

33 Remove the assembled shock strut.

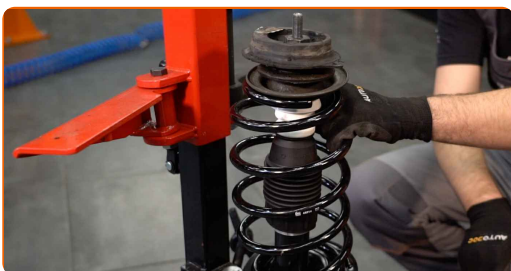

34 Install the shock strut into the wheel arch.

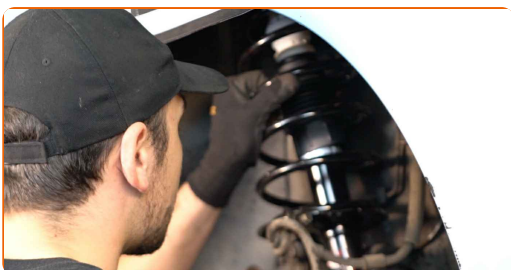

35 Screw the top fastening of the shock strut mount. Do not tighten it.




AUTODOC recommends:

- FIAT Punto II Van (188) – To avoid injury, hold the suspension strut while screwing in the fastening bolts.


36

Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.

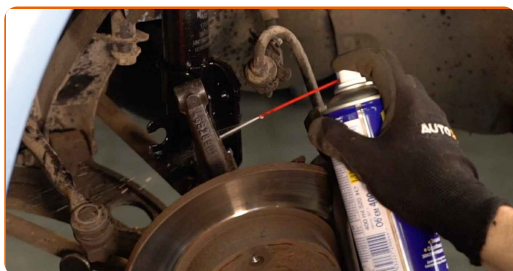


37

Fix the shock absorber strut on the steering knuckle.

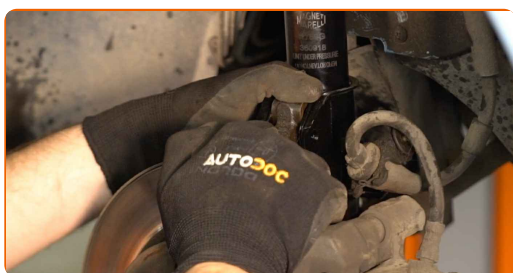


38

Install the fastening bolts.

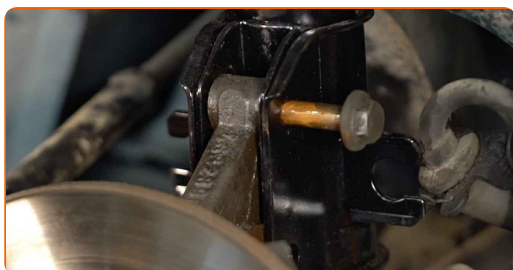

39

Remove the support from under the steering knuckle.

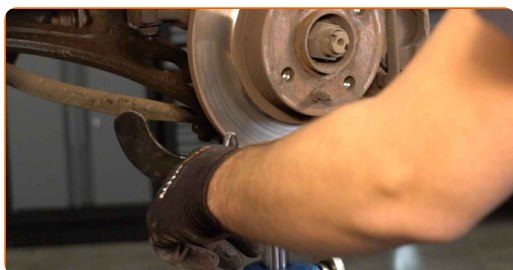


AUTODOC recommends:

- FIAT Punto II Van (188) – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.


- 40** Screw in the fastener that connects the shock strut to the steering knuckle. Use a drive socket #15. Use a combination spanner #17.




- 41** Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a drive socket #15. Use a combination spanner #17. Use a torque wrench. Tighten it to 75 Nm torque.

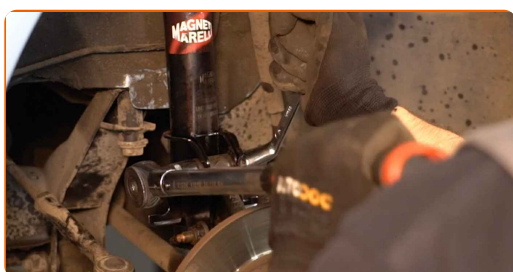

- 42** Fasten the brake hose on the strut.

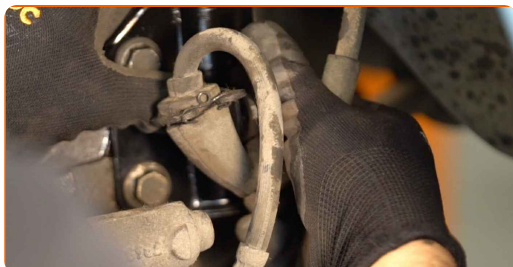

- 43** Tighten the brake hose fastener. Use a drive socket #12. Use a ratchet wrench.

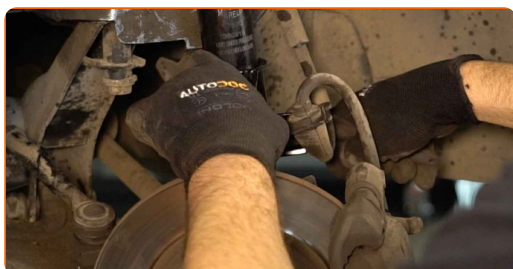

44 Treat the shock strut fasteners. Use copper grease.



45 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



46 Clean the brake disk surface. Use a brake cleaner.



Replacement: coil springs – FIAT Punto II Van (188). Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.

47 Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. FIAT Punto II Van (188)

48

Screw in the wheel bolts. Use wheel impact socket #19.

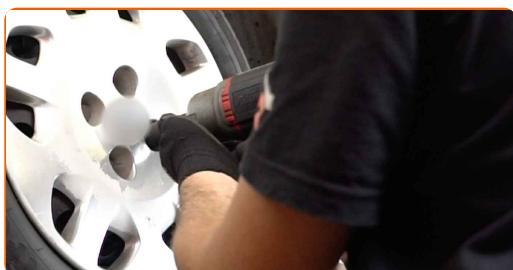

49

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 86 Nm torque.




50

Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #19. Use HEX No.H6. Use a torque wrench. Tighten it to 59 nm torque.



51 Treat the shock strut fasteners. Use copper grease.

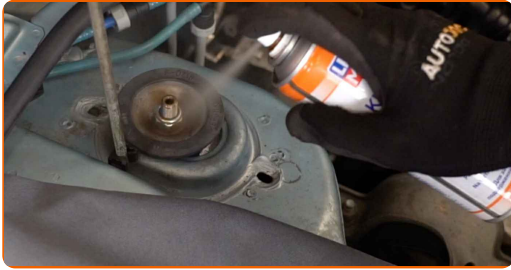

52 Remove the jacks and chocks.



53 Remove the fender protection cover.

54 Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COIL SPRINGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.