



How to change
serpentine belt on **FORD**
Fiesta Mk4 Hatchback
(JAS, JBS) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

ⓘ Important!

This replacement procedure can be used for:
FORD Fiesta Mk4 Hatchback (JAS, JBS) 1.6

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FORD Fiesta Mk5 Hatchback (JH1, JD1, JH3, JD3) 1.4 16V

REPLACEMENT: SERPENTINE BELT – FORD FIESTA
MK4 HATCHBACK (JAS, JBS). LIST OF THE TOOLS
YOU'LL NEED:



- Drive socket # 18
- Torx bit T27
- Tap wrench
- Crow bar
- Fender cover

[Buy tools](#)

Replacement: serpentine belt – FORD Fiesta Mk4 Hatchback (JAS, JBS).
Professionals recommend:

- All work should be done with the engine stopped.


REPLACEMENT: SERPENTINE BELT – FORD FIESTA MK4 HATCHBACK (JAS, JBS). USE THE FOLLOWING PROCEDURE:

1 Open the bonnet.


2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Lift the car using a jack or place it over an inspection pit.

4 Undo the fasteners of the oil pan lower cover. Use Torx T27.

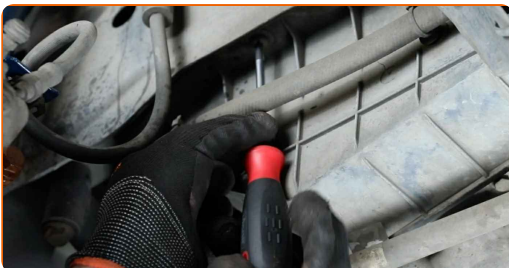

5 Remove the oil pan cover.

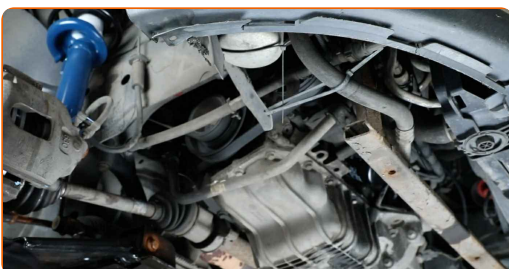

6 Pry up the hydraulic power steering belt. Use a crowbar.




7 Turn the crankshaft pulley. Use a drive socket #18. Use a tap wrench.




8 Remove the hydraulic power steering belt.



9 Pry up the poly-V belt. Use a crowbar.

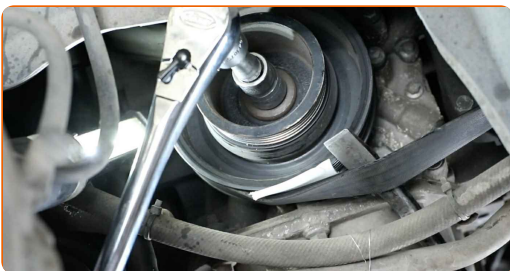

10 Turn the crankshaft pulley. Use a crowbar. Use a drive socket #18. Use a tap wrench.

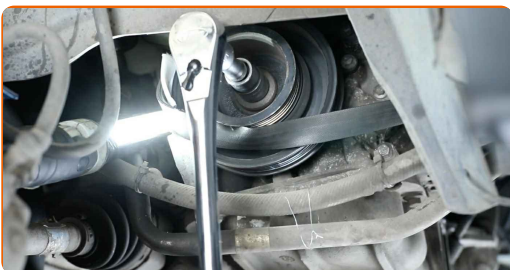


11

Remove the V-ribbed belt.



12

Install the V-ribbed belt. Use a crowbar. Use a drive socket #18. Use a tap wrench.

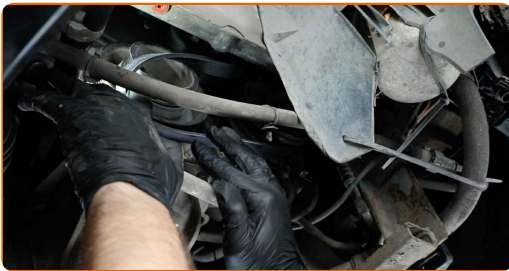


Replacement: serpentine belt – FORD Fiesta Mk4 Hatchback (JAS, JBS). Tip:

- Make sure that the V-ribbed belt fits all pulleys snugly.

13

Turn the crankshaft pulley. Use a crowbar. Use a drive socket #18. Use a tap wrench.

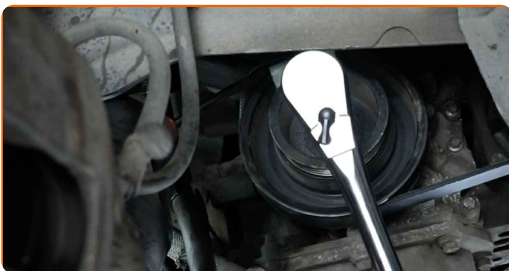

Replacement: serpentine belt – FORD Fiesta Mk4 Hatchback (JAS, JBS).
AUTODOC recommends:

- Proceed with caution! Don't damage the poly-V belt.


14

Install the hydraulic power steering belt. Use a crowbar. Use a drive socket #18. Use a tap wrench.




15

Turn the crankshaft pulley. Use a crowbar. Use a drive socket #18. Use a tap wrench.

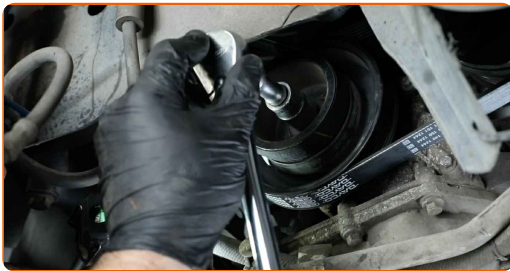

16

Reinstall the oil pan lower cover.

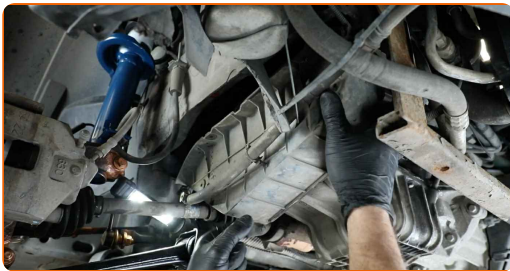

17

Tighten the fasteners of the oil pan lower cover. Use Torx T27.



18

Lower the car.

19

Remove the fender protection cover.

20

Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
 **Google Play**

Download on the
 **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SERPENTINE BELT: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.