




How to change intake  
pipe on **FORD Focus II  
Hatchback (DA\_, HCP,  
DP)** – replacement guide

## SIMILAR VIDEO TUTORIAL

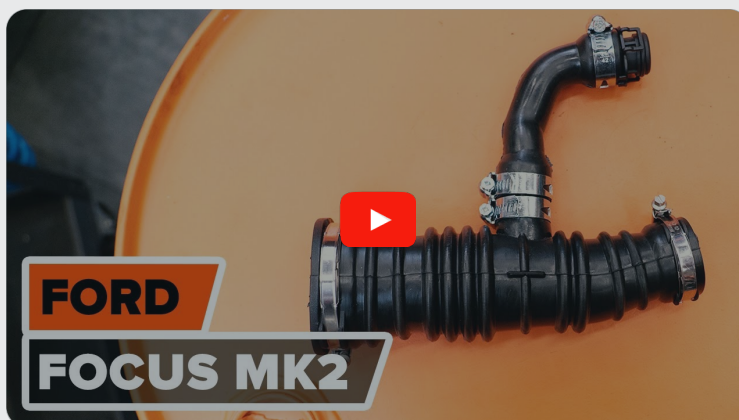

This video shows the replacement procedure of a similar car part on another vehicle

### Important!

This replacement procedure can be used for:  
FORD Focus II Hatchback (DA\_, HCP, DP) 1.6 TDCi

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FORD Focus II Saloon (DB\_, FCH, DH) 1.6 TDCi

REPLACEMENT: INTAKE PIPE – FORD FOCUS II  
HATCHBACK (DA\_, HCP, DP). TOOLS YOU'LL NEED:



- All-purpose cleaning spray
- Drive socket # 7
- Ratchet wrench
- Fender cover

**Buy tools**

Replacement: intake pipe – FORD Focus II Hatchback (DA\_, HCP, DP).  
AUTODOC recommends:


- All work should be done with the engine stopped.

## REPLACEMENT: INTAKE PIPE – FORD FOCUS II HATCHBACK (DA\_, HCP, DP). TAKE THE FOLLOWING STEPS:

1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


3 Remove the engine cover.

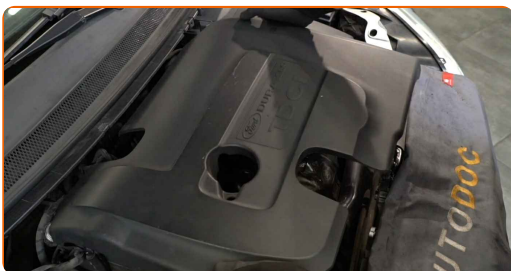


AUTODOC recommends:

- Replacement: intake pipe – FORD Focus II Hatchback (DA\_, HCP, DP). Do not use excessive force when removing the part as this may damage it.


**4** Clean the air hose fastener. Use all-purpose cleaning spray.

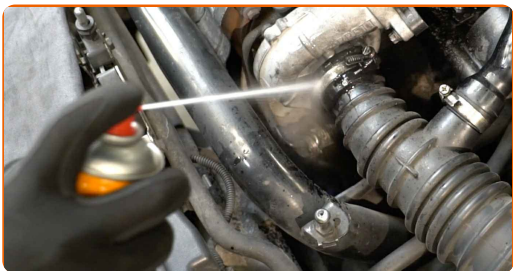


**5** Loosen the binding clamps attaching the air duct to the air filter housing and to the charger. Use a drive socket #7. Use a ratchet wrench.

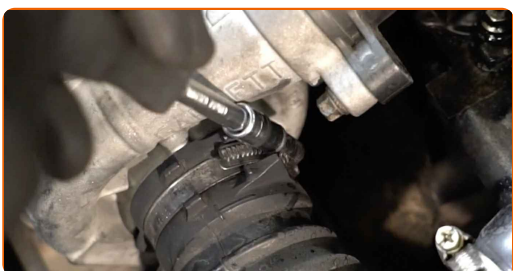


**6** On the right side, detach the PCV valve hose from the engine cover.

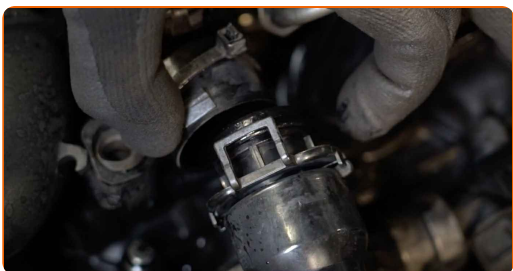

**7** Remove the air intake hose.

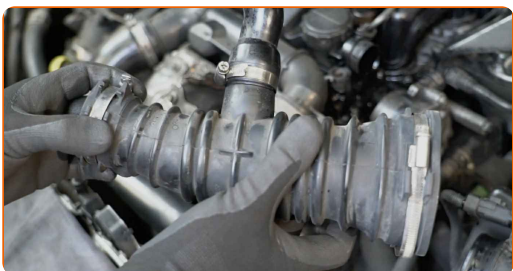


**8** Clean the mounting seat of the air intake hose.

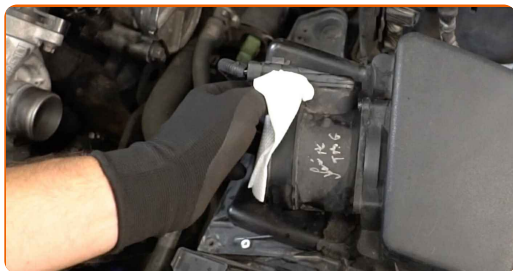


**9** Install the air intake pipe and secure it.



**10** On the right side, attach the PCV valve hose to the engine cover.

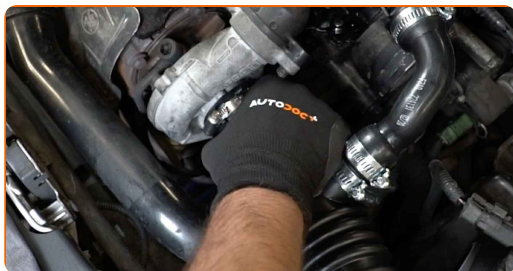

**11** Tighten the binding clamps that attach the air duct to the air filter housing and to the charger. Use a drive socket #7. Use a ratchet wrench.

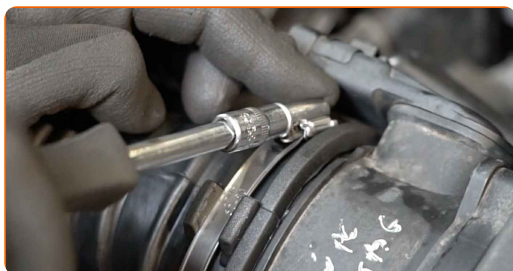

**12** Install the engine cover and secure it.



## AUTODOC recommends:

- Replacement: intake pipe – FORD Focus II Hatchback (DA\_, HCP, DP). To avoid damaging the part during installation, do not use excessive force.
- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.

13

Remove the fender protection cover.

14

Close the hood.

**WELL DONE!** [VIEW MORE TUTORIALS](#)

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**INTAKE PIPE: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.