



How to change ignition
leads on **FORD MONDEO**
III Estate (BWY) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

FORD MONDEO III Estate (BWY) 1.8 16V, FORD MONDEO III Estate (BWY) 2.0 16V,
FORD MONDEO III Estate (BWY) 1.8 SCi

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FORD MONDEO III Saloon (B4Y) 2.0 16V

REPLACEMENT: IGNITION LEADS – FORD MONDEO III
ESTATE (BWY). TOOLS YOU MIGHT NEED:



- Fender cover

[Buy tools](#)

Replacement: ignition leads – FORD MONDEO III Estate (BWY). Tip from AUTODOC:


- All work should be done with the engine stopped.

REPLACEMENT: IGNITION LEADS – FORD MONDEO III ESTATE (BWY). USE THE FOLLOWING PROCEDURE:

1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


3 Remove the engine cover.

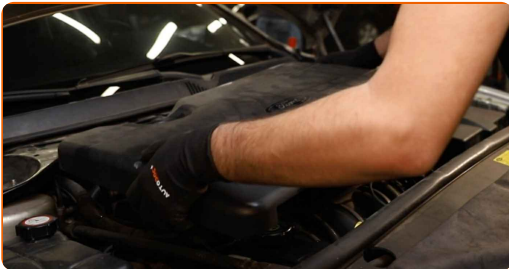

AUTODOC recommends:

- Replacement: ignition leads – FORD MONDEO III Estate (BWY). To avoid damaging the part when removing it, do not use excessive force.

4 Make marks to indicate the order of installation of the spark plug wires.

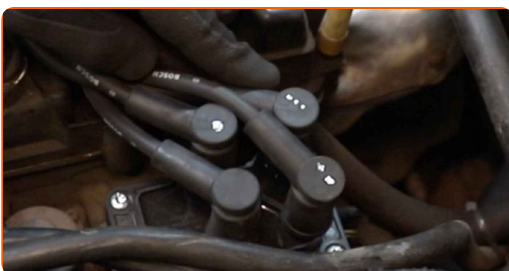


5 Disconnect the spark plug wires from the ignition coil. Disconnect the spark plug wires from the spark plugs.



Replacement: ignition leads – FORD MONDEO III Estate (BWY). Tip:

- Be careful to avoid damaging spark plug wires.
- Remember the position of the spark plug wires.


6 Connect the spark plug wires to the ignition coil. Connect the new spark plug wires to the spark plugs.

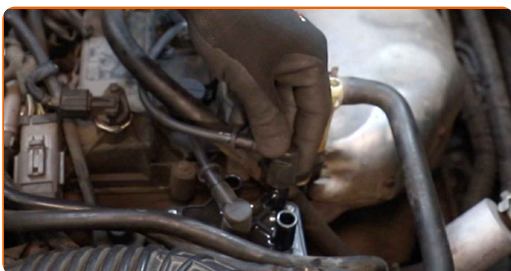

Replacement: ignition leads – FORD MONDEO III Estate (BWY). Tip from AUTODOC experts:

- Follow the installation sequence.

7 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

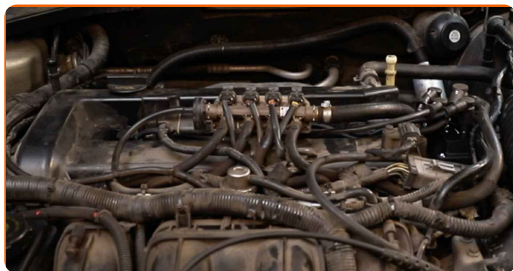

8 Shut off the engine.

9 Install the engine cover and secure it.



AUTODOC recommends:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Replacement: ignition leads – FORD MONDEO III Estate (BWY). Do not use excessive force during installation. This may damage the part.

10 Remove the fender protection cover.

11

Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

IGNITION LEADS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.