



How to change left
engine mounts on **FORD**
Transit Mk6 Minibus
(V347, V348) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

FORD Transit Mk6 Bus (V347, V348, FD, FB, FS, FZ, FC) 2.2 TDCi, FORD Transit Mk6 Bus (V347, V348, FD, FB, FS, FZ, FC) 2.2 TDCi RWD, FORD Transit Mk6 Bus (V347, V348, FD, FB, FS, FZ, FC) 2.4 TDCi

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FORD Transit Mk6 Box (V347, V348, FA) 2.2 TDCi

REPLACEMENT: ENGINE MOUNTS – FORD TRANSIT MK6 MINIBUS (V347, V348). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Torque wrench
- 13 mm socket
- 18 mm socket
- Ratchet wrench
- Power wrench
- Vehicle jack
- Wide wooden block
- Fender cover

[Buy tools](#)

Replacement: engine mounts – FORD Transit Mk6 Minibus (V347, V348).
AUTODOC experts recommend:

- All the work should be carried out with the ignition switched off.

REPLACEMENT: ENGINE MOUNTS – FORD TRANSIT MK6 MINIBUS (V347, V348). RECOMMENDED SEQUENCE OF STEPS:


1 Open the bonnet.

2 Use a fender protection cover to avoid damaging the paintwork and plastic parts of the car.


3 Clean the engine mount fasteners. Use a wire brush. Use WD-40 spray.



4 Unscrew the lower fasteners of the engine mount. Use a 13 mm socket. Use a ratchet wrench.

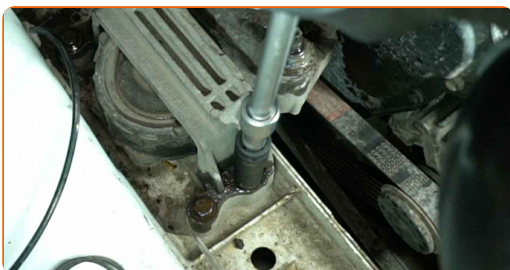

5 Remove the fastening bolts.

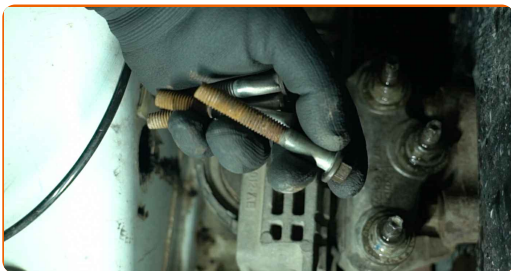

6 Support the engine in the area of the oil pan. Use a jack.


Warning!

- Place a wide wooden block between the jack and engine to prevent the oil pan from being damaged.


7 Unscrew the upper fasteners of the engine mount. Use an 18 mm socket. Use a ratchet wrench.



8 Remove the engine mount.

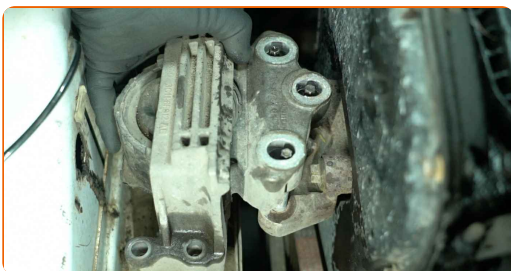

- 9 Clean the mounting seats of the engine mount. Use a wire brush. Use an all-purpose cleaning spray.

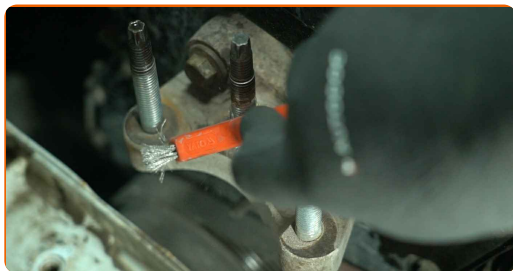


- 10 Install a new engine mount.



- 11 Install the fastening nuts and bolts.



- 12 Tighten the upper fasteners of the engine mount. Use an 18 mm socket. Use a torque wrench. Tightening torque: 115 N·m.

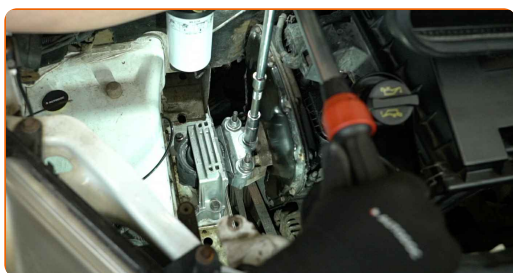


- 13 Remove the jack from under the engine.

Replacement: engine mounts – FORD Transit Mk6 Minibus (V347, V348). Tip:

- Lower the jack smoothly without jerking it to avoid damaging the vehicle assemblies and mechanisms.

14

Tighten the lower fasteners of the engine mount. Use a 13 mm socket. Use a torque wrench. Tightening torque: 70 N·m.

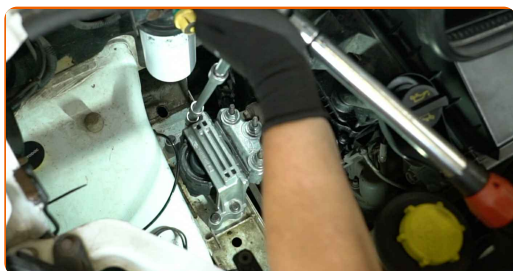

15

Remove the fender cover.

16

Close the bonnet.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING





 GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

ENGINE MOUNTS: A WIDE SELECTION

ⓘ **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2024 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.