




How to change rear
shock absorbers on **VW**
Golf 5 – replacement
guide

VIDEO TUTORIAL

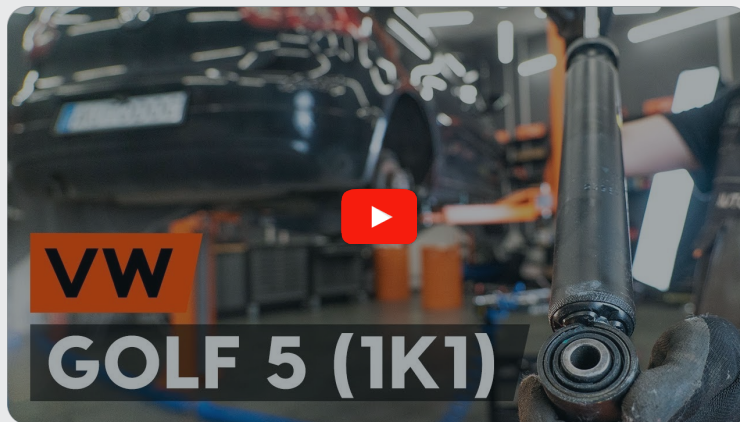

ⓘ Important!

This replacement procedure can be used for:

VW Passat B7 Saloon (362) 1.4 TSI, VW Passat B7 Saloon (362) 1.8 TSI, VW Passat B7 Saloon (362) 2.0 TSI, VW Passat B7 Saloon (362) 1.6 TDI, VW Passat B7 Saloon (362) 2.0 TDI, VW Passat B7 Saloon (362) 2.0 TDI 4motion, VW Passat B7 Saloon (362) 1.4 TSI EcoFuel, VW Passat B7 Variant (365) 1.4 TSI, VW Passat B7 Variant (365) 1.8 TSI, VW Passat B7 Variant (365) 1.6 TDI, VW Passat B7 Variant (365) 2.0 TSI, VW Passat B7 Variant (365) 2.0 TDI, VW Passat B7 Variant (365) 2.0 TDI 4motion, VW Passat B7 Variant (365) 1.4 TSI EcoFuel, VW Touran I (1T3) 1.2 TSI, (+ 156)

The steps may slightly vary depending on the car design.

REPLACEMENT: SHOCK ABSORBERS – VW GOLF 5.
TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16
- Combination spanner #18
- Combination spanner #21
- Drive socket # 10
- Drive socket # 16
- Drive socket # 18
- Drive socket # 21
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Locking pliers
- Vice
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

Replacement: shock absorbers – VW Golf 5. AUTODOC recommends:


- Both shock absorbers of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock absorbers of the rear suspension.
- Warning! Shut down the engine before starting any work – VW Golf 5.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Secure the wheels with chocks.



2 Loosen the wheel mounting bolts. Use wheel impact socket #17.

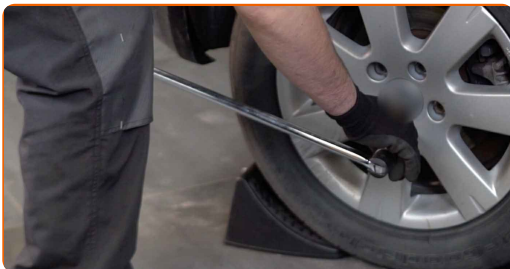

3 Raise the rear of the car and secure on supports.

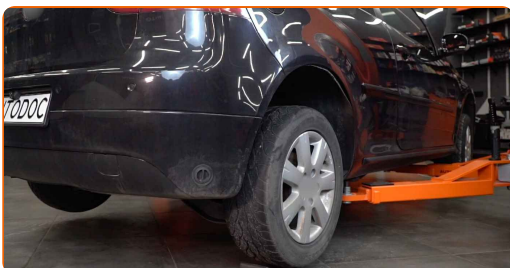

4

Unscrew the wheel bolts.




AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. VW Golf 5


5

Remove the wheel.

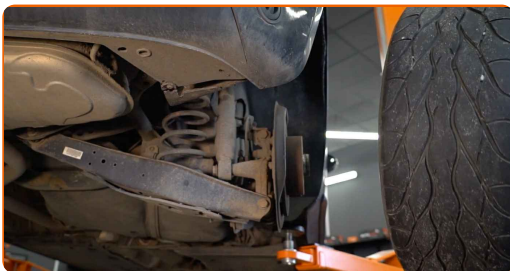

6

Clean all joints of the arm. Use a wire brush. Use WD-40 spray.

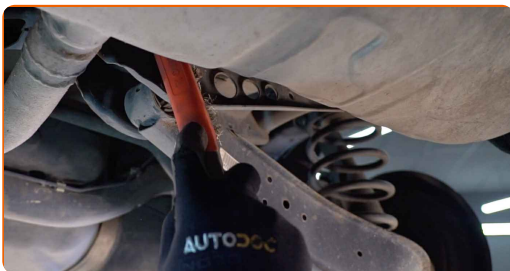

7

Make a mark on the camber adjustment bolt.




- 8 Unscrew the arm fastening to the beam. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.




- 9 Support the arm. Use a hydraulic transmission jack.



- 10 Remove the fastening bolt. Use a crowbar.

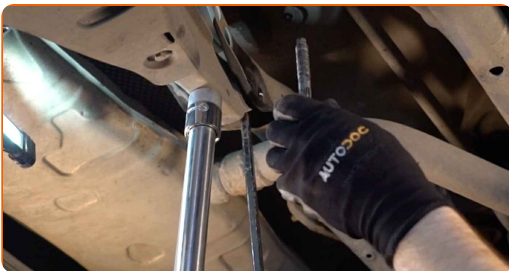

- 11 Remove the support from under the arm.

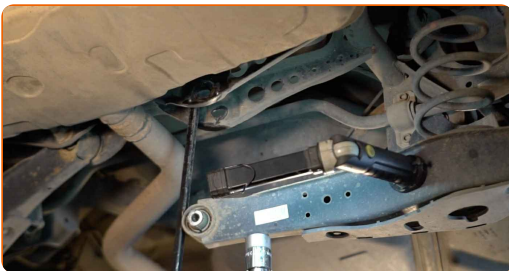

Replacement: shock absorbers – VW Golf 5. AUTODOC experts recommend:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.


12 Take out the spring.




13 Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.



14 Unscrew the lower fastener of the shock absorber. Use a drive socket #21. Use a tap wrench.

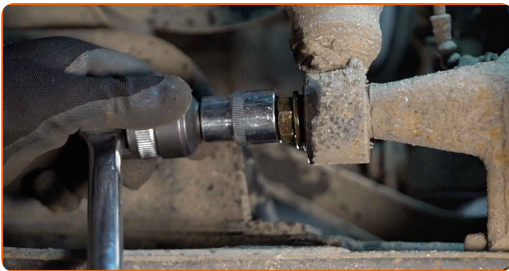


15 Unscrew the upper fastener of the shock absorber. Use a drive socket #10. Use a ratchet wrench.

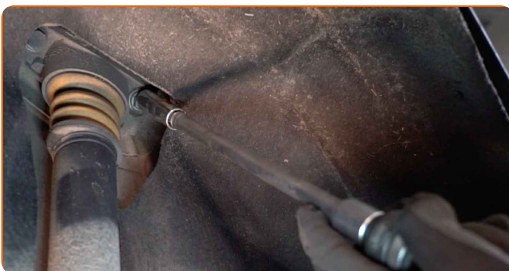


AUTODOC recommends:

- To avoid injuries, hold the shock absorber when undoing the fastening bolts.

16 Remove the shock absorber.

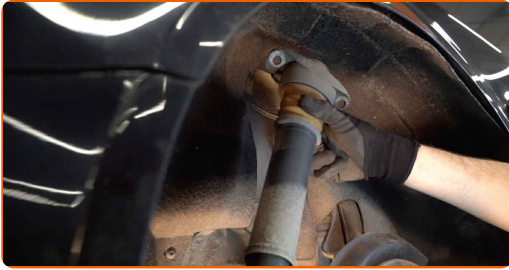


17 Grip the shock absorber in a vice.

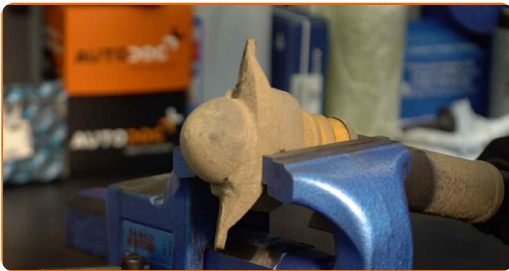


18 Remove the protective cap of the shock absorber mount. Use a crowbar.



19 Clean the shock absorber rod fastener. Use a wire brush. Use WD-40 spray.

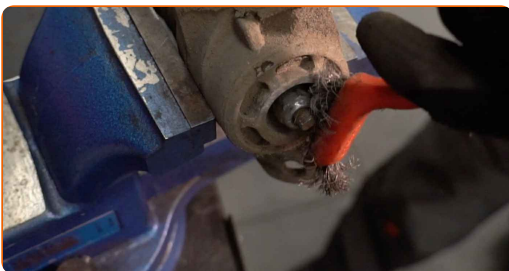

20 Remove the shock absorber piston rod fastening. Use a combination spanner #16. Use locking pliers.

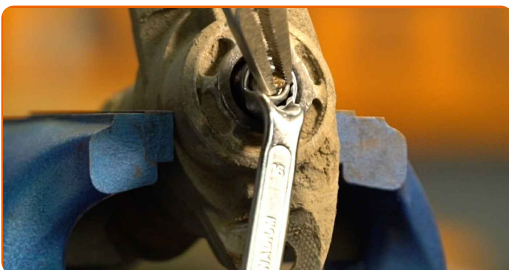

21 Remove the shock absorber mount, boot and bump stop.




Replacement: shock absorbers – VW Golf 5. Tip:

- Examine the shock absorber dust cap and the bump stop. Replace them if necessary.
- Before installing a new shock absorber you should pump it manually 3-5 times.

22 Install the mount, boot and bump stop onto a new shock absorber.



23 Screw the shock strut piston rod upper fastening. Use a combination spanner #16. Use a drive socket #16. Use locking pliers. Use a torque wrench. Tighten it to 25 Nm torque.

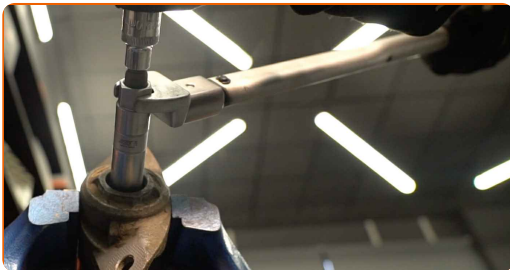

24

Treat the shock absorber rod fastener. Use copper grease.



25

Install the protective cap of the shock absorber mount.




26

Release the vice and take out the shock absorber.



27


Place the shock absorber in the wheel arch and secure it.

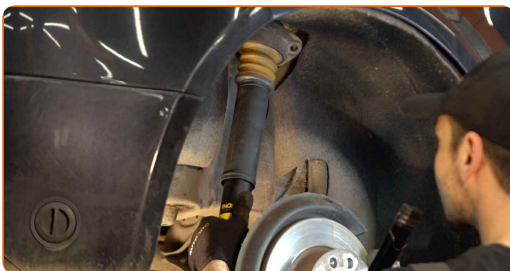


Replacement: shock absorbers – VW Golf 5. Tip from AUTODOC:

- To avoid injury, hold the shock absorber cautiously tight when screwing in the fastening bolts.


28 Screw the upper fastener of the shock absorber. Use a drive socket #10.

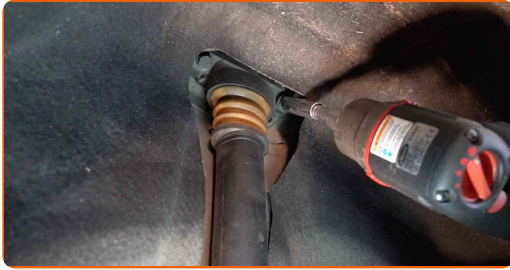

29 Tighten the lower fastener of the shock absorber. Use a combination spanner #21. Use a drive socket #21. Use a torque wrench. Tighten it to 130 Nm torque.

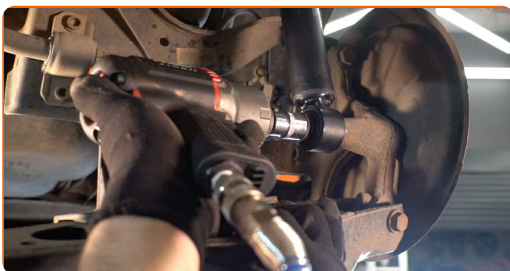


30 Install the coil spring together with the rubber mounts into the mounting seats. Use a crowbar.

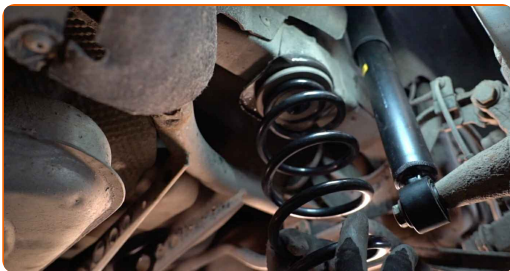

31 Support the arm. Use a hydraulic transmission jack.



32 Install the fastening bolt.

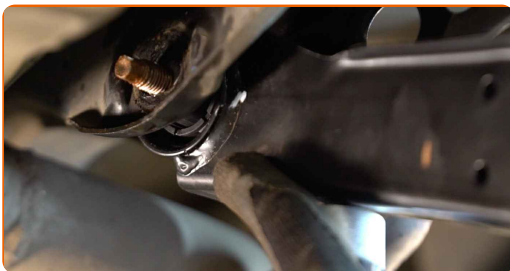


Replacement: shock absorbers – VW Golf 5. AUTODOC experts recommend:

- Adjust the position of the alignment bolt according to the mark.

33

Remove the support from under the arm.

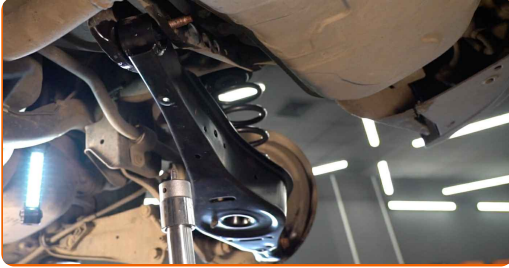


AUTODOC recommends:

- Replacement: shock absorbers – VW Golf 5. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

34

Screw in the fastener connecting the control arm to the rear subframe. Use a combination spanner #18. Use a drive socket #18.

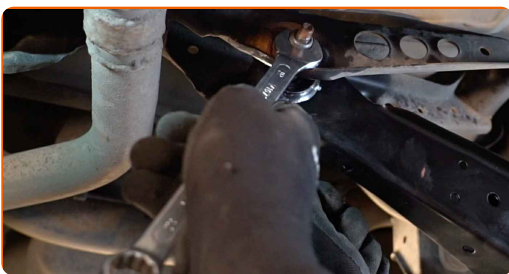

35 Support the arm. Use a hydraulic transmission jack.




36 Tighten the fastener connecting the control arm to the rear subframe. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 95 Nm torque.



37 Tighten the top shock absorber fastening. Use a drive socket #10. Use a torque wrench. Tighten it to 50 Nm torque.



38 Remove the support from under the arm.

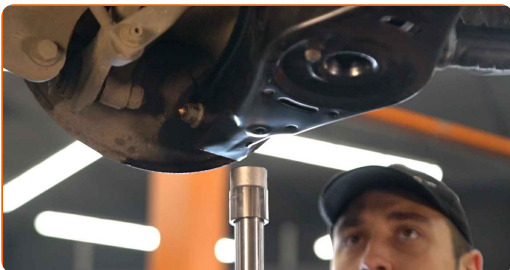

Replacement: shock absorbers – VW Golf 5. AUTODOC recommends:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.

39

Treat the shock absorber fasteners. Treat all joints of the arm. Use copper grease.



40

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



41

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: shock absorbers – VW Golf 5. After applying the spray, wait a few minutes.


42 Install the wheel.




Replacement: shock absorbers – VW Golf 5. Professionals recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

43 Screw in the wheel bolts. Use wheel impact socket #17.

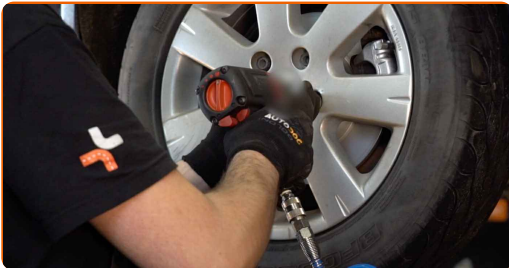


44 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 nm torque.

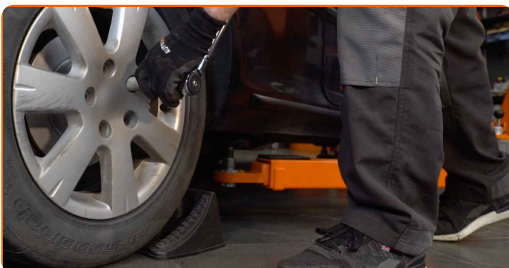

45

Remove the jacks and chocks.

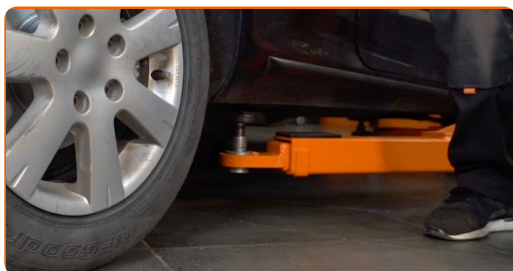

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

SHOCK ABSORBERS: A WIDE SELECTION

CHOOSE CAR PARTS FOR VW GOLF 5

SHOCK ABSORBERS FOR VW: BUY NOW

SHOCK ABSORBERS FOR VW GOLF 5: THE BEST DEALS & OFFERS

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.