




How to change front anti
roll bar links on **HONDA**
CIVIC VIII Saloon (FD,
FA) – replacement guide

SIMILAR VIDEO TUTORIAL

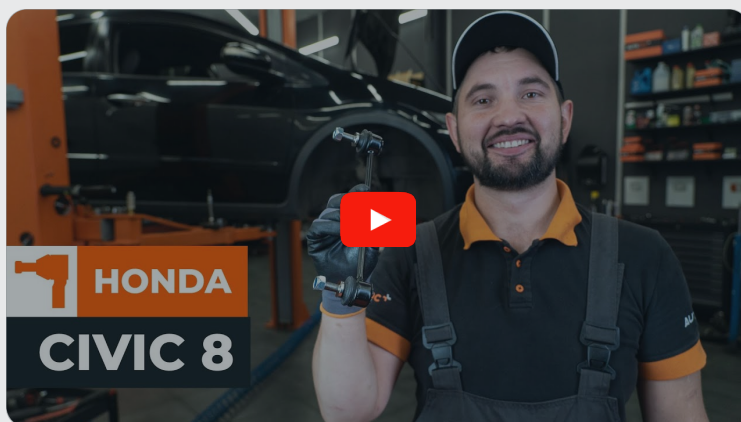

This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

HONDA CIVIC VIII Saloon (FD, FA) 1.8 EXS Flex, HONDA CIVIC VIII Saloon (FD, FA) 1.6, HONDA CIVIC VIII Saloon (FD, FA) 1.8 (FD1, FD7)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: HONDA CIVIC VIII Hatchback (FN, FK) 1.8 (FN1, FK2)

REPLACEMENT: ANTI ROLL BAR LINKS – HONDA CIVIC VIII SALOON (FD, FA). TOOLS YOU MIGHT NEED:

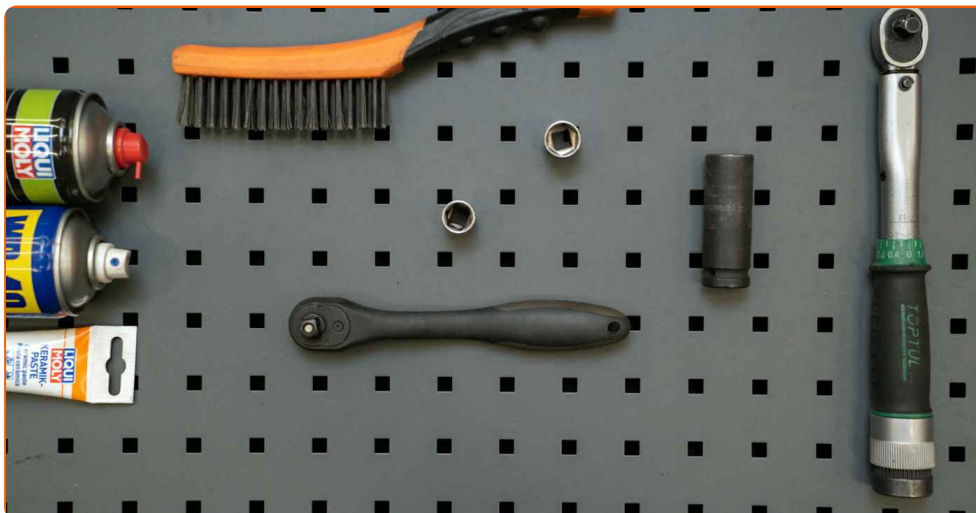

- Wire brush
- WD-40 spray
- Brake cleaner
- Ceramic grease
- Torque wrench
- Drive socket # 14
- Drive socket # 17
- Wheel impact socket #19
- Ratchet wrench
- Tap wrench
- Wheel chock

Buy tools

AUTODOC recommends:

- Replace the stabiliser links on HONDA CIVIC VIII Saloon (FD, FA) in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: ANTI ROLL BAR LINKS – HONDA CIVIC VIII SALOON (FD, FA). USE THE FOLLOWING PROCEDURE:

1 Secure the wheels with chocks.

2 Loosen the wheel bolts. Use wheel impact socket #19. Use a tap wrench.



3 Raise the car.

Replacement: anti roll bar links – HONDA CIVIC VIII Saloon (FD, FA). AUTODOC experts recommend:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

4 Unscrew the wheel bolts.



AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. HONDA CIVIC VIII Saloon (FD, FA)

5 Remove the wheel.



6 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.




7 Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #14. Use a ratchet wrench.




- 8 Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #14. Use a ratchet wrench.



- 9 Remove the stabiliser link.

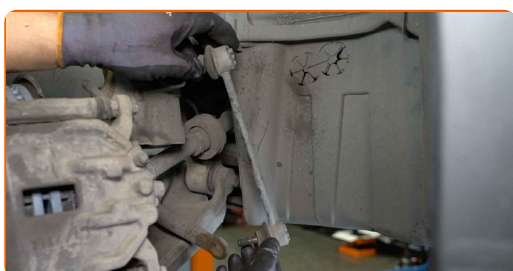

- 10 Clean the mounting seats of the stabiliser link. Use a wire brush.

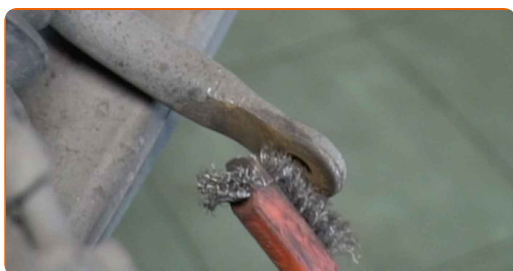


- 11 Install a new stabiliser link and tighten the fasteners.



- 12** Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 35 Nm torque.




- 13** Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #17. Use a torque wrench. Tighten it to 35 Nm torque.

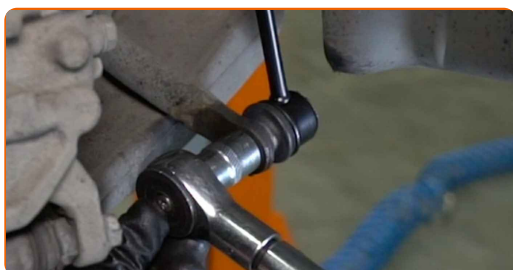

- 14** Clean the wheel rim mounting seat. Use a wire brush.



- 15** Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.

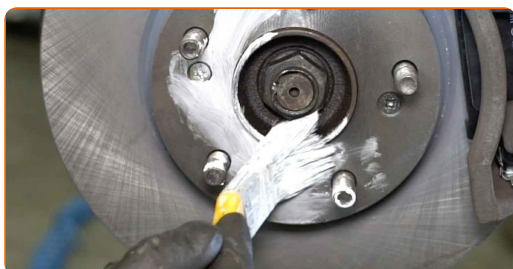

16

Clean the brake disk surface. Use a brake cleaner.



17

Install the wheel.




Replacement: anti roll bar links – HONDA CIVIC VIII Saloon (FD, FA). AUTODOC recommends:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

18


Screw in the wheel bolts. Use wheel impact socket #19. Use a ratchet wrench.

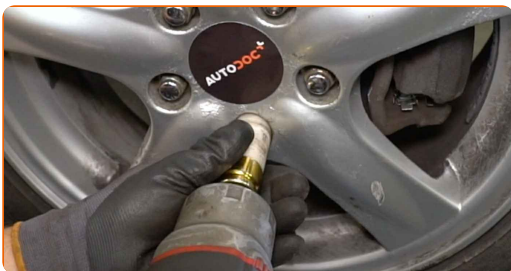

- 19 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 108 Nm torque.



- 20 Remove the jacks and chocks.

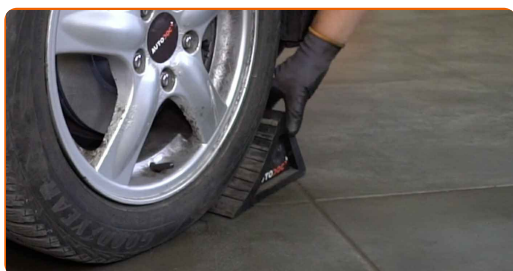

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

ANTI ROLL BAR LINKS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.