



How to change front anti
roll bar links on **VW Golf**
3 – replacement guide

VIDEO TUTORIAL




i Important!

This replacement procedure can be used for:

VW Golf II Hatchback (19E, 1G1) 1.3, VW Golf II Hatchback (19E, 1G1) 1.6, VW Golf II Hatchback (19E, 1G1) 1.8, VW Golf II Hatchback (19E, 1G1) 1.8 i CAT, VW Golf II Hatchback (19E, 1G1) 1.8 GTI CAT, VW Golf II Hatchback (19E, 1G1) 1.8 GTI, VW Golf II Hatchback (19E, 1G1) 1.8 GTI 16V, VW Golf II Hatchback (19E, 1G1) 1.6 D, VW Golf II Hatchback (19E, 1G1) 1.6 TD, VW Jetta Mk2 (19E, 1G2, 165) 1.3, VW Jetta Mk2 (19E, 1G2, 165) 1.6, VW Jetta Mk2 (19E, 1G2, 165) 1.8, VW Jetta Mk2 (19E, 1G2, 165) 1.8 CAT, VW Jetta Mk2 (19E, 1G2, 165) 1.8 16V, VW Jetta Mk2 (19E, 1G2, 165) 1.6 D, (+ 30)

The steps may slightly vary depending on the car design.

REPLACEMENT: ANTI ROLL BAR LINKS – VW GOLF 3. LIST OF THE TOOLS YOU'LL NEED:

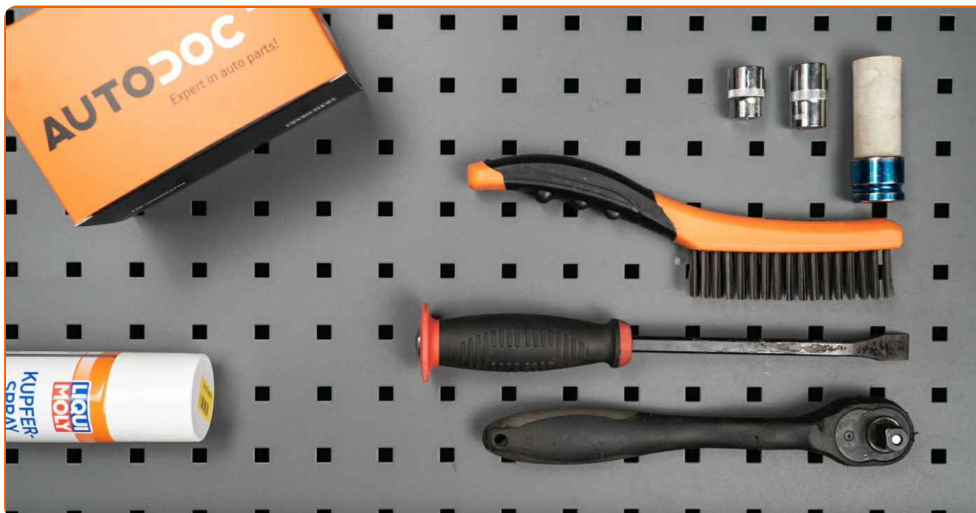

- Wire brush
- WD-40 spray
- Copper grease
- Drive socket # 13
- Drive socket # 19
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Crow bar
- Wheel chock

[BUY TOOLS](#)

AUTODOC recommends:

- Replace the stabiliser links on VW Golf 3 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: ANTI ROLL BAR LINKS – VW GOLF 3. TAKE THE FOLLOWING STEPS:


1

Secure the wheels with chocks.




2

Loosen the wheel mounting bolts. Use wheel impact socket #17.

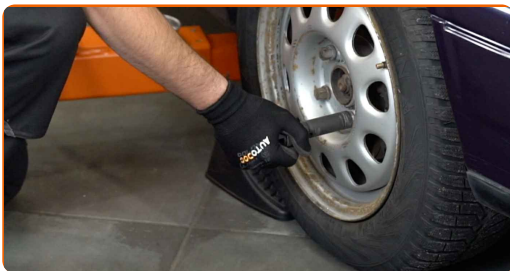


3

Raise the front of the car and secure on supports.

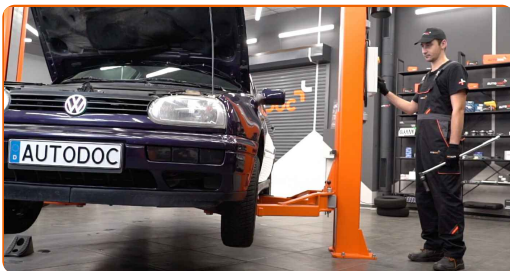

4

Unscrew the wheel bolts.

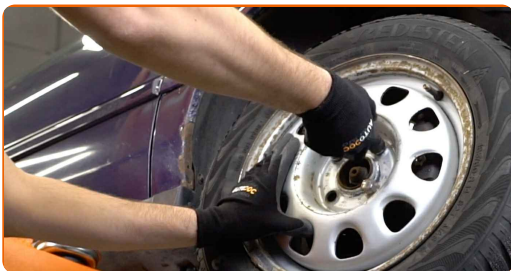


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. VW Golf 3


5

Remove the wheel.

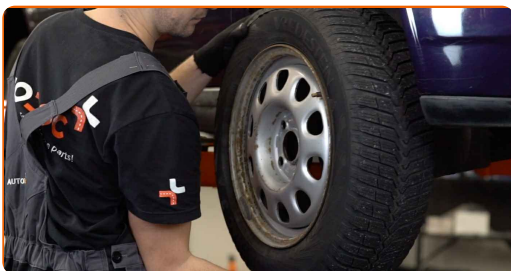


6

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

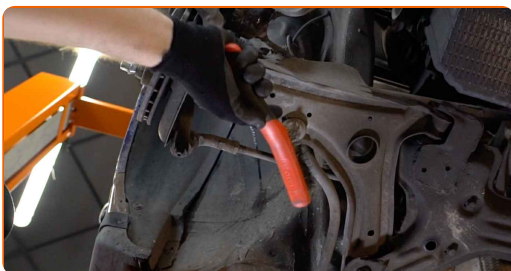


7

Unscrew the fastener connecting the stabilizer bar with the control arm. Use a drive socket #13. Use a ratchet wrench.

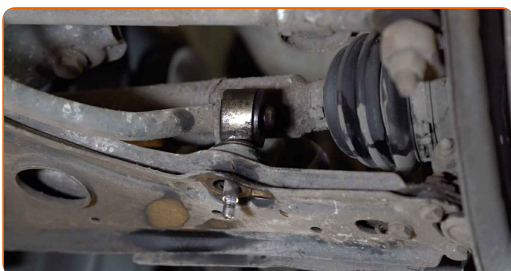

8

Remove the stabilizer rod. Use a crowbar.

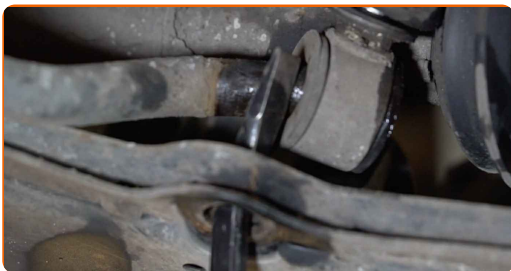


Replacement: anti roll bar links – VW Golf 3. AUTODOC recommends:

- Examine stabiliser bushes. Replace them if needed.


9

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

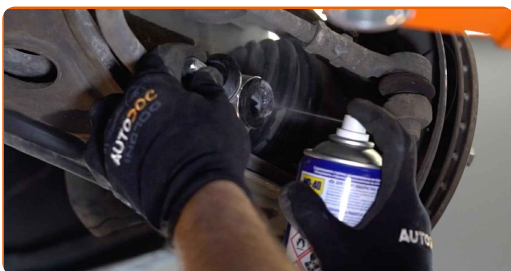


10

Install a new rod, tighten the fasteners. Use a crowbar.

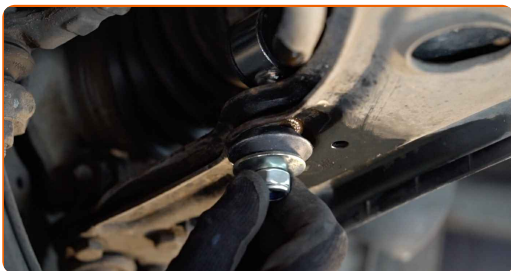


11

Tighten the fastener connecting the stabilizer bar with the control arm. Use a drive socket #19. Use a torque wrench. Tighten it to 35 Nm torque.

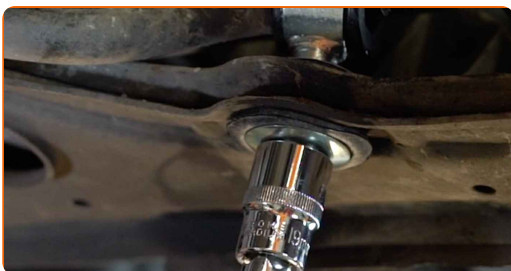


12

Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.

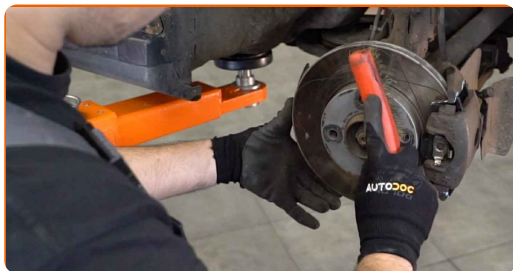

13

Install the wheel.

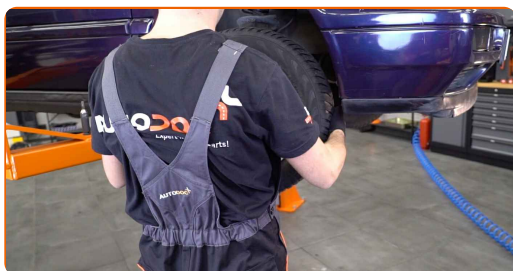

AUTODOC recommends:


- Important! Hold the wheel while screwing in the fastening bolts. VW Golf 3

14

Screw in the wheel bolts. Use wheel impact socket #17.

15

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 110 Nm torque.

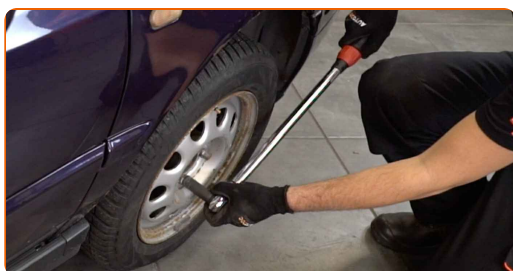

16

Remove the jacks and chocks.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

ANTI ROLL BAR LINKS: A WIDE SELECTION

CHOOSE CAR PARTS FOR VW GOLF 3

ANTI ROLL BAR LINKS FOR VW: BUY NOW

ANTI ROLL BAR LINKS FOR VW GOLF 3: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.