



How to change front anti  
roll bar links on **Renault  
Megane 2** – replacement  
guide

## VIDEO TUTORIAL



### Important!

This replacement procedure can be used for:

RENAULT Megane II Sport Tourer (KM) 1.9 dCi, RENAULT Kangoo II Express (FW) Z.E., RENAULT Kangoo II Be Bop (KW) 1.5 dCi, RENAULT Megane II Saloon (LM) 1.6 Hi-Flex, RENAULT Kangoo II Express (FW) 1.5 dCi 75, RENAULT Kangoo II Express (FW) 1.5 dCi 110, RENAULT Scénic II (JM) 1.6 Hi-Flex, RENAULT Kangoo II / Grand Kangoo (KW) 1.5 dCi 110, RENAULT Megane II Hatchback (BM, CM) 1.4 16V, RENAULT Megane II Hatchback (BM, CM) 1.6 16V, RENAULT Megane II Hatchback (BM, CM) 2.0 16V, RENAULT Megane II Hatchback (BM, CM) 1.5 dCi, RENAULT Megane II Hatchback (BM, CM) 1.9 dCi, RENAULT Scénic II (JM) 1.9 dCi, RENAULT Scénic II (JM) 2.0, (+ 84)

The steps may slightly vary depending on the car design.

REPLACEMENT: ANTI ROLL BAR LINKS – RENAULT  
MEGANE 2. TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Combination spanner #15
- Combination spanner #17
- Drive socket # 14
- HEX bit No.H6
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Wheel chock


**BUY TOOLS**

AUTODOC recommends:


- Replace the stabiliser links on Renault Megane 2 in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- All work should be done with the engine stopped.

**REPLACEMENT: ANTI ROLL BAR LINKS – RENAULT MEGANE 2.  
TAKE THE FOLLOWING STEPS:**

**1** Secure the wheels with chocks.

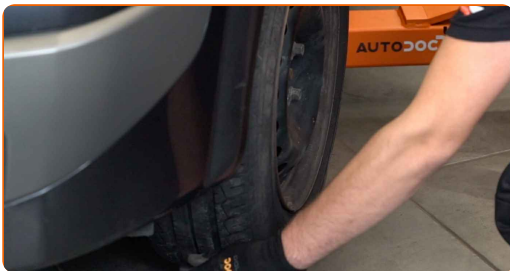

**2** Loosen the wheel mounting bolts. Use wheel impact socket #19.

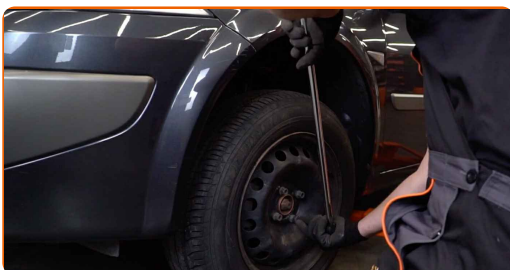


**3** Raise the front of the car and secure on supports.



4

Unscrew the wheel bolts.

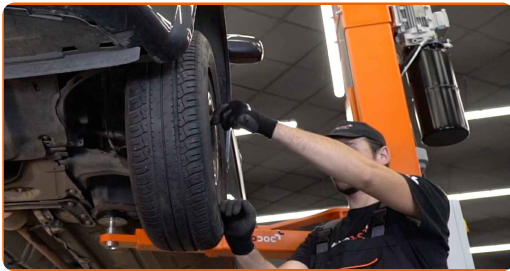

AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Renault Megane 2


5

Remove the wheel.



6

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

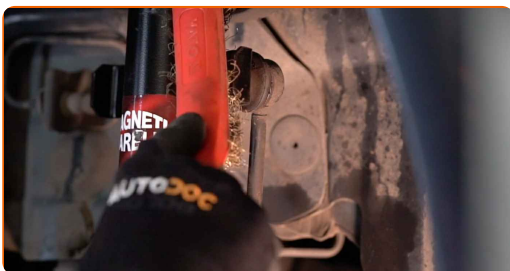

- 7 Unscrew the fastener connecting the stabilizer link to the shock strut. Use HEX No.H6. Use a combination spanner #17. Use a ratchet wrench.



- 8 Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use HEX No.H6. Use a combination spanner #17. Use a ratchet wrench.



- 9 Remove the stabilizer rod.




### Replacement: anti roll bar links – Renault Megane 2. Tip:

- Examine stabiliser bushes. Replace them if needed.

10 Install a new rod, tighten the fasteners.




11 Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #14. Use a combination spanner #15. Use a torque wrench. Tighten it to 44 Nm torque.

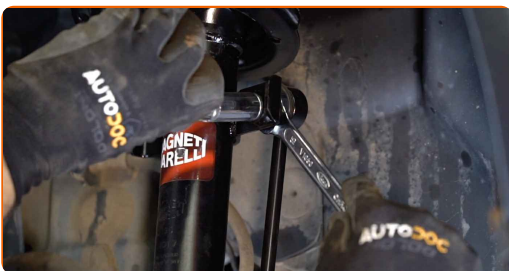

12 Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #14. Use a combination spanner #15. Use a torque wrench. Tighten it to 44 Nm torque.




13 Treat all joints of the stabiliser link. Use copper grease.

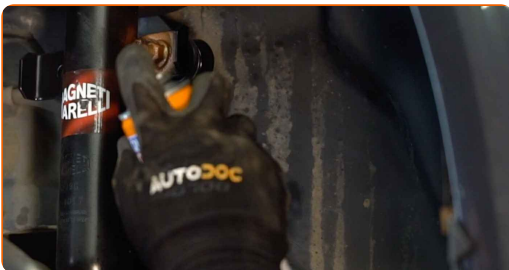

14

Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.

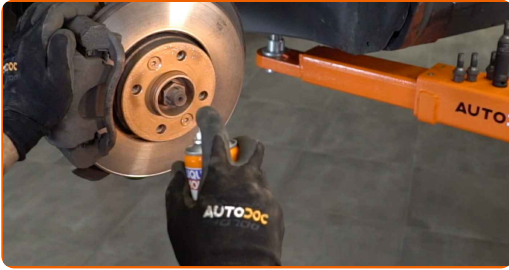

15

Install the wheel.




Replacement: anti roll bar links – Renault Megane 2. AUTODOC experts recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.


16

Screw in the wheel bolts. Use wheel impact socket #19.

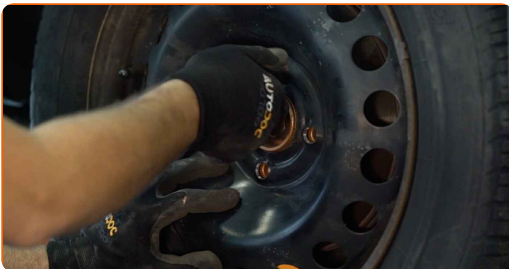




- 17** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 110 Nm torque.

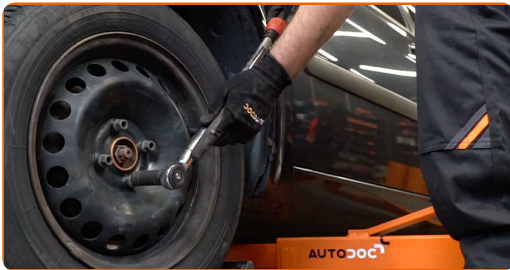

- 18** Remove the jacks and chocks.

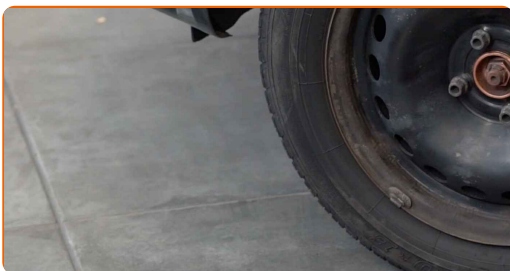

**WELL DONE!**

**VIEW MORE TUTORIALS**

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

**AUTODOC+**

GET IT ON  
Google Play

Download on the  
App Store

Download

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR RENAULT**

**ANTI ROLL BAR LINKS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR RENAULT MEGANE 2**

**ANTI ROLL BAR LINKS FOR RENAULT: BUY NOW**

**ANTI ROLL BAR LINKS FOR RENAULT MEGANE 2: THE BEST  
DEALS & OFFERS**

### **ⓘ DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.