



How to change tailgate  
struts on **Renault  
Megane Scenic** –  
replacement guide

## VIDEO TUTORIAL




### **ⓘ Important!**

This replacement procedure can be used for:

RENAULT Megane Scenic (JA) 1.4 i, RENAULT Megane Scenic (JA) 1.6 i, RENAULT Megane Scenic (JA) 1.6 e, RENAULT Megane Scenic (JA) 2.0 i, RENAULT Megane Scenic (JA) 1.9 dT, RENAULT Megane Scenic (JA) 1.9 D, RENAULT Megane Scenic (JA) 1.9 dTi, RENAULT Megane Scenic (JA) 1.6 16V, RENAULT Scénic I (JA0/1, FA0) 1.4 16V, RENAULT Scénic I (JA0/1, FA0) 2.0 16V, RENAULT Scénic I (JA0/1, FA0) 1.9 dTi, RENAULT Scénic I (JA0/1, FA0) 1.9 dCi, RENAULT Scénic I (JA0/1, FA0) 1.8 16V, RENAULT Scénic I (JA0/1, FA0) 1.6, RENAULT Megane Scenic (JA) 2.0 RXE 4x4, (+ 5)

The steps may slightly vary depending on the car design.

REPLACEMENT: TAILGATE STRUTS – RENAULT  
MEGANE SCENIC. LIST OF THE TOOLS YOU'LL NEED:

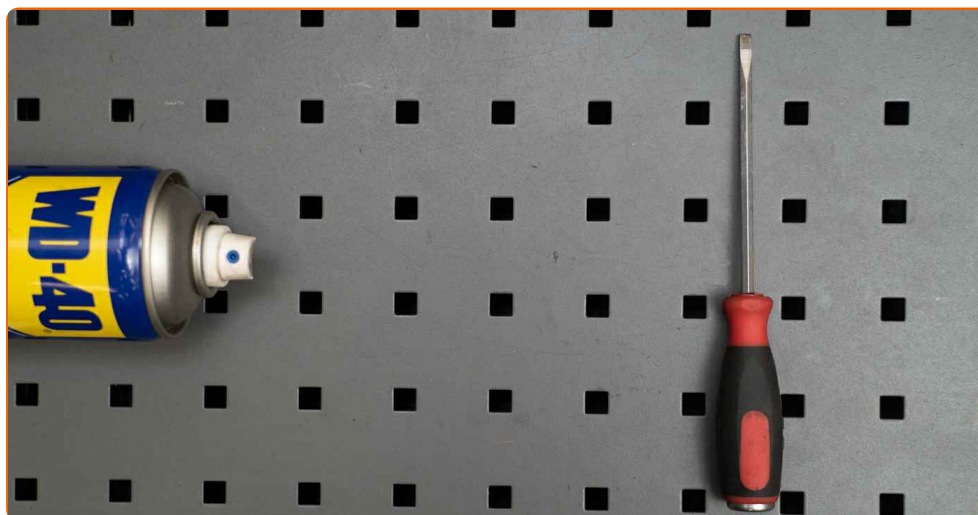

- WD-40 spray
- Flat Screwdriver
- Hydraulic transmission jack

**BUY TOOLS**

Replacement: tailgate struts – Renault Megane Scenic. AUTODOC experts recommend:

- Right and left gas struts of the boot lid should be replaced simultaneously.
- The replacement procedure is identical for the right and left gas struts of the boot lid.
- Please note: all work on the car – Renault Megane Scenic – should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Open the boot lid.



2

Support the boot lid. Use a hydraulic transmission jack.

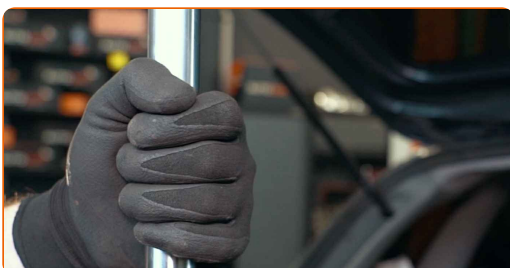

3

Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.



### Replacement: tailgate struts – Renault Megane Scenic. Tip:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.

4

Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.



### AUTODOC recommends:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.

5

Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.



Replacement: tailgate struts – Renault Megane Scenic. AUTODOC recommends:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.

6

Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.



AUTODOC recommends:

- To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.

7 Remove the boot lid gas strut.



8 Clean the mounting seats of the boot strut. Use WD-40 spray.



9 Install the new boot lid gas strut.




Replacement: tailgate struts – Renault Megane Scenic. Tip from AUTODOC:

- To avoid any injuries, be sure to hold the boot lid while installing the gas strut.


10 Snap on the circlip connecting the gas strut to the car body.



11 Snap on the circlip connecting the gas strut to the boot lid.

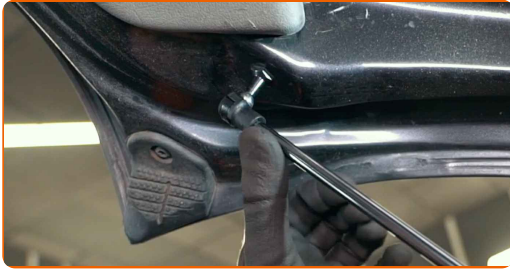


12 Snap on the circlip connecting the gas strut to the boot lid.

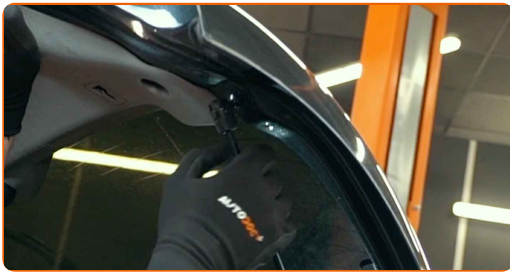

13 Snap on the circlip connecting the gas strut to the car body.



14 Remove the hydraulic transmission jack.

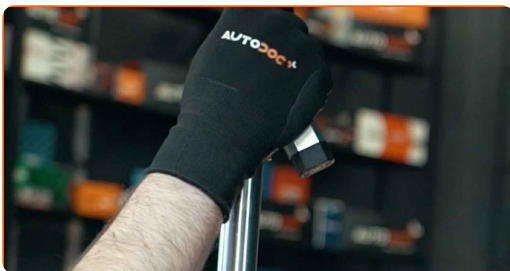


**Replacement: tailgate struts – Renault Megane Scenic. Tip:**

- Check the working condition of the boot lid gas springs after they are installed.



15

Close the lid of the luggage compartment.

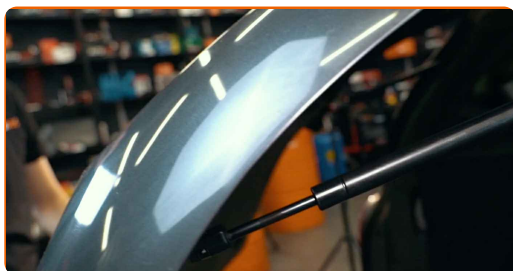**WELL DONE!** [VIEW MORE TUTORIALS](#)

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

**AUTODOC+**

GET IT ON  
Google Play

Download on the  
App Store

Download

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR RENAULT**

**TAILGATE STRUTS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR RENAULT MEGANE SCENIC**

**TAILGATE STRUTS FOR RENAULT: BUY NOW**

**TAILGATE STRUTS FOR RENAULT MEGANE SCENIC: THE  
BEST DEALS & OFFERS**

### **ⓘ DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.