



How to change glass for  
wing mirror on  
**MERCEDES-BENZ CLK**  
**Convertible (A208)** –  
replacement guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### **ⓘ Important!**


This replacement procedure can be used for:

MERCEDES-BENZ CLK Convertible (A208) 200 2.0 Kompressor (208.445),  
 MERCEDES-BENZ CLK Convertible (A208) 200 2.0 (208.435), MERCEDES-BENZ CLK  
 Convertible (A208) 230 2.3 Kompressor (208.447), MERCEDES-BENZ CLK Convertible  
 (A208) 320 3.2 (208.465), MERCEDES-BENZ CLK Convertible (A208) 430 4.3  
 (208.470)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part  
 on: MERCEDES-BENZ A-Class (W168) A 170 CDI (168.009, 168.109)

REPLACEMENT: GLASS FOR WING MIRROR –  
MERCEDES-BENZ CLK CONVERTIBLE (A208). LIST OF  
THE TOOLS YOU'LL NEED:

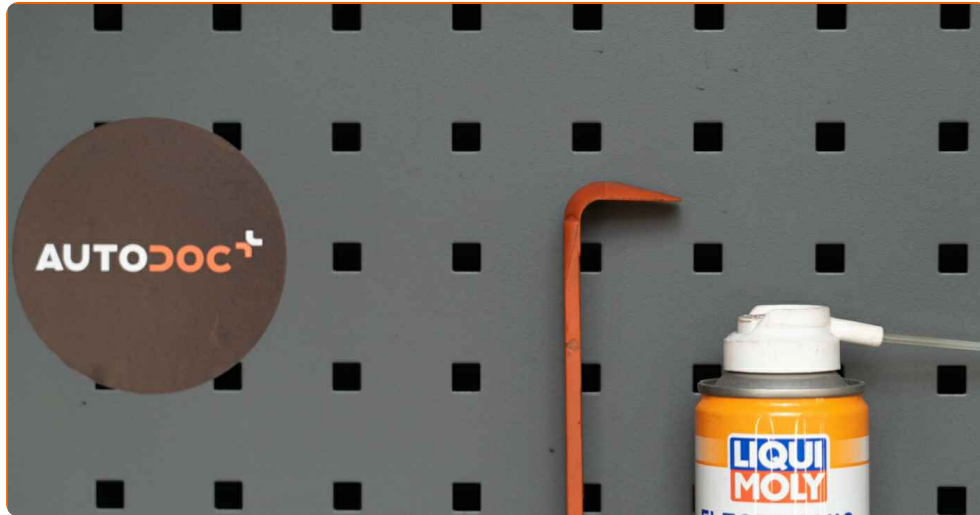

- Electronic spray
- Flat Screwdriver
- Plastic trim tool

**Buy tools**

Replacement: glass for wing mirror – MERCEDES-BENZ CLK Convertible (A208). Tip from AUTODOC:


- The replacement procedure is identical for the right and left side mirror glass.
- All work should be done with the engine stopped.

**REPLACEMENT: GLASS FOR WING MIRROR – MERCEDES-BENZ CLK CONVERTIBLE (A208). TAKE THE FOLLOWING STEPS:**

**1** Tilt the mirror glass out of the housing.



**2** Carefully release the mirror glass from its attachment.

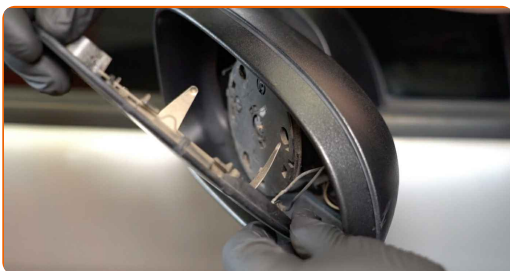


**3** Remove the mirror glass.

**AUTODOC recommends:**

- Replacement: glass for wing mirror – MERCEDES-BENZ CLK Convertible (A208). Do not use excessive force when removing the part as this may damage it.


4

Detach the mirror heating connectors.

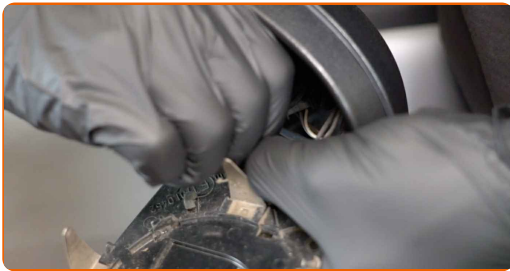

5

Treat the mirror heating connectors. Use dielectric grease.

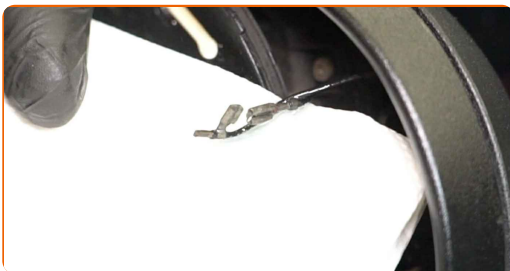


6

Release the mirror glass retainer clip. Use a flat screwdriver.



7

Attach the mirror heating connectors.

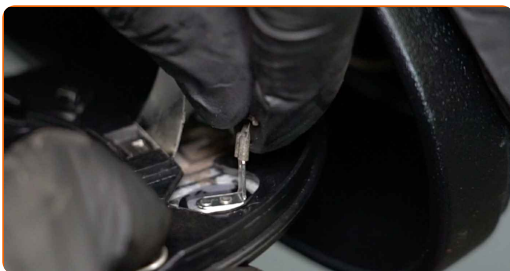

8

Install the new mirror glass.




**AUTODOC recommends:**

- Replacement: glass for wing mirror – MERCEDES-BENZ CLK Convertible (A208). To avoid damaging the part during installation, do not use excessive force.
- Make sure the mirror glass is positioned correctly. It should be aligned with the locking tabs on the housing.

9

Attach the mirror glass retainer clip. Use a plastic trim tool. Use a flat screwdriver.

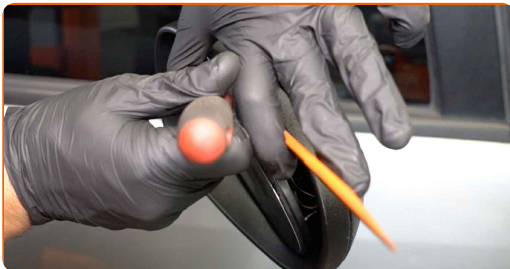

10

Clean the mirror glass.



11

Switch on the ignition. This is necessary in order to make sure that the component operates properly.

12

Switch off the ignition.

**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**

**AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**GLASS FOR WING MIRROR: A WIDE SELECTION**

### **(i) DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.