- AUTODOC CLUB

How to change front windshield wipers on **MERCEDES-BENZ E-Class Convertible (A207)** – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for:


MERCEDES-BENZ E-Class Convertible (A207) E 350 CDI, MERCEDES-BENZ E-Class Convertible (A207) E 300 (207.455), MERCEDES-BENZ E-Class Convertible (A207) E 350 (207.459), MERCEDES-BENZ E-Class Convertible (A207) E 500 (207.473), MERCEDES-BENZ E-Class Convertible (A207) E 350 (207.356), MERCEDES-BENZ E-Class Convertible (A207) E 220 CDI / BlueTEC / d (207.402, 207.401), MERCEDES-BENZ E-Class Convertible (A207) E 250 CDI / BlueTEC / d (207.403, 207.404), MERCEDES-BENZ E-Class Convertible (A207) E 350 CDI (207.422), MERCEDES-BENZ E-Class Convertible (A207) E 200 CGI (207.448), MERCEDES-BENZ E-Class Convertible (A207) E 250 CGI (207.447), MERCEDES-BENZ E-Class Convertible (A207) E 250 CGI (207.447), MERCEDES-BENZ E-Class Convertible (A207) E 250 CGI (207.447), MERCEDES-BENZ E-Class Convertible (A207) E 350 BlueTEC (207.426), MERCEDES-BENZ E-Class Convertible (A207) E 350 BlueTEC (207.426), MERCEDES-BENZ E-Class Convertible (A207) E 350 BlueTEC (207.426), MERCEDES-BENZ E-Class Convertible (A207) E 200 (207.434), (+ 6)

The steps may slightly vary depending on the car design.

Please note that this tutorial was created based on the replacement procedure for this car part on a car with a similar design.

This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ E-Class Saloon (W210) E 200 (210.035)


႐ြံ

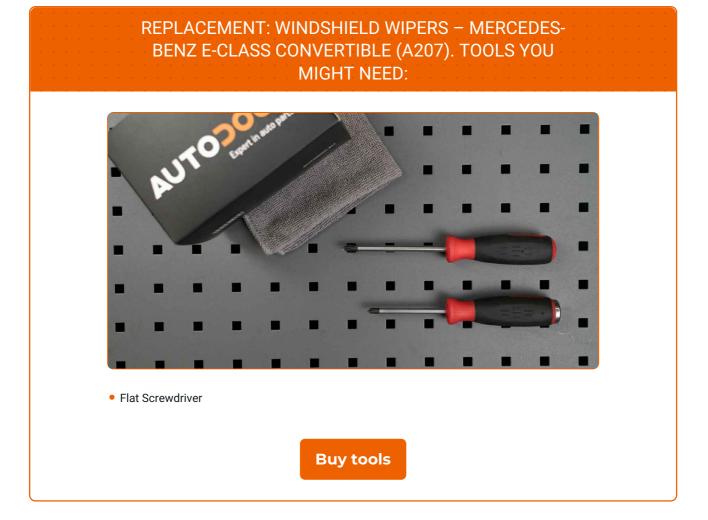

-

O



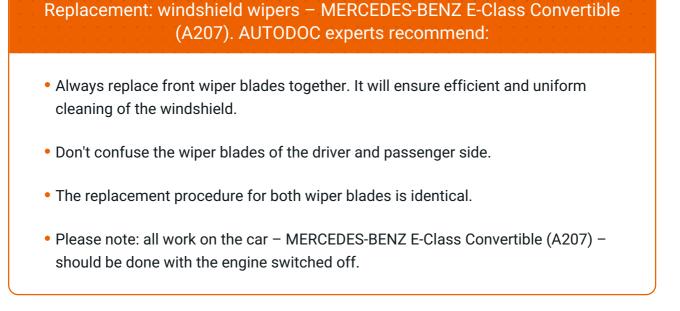

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Prepare the new windscreen wipers.



2

Pull the wiper arm away from the glass surface until it stops.





3

Press the clip. Use a flat screwdriver.



4

Remove the blade from the wiper arm.



Replacement: windshield wipers – MERCEDES-BENZ E-Class Convertible (A207). Tip from AUTODOC:


 When replacing the wiper blade, take caution to prevent the spring-loaded wiper arm from hitting the glass.



Install the new wiper blade and carefully press the wiper arm down to the glass. Use a flat screwdriver.



+ AUTODOC CLUB

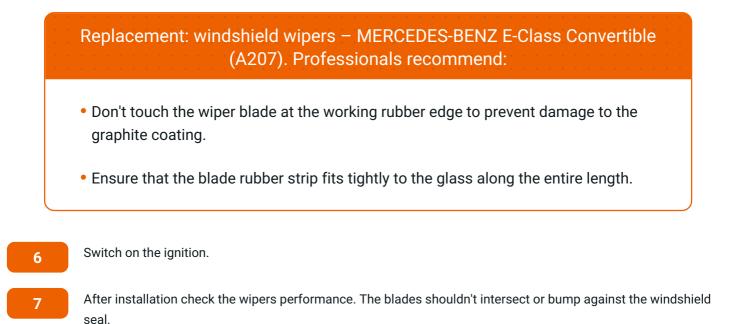



രീ



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

WINDSHIELD WIPERS: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.